

SM03 Operation Manual

1. Installation

Install SM03 module on target system. Target should have a connector that can match with SM03 signal interface connector mechanically and electrically.

2. Power on

Signal interface connector has power input pin. DC voltage power is supplied through this power input pin.

3. Source signal input

Signal interface connector has input for source signal that is transmitted through RF communication by SM03.

4. Transmitter switch

SM03 has transmitter switch. If this switch is ON, source signal is transmitted by RF communication.

5. RF signal reception

When SM03 receives predefined RF signal, status LED blinks. Received signal is output to target system through signal interface connector.