INSTRUCTION MANUAL

- I Main Function
- 1. Four-kind weather forecast: sunny, slightly cloudy, cloudy, and rainy
- 2. Indoor temperature and humidity measurement
- 3. RF outdoor temperature: Accept 3 different RF symbols at the same time.
- 4. Week displays in 7 languages: English, German, French, Italian, Spanish, Dutch, Denish
- 5. Indication for environment comfort.
- 6. Time/Calendar/Alarm/Snooze
- 7. Moon Phase.

II. Installation Instruction

- Insert 2 pcs AAA (1.5V) battery into the item, then LCD Screen shows full display, after 5 seconds, it enter original state with voice "beep", automatic measure indoor temperature/ humidity, and receive outdoor temperature.
- 2. Insert 2 pcs AAA (1.5V) battery into the receiver, then after 3 seconds, receiver will measure temperature and send the data to item via RF symbols.

III. Operation Instruction

- 1. Time and Calendar setting
- ① Under normal mode, Press "TIME" key for 2 seconds to enter time setting mode;
- ② Under time setting mode, Press "SET" key Repeatedly, into following settings in sequence: Year →month →day →Language →hour →minute →Time zone→exit
- ③ When the setted subject flashing, press "UP" or "DOWN" to adjust above settings. Hold the key to increase/decrease values quickly; Press "SET" key to confirm the setting, then enter next subject.
- Without any effect handling more than 8 seconds, it returns from setting automatically.
- 2. Alarm setting.
- ① Under normal mode, Press "ALARM" key to turn on/off the alarm; Hold this key for 2 seconds to enter alarm setting mode.
- ② Under alarm setting mode, Press "ALARM" key Repeatedly, into following settings in sequence: hour → minute → exit.
- ③ When the setted subject flashing, press "UP" or "DOWN" to adjust above settings. Hold the key to increase/decrease values quickly; Press "ALARM" key to confirm the setting, then enter next subject.
- Without any effect handling more than 8 seconds, it returns from setting automatically.
- (5) When the alarm is working, press "SNZ" key into snooze mode for 5 min. press any key to turn off alarm and snooze.
- 3. Receive Outdoor Temperature
 - Item measure outdoor temperature via RF symbol, and aslo can receive temperature information from 3 channels.
- ① Under normal mode, press "CHANNEL" key to switch view outdoor temperature between CH1 --> CH2--> CH3 --> CH1 .
- ② Under normal mode, Press "Channel" Key for 2 Seconds, clear all current register channel, and register again
- ③ If one channel not detector signal in 60 minute, channel value will show "--.-", then auto register still receive signal
- ④ On the RF symbol, can choose channel "1""2""3"; Press "TX" key, can send out temperature data to item constrainedly. Press "°C/°F" key to switch the temperature units between °C and °F on RF symbol.
- 4. Weather forecast
- ① Weather forecast indicates the weather trend in 24 hours.
- ② Four-kinds weather forecast: sunny, slightly cloudy, cloudy, rainy.
- ③ Forecast can be accurate under the normal ventilated condition, some error exists when indoor or in air-conditioned environment.
- 5. Moon phase arroading to date
- 6. Parameters
- ① Indoor Temperature range from 0°C--50°C
- ② Indoor/Outdoor Humidity range from 20%-95%
- 3 Outdoor Temperature range from -50 °C to 70°C, temperature shows -20 °C to 60°C
- 4 RF distance: 30 m

Notice: If caption faintness or incept distance not far, please replace new battery.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.