 
 
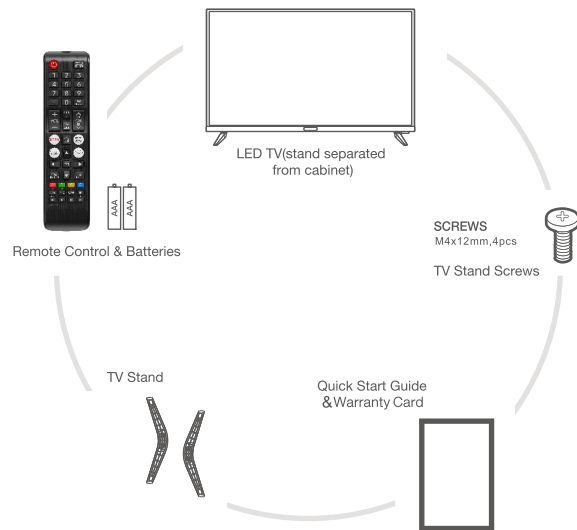 


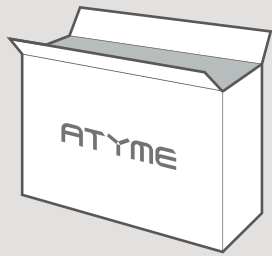

1

1. Use an antenna cable to connect the ATSC/NTSC signal to the LED TV's TV CABLE terminal.
Connect the TV to the power AC 100-240V-50/60Hz
(Connect after all the other connections have been made.)

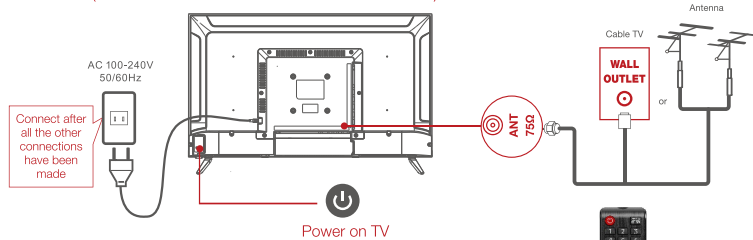

Power on TV

2. Connect the TV to the power outlet.
Press the power button on the side of your TV or POWER on your remote control to turn on the TV.


Power on remote control

INPUT SOURCE	SELECTED JACKS	SELECTED JACKS	PLUGS
TV	ANT 75Ω		
HDMI 1	HDMI 1		
HDMI 2	HDMI 2		
HDMI 3	HDMI 3		
AV	Audio L/R, Video In		
Media	USB		

2


The TV is packaged with the TV stand separated from the cabinet.

To setup the TV table stand, please carry out the installation according to the instructions below.

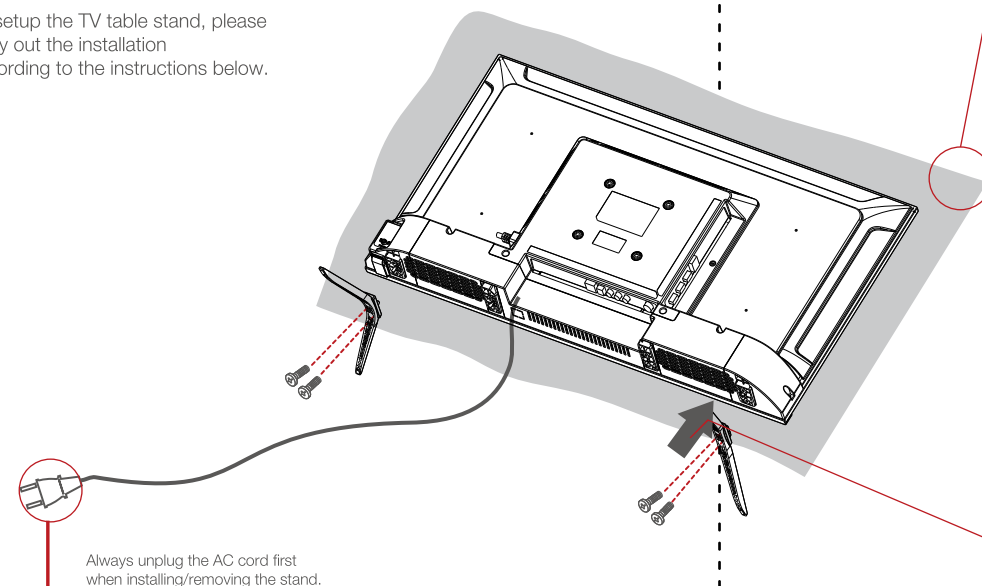

Always unplug the AC cord first when installing/removing the stand.

Please take note of the base direction:

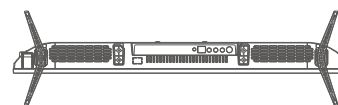


The bottom view of the TV
(Front cabinet faces down)

5


- 1 Place the TV faced down on a soft cloth or cushion to prevent the panel from being damaged. The panel can be scratched easily, so please:

·Choose an absolutely flat surface to place the TV on.
·Use soft cloth or cushion to face the TV panel.
·Do not put TV on the table directly.

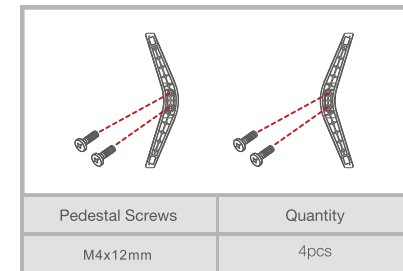


- 2 Take the base. Please align four holes of the base and four screw holes of the neck, insert the base to the neck, and then insert the 4 screws and tighten them.

6

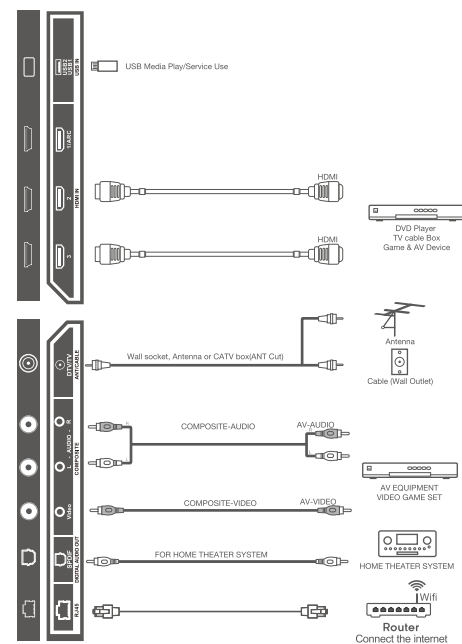


CONNECTION ADVICE	BEST	COMPATIBLE	
PICTURE QUALITY	HIGHEST DIGITAL QUALITY PICTURE	LOW RESOLUTION NOT RECOMMENDED	
CONNECTION TYPE	HDMI DTV/TV	AV	
CONNECTOR IMAGE			

3

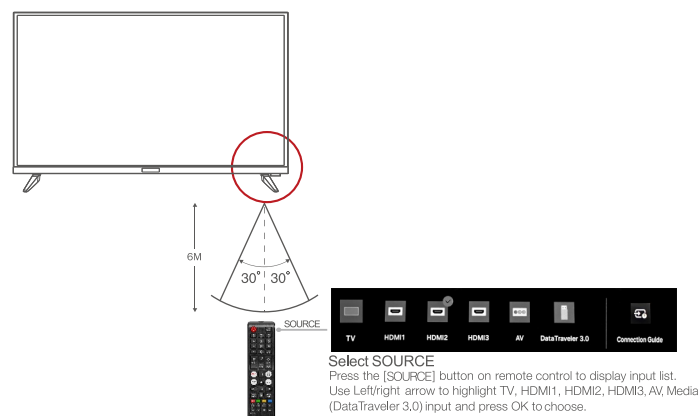

Select SOURCE
Press the [SOURCE] button on remote control to display input list.
Use Left/right arrow to highlight TV, HDMI1, HDMI2, HDMI3, AV, Media (DataTraveler 3.0) input and press OK to choose.

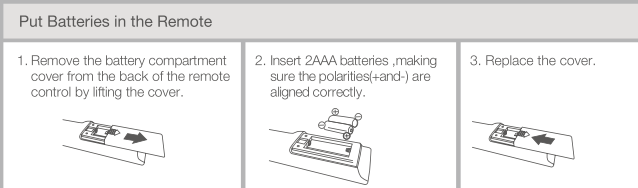

CAUTION

- Used batteries should be recycled.
- Keep out of children's reach.
- Do not use new and old batteries together.
- Change both the batteries at the same time.
- When not using the remote control for a long time, remove the batteries from the unit.

4

POWER : Turns the TV on or off.
LIST/FLOF: To display the teletext mode selection page.(not supported).
SOURCE : Accesses the available input channels.
NUMBER BUTTONS : Press 0-9 select a TV channel directly when you are watching TV.
- : To switch the channel digit.
PRE-CH: Returns to the previous channel.
VOL+ or VOL- : Increases or decreases the TV volume.
CH+ or CH- : Scans up or down through the current channel list.
MUTE(): Reduces the TV volume to its minimum level. Press again to restore the volume.
GUIDE: Press to check the programme.
NETFLIX: Press to access the NETFLIX site.
Prime Video: Press for direct access to Prime Video apps.
Samsung TV Plus: Press for direct access to apps.
Disney: Press for direct access to Disney apps.
HOME(): Press to open home page.



7

(▲/▼/◀/▶) : The direction keys.
OK(): Enter and confirm button.
RETURN: Returns to the previous menu.
EXIT: Exits the current menu of function.
RED/GREEN/YELLOW/BLUE : Use add-on functions in OSD menu.
HOLD: Teletext mode-Mode current page which is display. (not supported).
CANCEL: To cancel the display.(not supported).
INDEX: To display the index page(not supported).
REVEAL: Teletext mode-To reveal or hide the hidden words (not supported).
SIZE: Change the size of display in Teletext mod.(not supported).
SETTINGS: Enters the Settings menu.
INFO : Press to display the current program information on the screen.
CC: Selects the closed caption and
AD(AUDIO): Switch the audio channel in DVD or multimedia mode.
 : Press to stop and play or pause media files.
 : Press to rewind or fast forward.
 : Press to select the previous or the next media file.



* Note: the keys not listed are for other purpose, they are not available for this TV model.

8