RT2070 USB Wireless LAN Adapter User's Manual


1 Install the driver

a Insert the installation CD into your CD-ROM driver, Double click the icon




to start setup


b. Select "I accept the terms of license agreement".

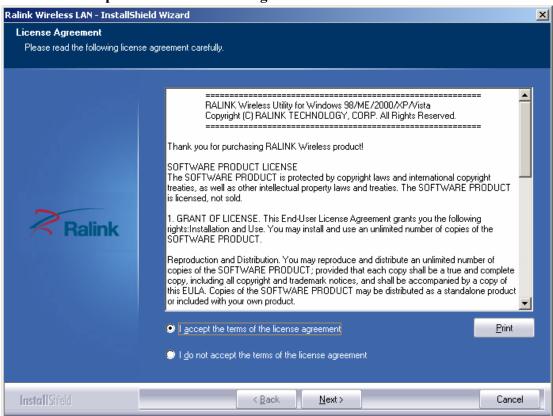

c Choose Install driver and Ralink WLAN Utiliy and click next to go on

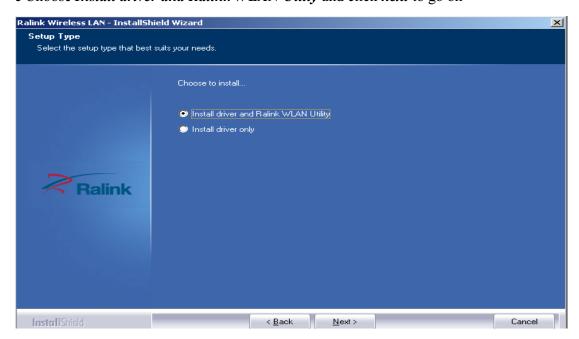


d Choose Ralink Condiguration tool and click next to go on

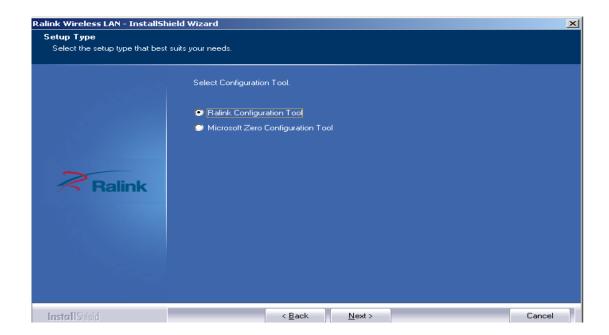



f Click Finish to end the setup

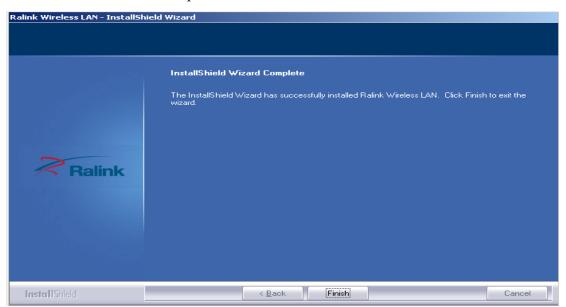

2 Plug in your usb wireless LAN adapter, it will be recognized and auto installed. Just confirmed it like below.


3 Make infrastructure connection

Double click the icon in red circle



You will see:




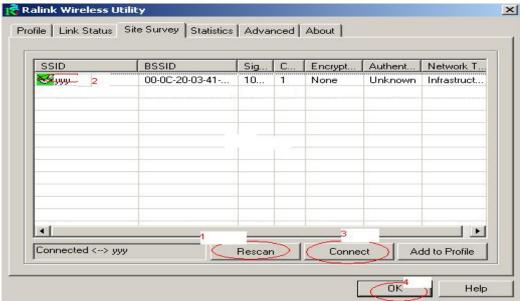

You can click the button **Rescan** to find which AP is in range, they will show on the window, choice one you want to connect, and click the button **connect**, and click **ok** to finish the connection operation.

An infrastructure connection is accomplished.

Note, please choose correct channel setting up to your law, for example, ch13 is permitted in your country, and you set your router at ch13, while you choose ch1-ch11 (default setting), you will never find the AP, and you will have to choose ch1-ch13 setting in *Advanced* page as below

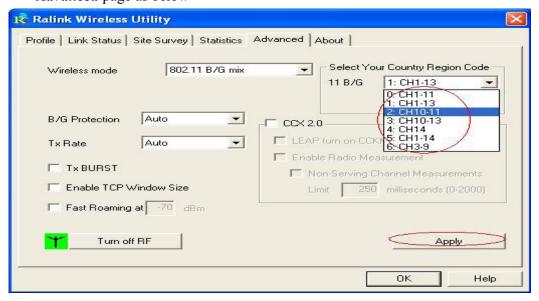



4 Some help information in *Rlink Wireless Utility*

How to find out your IP address:




How to find out which a WIFI environment you are inside

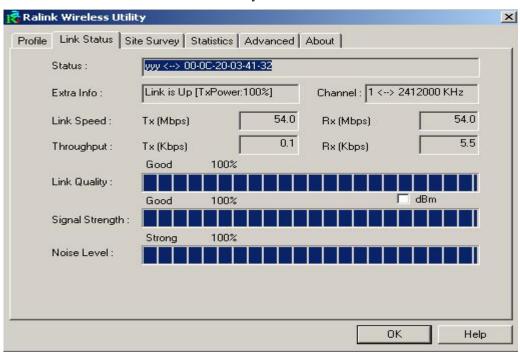

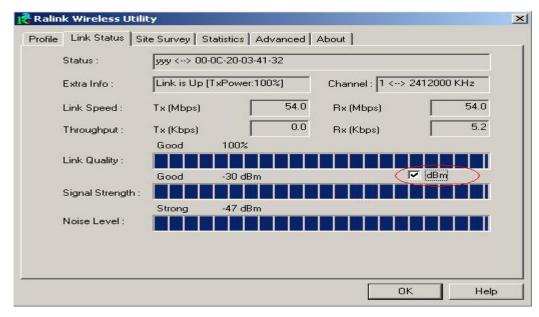


5 Make Ad-Hoc mode connection


5.1 Make an Ad-Hoc SSID

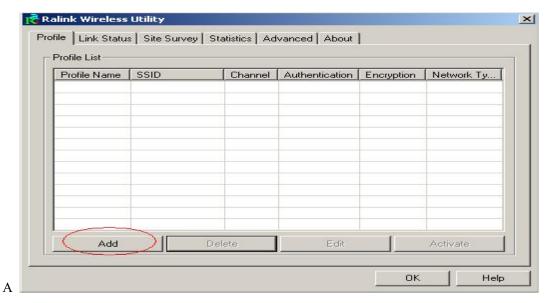

Add Profile × Configuration Authentication and Security \blacksquare Profile Name PR0F2 SSID PSM-C PSM (Power Saving Mode) CAM (Constantly Awake Mode) Network Type TX Power $\overline{\blacksquare}$ Infrastructure Auto Ad hoc Infrastructure Preamble RTS Threshold 256 + Fragment Threshold ОΚ Cancel Apply Help


В

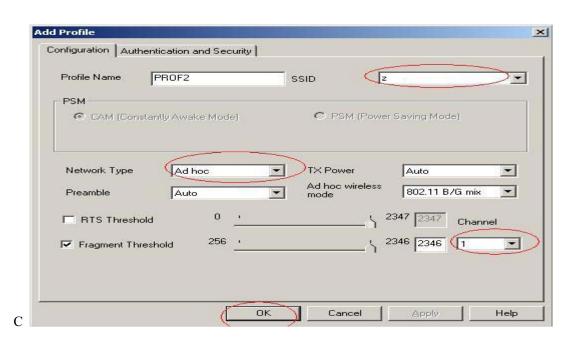

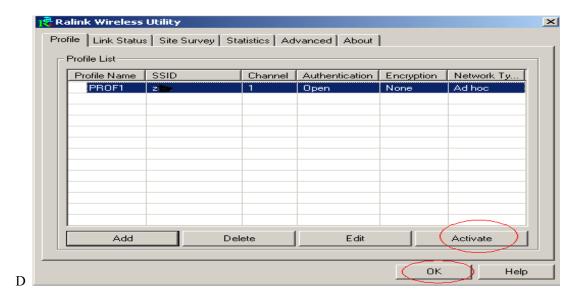


5.2 Setup static IP address for the Ad-Hoc link


A At its property page, double click item *Internet Protocol (TCP/IP)*

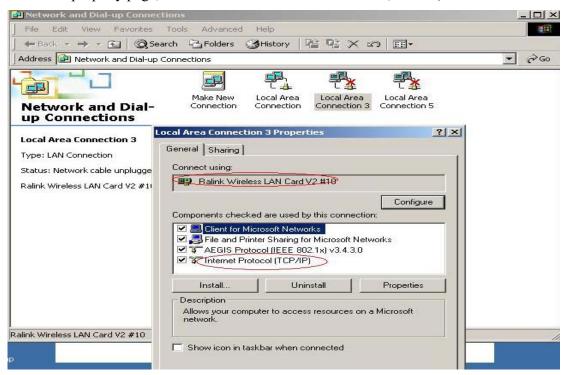


B You will get

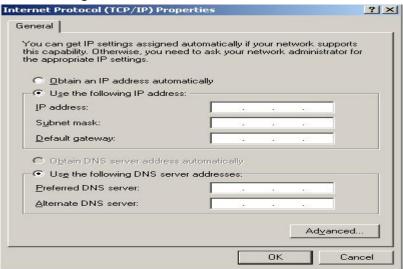

C Fill the IP address blank, example as below:

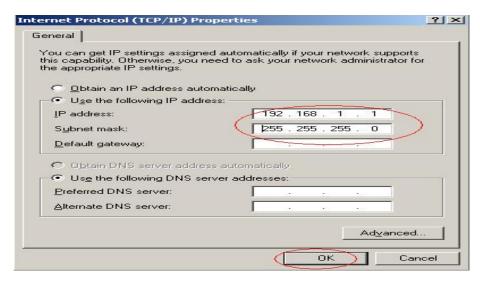

D Click ok to finish the setup

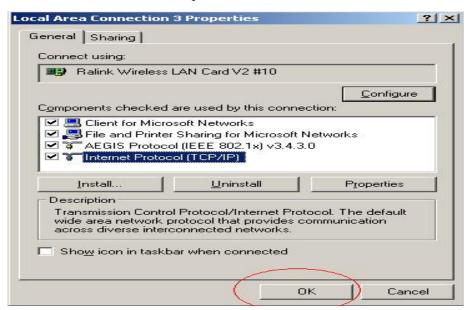

- 5.3 Ad-Hoc setup for one point accomplished
- 5.4 Setup another Ad-Hoc point as step A,B,C,D.
- 5.5 Ad-Hoc mode link accomplished. And you can visit each other.

Note: To make an Ad-Hoc mode link, Do remember to choice the same channel, its static IP address should be in the same netsub, and the SSID should be the same too.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 2.5cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.