


7

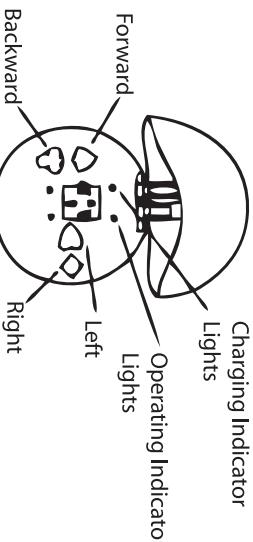

To drive the car, push and hold the forward or reverse button on the remote. Use the left and right arrows for steering. The operating light will come on when the car is in use. When the operating light becomes faint, it is time to change the controller batteries. Make sure the antenna is fully extended while in use.

8



If the car begins to veer right or left when moving forward or reverse, the alignment can be adjusted using the directional guide located on the bottom of the car.

For best results, only operate the car on smooth, dry surfaces. Radio waves control this toy and can easily be interrupted. Avoid using near phones, electrical lines, radios, or other wireless devices.

WARNING
CHOKING HAZARD - Small Parts.
Not for children under 3 years.

9

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the transmitting equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

10



Battery Cautions

- Do not mix old and new batteries.
- Do not mix alkaline & standard or rechargeable batteries.
- Install batteries so that the polarity (+ and -) matches the diagrams in the battery compartment.
- Use only batteries of the same type and equivalency.
- Remove exhausted batteries from the unit.
- Do not short circuit battery terminals.
- Non-rechargeable batteries are not to be recharged before recharging and only under adult supervision.
- Do not dispose of batteries in fire, or product may explode or leak.
- If this product will not be used for an extended period of time, remove the batteries from the product.
- Clean the battery contacts and also those of the product prior to battery installation.
- As always, dispose of batteries in an eco-friendly manner.

Battery in the toy car is non-replaceable.
EB Excalibur, Inc., Miami, Florida
www.EBExcalibur.com
service@EBExcalibur.com

© 2011 EB Excalibur, Inc.
Distributed in the United Kingdom by:
EB Brands UK Worcester WR1 9FA
Made in China

Actual product may differ slightly from photograph.
XC6379S01EXC


fold

fold

fold

fold

fold

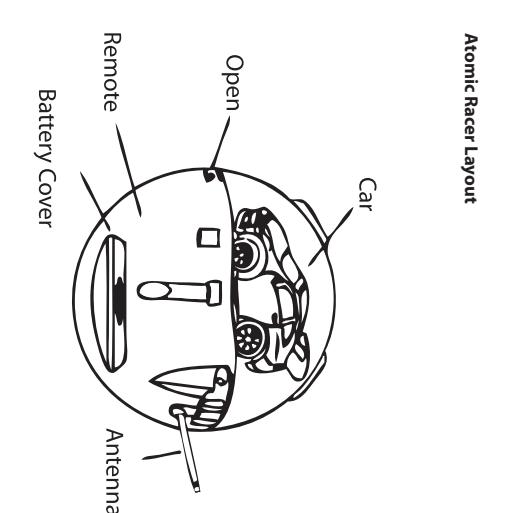

Use a screwdriver to detach the car from the battery cover and pedestal.

Insert two AA batteries (not included) and replace door.
[NOTE: Battery + / - orientation indicated on controller]

Note: To open atomic case, simply press release button and lift dome cover off.

Twist dome cover counterclockwise to open.

Slide battery cover/attached car off of controller.

2

3

4

5

6