



INSTRUCTION MANUAL 1:10 R/C BAJA /BUGGY/TRUGGY



SAFETY FIRST

Read these instructions carefully before using this product and keep in a safe place for future reference.

We advise the use of this product whilst under the guidance of an adult.

This toy is for children of 8 years and above.

Do not use this toy on the road and keep away from animals and young children.

Do not attempt to modify this product in any way or lift it from the ground whilst in movement.

Keep moving parts of this product away from hair, clothes and hands.

Handle with care at all times and only when the motor is off.

IMPORTANT WARNING TO PARENTS:

the adaptor must be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the adaptor should not be used until properly repaired."

CAUTION – ELECTRICALLY OPERATED PRODUCT

--NOT RECOMMENDED FOR CHILDREN
UNDER 8 YEARS OF AGE. AS WITH ALL
ELECTRIC PRODUCTS, PRECAUTIONS
SHOULD BE OBSERVED DURING
HANDLING AND USE TO PREVENT
ELECTRIC SHOCK.

INSTRUCTIONS OF USE

It is not possible to play with 2 vehicles of the same frequency at the same time. For the best performance we advise use on flat, clean surfaces.

CHARACTERISTICS

7 Functions: Forwards, Backwards ,Turn Right & left and stop.

BATTERY:

1 9V battery for the controller (Not Included)

1 9.6V rechargeable battery pack for the vehicle (included)

1 battery recharger (included)

BATTERY INSTALLATION

A-TRANSMITTER

1. Ensure that the ON/OFF switch is in the OFF position;
2. Open the battery compartment and insert 1 9V battery paying attention to the + and – indications;
3. Replace the battery compartment cover ensuring that it closed securely;
4. Attach the antenna to the top of the transmitter ensuring that is screwed until fully secure.

B-VEHICLE

1. Ensure that the ON/OFF switch is in the OFF position;
2. Open the battery compartment and insert the 9.6V battery pack connecting the cables inside.
3. Replace the battery compartment cover ensuring that it closed securely;

RECHARGING THE BATTERY

ATTENTION! The battery charger is not a toy. Keep out of the reach of children. Inspect the battery recharger before use. In the case of damage or wear do not use, instead contact an authorised assistance centre for repair or replacement. Battery recharging should be done by an adult.

After the initial recharge the battery will not be fully charged, for the best results the battery pack should be used and recharged 4-5 times. For best results ensure that the battery pack is only recharged after the life is fully exhausted.

1. Connect the cables from the battery charger to those of the battery pack. Then plug the battery recharger to the current ensuring the the voltage is correct. The normal recharge time is 4 – 6 hours.
2. Disconnect the battery recharger from the current and then the battery from the recharger. After recharge the battery will be warm to the touch.

BATTERY MAINTENANCE

Do not overcharge the battery. For best results ensure that the battery is completely used before charging. The battery will heat up during recharge and use, handle with care and allow to cool before recharging. Use only the recharger supplied to recharge the Battery.

TRANSMITTER FUNCTION

Move the ON/OFF switches of the transmitter and vehicle to the ON position.

- 1) To make the vehicle move forwards or backwards push on or pull back the left joystick respectively;
- 2) To make the car turn left or right push the right joystick to the left or right respectively;
- 3) To stop the vehicle release both the left and right joysticks.
- 4) For best performance ensure that the antenna is pointing towards the vehicle at all times.

Whilst not in use ensure that the ON/OFF switches of the transmitter and vehicle are in the OFF position.

CLEANING

Do not submerge this item in water use a damp cloth and dry before use.

Do not leave this item in direct sunlight for a prolonged period

NOTICE!

- Don't mix new and used batteries.
- Don't mix different types of batteries, e.x. alkaline, standard (carbon-zinc) or - rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from a toy before being charged (if removable)
- Rechargeable batteries are only to be charged by an adult.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- Remove the batteries from the toy when not in use for an extended period of time.
- The supply terminals are not to be short-circuited
- If there are leaks of liquid or signs of wear don't attempt to recharge the battery pack.

--The manufacturer is not responsible for the possible interferences from radio or Tv owing to non-permitted modifications on this appliance.

MADE IN CHINA

MANUFACTURED BY:

KIDZ ROCK LTD

RM1001 FOURSEAS BUILDING 208-212 NATHAN ROAD KOWLOON HONG KONG



CE 0678

This toy is not suitable for children under the age of 3 years. It contains small parts that could be swallowed. We advise the use under supervision of an adult. Remove all packaging before giving to the child.

Declaration of Conformity

We the manufacturer

Declare the the item

Cyclone II 1:10 R/C Item number KD0701/KD0702 /KD0715

Respects the requirements of the R&TTE 99/5 CEE Directive.



<http://www.rctoyhobby.com>