



1/10 Scale R/C On-Road Racing Car Instruction Manual

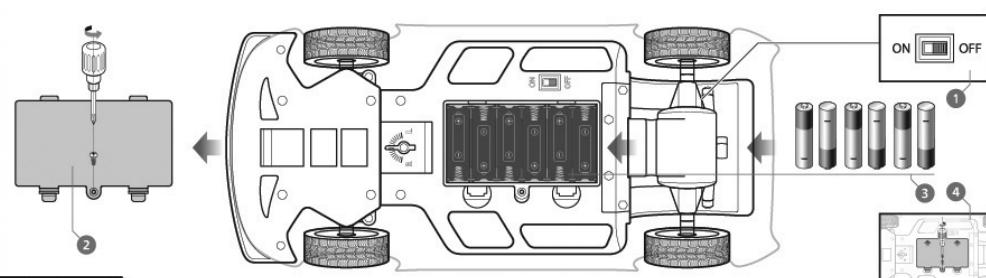


DIAGRAM #1

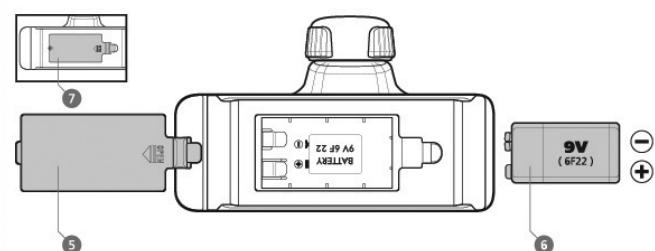


DIAGRAM #2

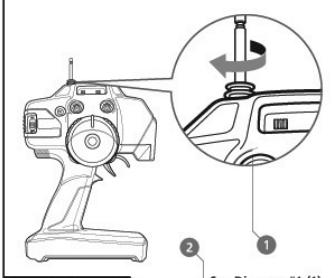


DIAGRAM #3

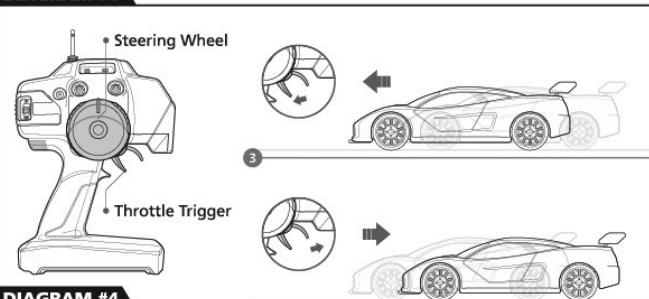


DIAGRAM #4

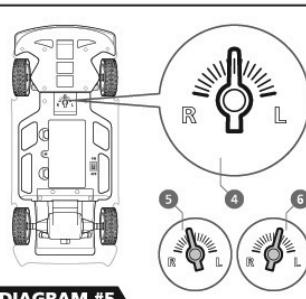


DIAGRAM #5

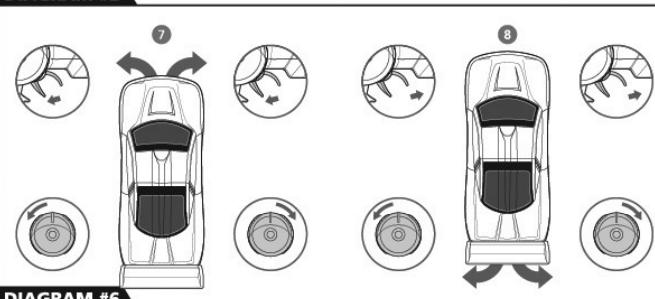


DIAGRAM #6

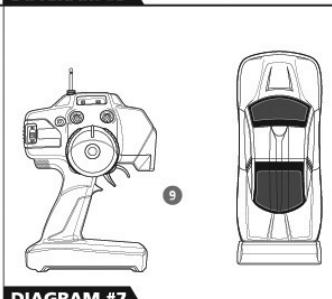


DIAGRAM #7

ATTENTIONS PARENTS

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

BATTERY INSTALLATION

HOW TO INSTALL BATTERY IN VEHICLE (See Diagram #1)

1. Turn over the vehicle and push the ON/OFF to "OFF" position.
2. Use a screwdriver to remove the battery cover.
3. Insert 6x 1.5V "AA" size batteries into battery compartment.
4. Replace the battery cover.

HOW TO INSTALL BATTERY IN TRANSMITTER (See Diagram #2)

5. Remove battery cover.
6. Install 9.6V F22 batteries by matching "+" and "-" poles as indicated in the battery compartment.
7. Replace the battery cover.

Note: Remove battery after you have finished using your vehicle.

HOW TO PLAY

START TO PLAY (See Diagram #3)

1. Attach the antenna to the top of the transmitter ensuring that is screwed until fully secure.
2. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram #1 (1))

FORWARD & REVERSE RUNNING (See Diagram #4)

3. To make the car forward and reverse, pull or push the trigger in the transmitter respectively.

FRONT WHEELS STEERING ADJUSTMENT (See Diagram #5)

4. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle.
5. If the vehicle runs towards left, turn "Steering Alignment Lever" towards "R".
6. If the vehicle runs towards right, turn "Steering Alignment Lever" towards "L".

STEERING OPERATION (See Diagram #6)

7. Turn the steering wheel forward or backward while pulling the trigger backward at the same time, the car will turn left or right and run forward.
8. Turn the steering wheel forward or backward while pushing the trigger forward at the same time, the car will turn left or right and reverse.

STOP OPERATION (See Diagram #7)

9. Release the trigger, the vehicle will stop.



This toy is not suitable for children under the age of 3 years as it contains small parts that could be swallowed. We recommend using this product under the supervision of an adult. Remove all packaging before giving to the child.

BATTERY CAUTIONS

1. For maximum performance, use alkaline batteries.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard(carbon-zinc) or rechargeable batteries.
4. Do not recharge non-rechargeable battery.
5. Ensure the batteries are inserted with the correct polarity.
6. Remove batteries when toy is not in use.
7. Rechargeable batteries should only be charged under adult supervision.
8. Remove rechargeable batteries from toy before charging.
9. The supply terminals are not to be short-circuited.
10. The antenna are not inserted into socketed outlet.

ABOUT FREQUENCY AND PLAYING PLACE

1. If there's another radio control car of the same frequency nearby, you may control of your car.
2. Other radio waves may also cause interference to your control. In such a case, please play in another area or at another time.
3. This product is suitable for running on cement or water polished ground. If running on excessively smooth surface. The car may not be able to run along a straight line and may even skid to make U-Turn or spin.

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.