


2.4GHz WIRELESS OPTICAL MOUSE INSTRUCTION

(MODEL: WM113GON)

1. Overview

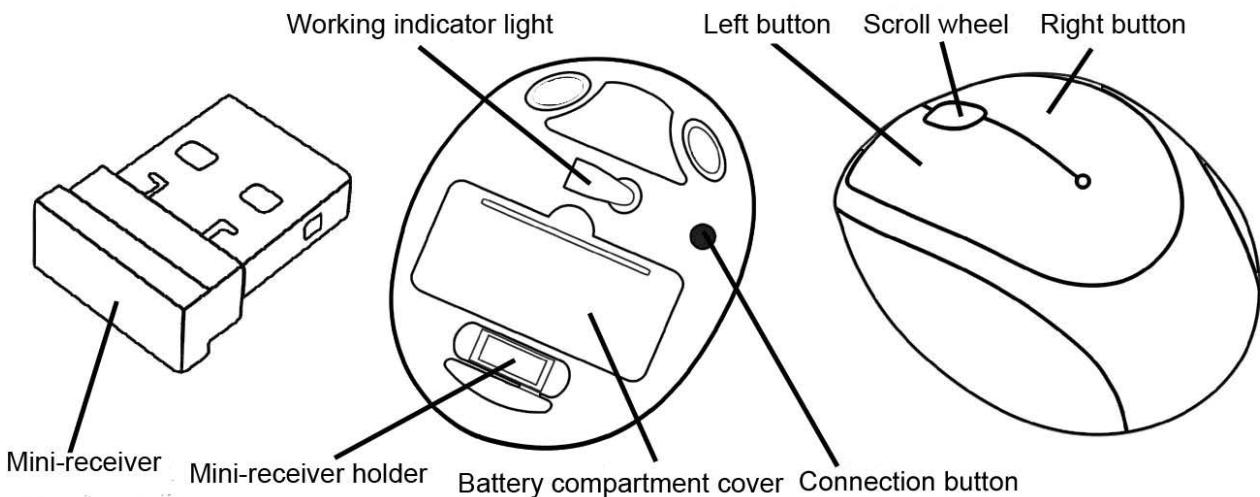

2. System Requirements

2.1. With systems Windows 98 / 2000 / XP / Vista, MAC OS X 10.0 and above, no driver need.

3. Installation Instructions

3.1. Turn on your computer.

3.2. Pull **Mini-receiver** out of **Mini-receiver holder**. Open **Battery Compartment Cover**, put batteries into the battery compartment and make sure the battery Positive (+) and Negative (-) are oriented rightly as the instruction label. Then the **Working Indicator Light** will be lighted. Then please close the **Battery Compartment Cover**. If the **Working Indicator Light** is not lighted, please check if the batteries Positive (+) and Negative (-) are oriented correctly.

3.3. Press the **Connection Button** at the bottom of mouse at first then insert the **Mini-receiver** into USB port on your computer. Please finish this operation in 6 seconds. The computer will recognize the device and install the driver for it automatically. When the cursor can move freely on the screen, it means the mouse is ready for use now.

4. Functions

4.1. Resolutions: 1000 DPI

4.2. When there are no operations for more than 5 minutes, the mouse will go into **Sleep Mode** automatically to save power. Please press the **Left Button / Right Button / Scroll Wheel** to wake up the mouse.

5. Cautions

5.1. Warning and Messages

5.1.1. When the mouse is no response, please check the receiver and make sure the receiver is connected with computer correctly, or you can insert the receiver to other USB port of this computer for test.

5.1.2. When the cursor move slowly or discontinuously in the screen, please move the mouse to other surface for test, for example black or dark surface. The mouse will perform not correctly at light-reflecting or rough surface.

5.1.3. When the cursor is no response or dead, it means the batteries could be dead. Please open the **Battery Compartment Cover** to replace with new batteries for test.

5.2. Battery usage

5.2.1. Be sure to use same type of AAA alkaline battery. Please don't mix new and old batteries or batteries of different types (for example, carbon-zinc and alkaline batteries).

5.2.2. Please remove batteries from **Battery Compartment** when not to use the mouse for a period of time.

6. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

7. FCC ID label

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WM113GON-1