

RCL-R700 RECEIVER

RCL-R700

INSTRUCTIONAL MANUAL



RCL KOREA

INSTRUCTION for RCL Pager

*** When the pager is removed from the charger base, it will be vibrating and flashing for 5 or 10 seconds.**

Programming the Alert Mode

A) Capcode 1 (Group Message)

Message	Alert Description	Alert Time & Remark
9292	Vibrating Only	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9393	Out of Range "OFF"	
9494	Out of Range "ON" (Melody & Voice)	The pager will melody, when it is out of range.
9595	Beeping, Flashing and Voicing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9696	Vibrating and Flashing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9797	Flashing Only	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
9898	Beeping, Vibrating, Flashing, Voicing	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue
99	Sleep Mode	
8281	Beeping once and Vibrating	Alert Time : 5 Sec (when the pager is removed from the charger base)
8282	Beeping once and Vibrating	Alert Time : 10 Sec (when the pager is removed from the charger base)
8381	Volume 1 (LOW)	Speaker Volume Range Setting
8382	Volume 2 (MID)	Speaker Volume Range Setting
8383	Volume 3 (HIGH)	Speaker Volume Range Setting
8882	Beeping once and Vibrating	Beeping & Flashing for 3 min (when it receives the Group Call)
8883	Beeping once and Vibrating	The last message will be activated (when it receives the Group Call)

9090	Beeping once and Vibrating	Alert Time : 8 sec
9091	Beeping once and Vibrating	Alert Time : 15 sec
9092	Beeping once and Vibrating	Alert Time : 30 sec
9093	Beeping once and Vibrating	Alert Time : 60 sec
9094	Beeping once and Vibrating	Alert Time : 120 sec
9095	Beeping once and Vibrating	Alert Time : 180 sec
9099	Beeping once and Vibrating	Alerting continuously

B) Capcode 2 (Individual Message)

Message	Alert Description	Alert Time & Remark
No Message	The last message will be activated	Alert time can be selected at 8, 15, 30, 60, 120, 180 sec, Continue

C) Capcode 4 (Group Call)

Message	Alert Description	Alert Time & Remark
No Message	Melody (Voice) and all LED will be activated (8882) The last message will be activated (8883)	8882 (10 min) 8883 (8, 15, 30, 60, 120, 180 sec, Continue)

- ※ When the "Out of Range" is activated, display will show "---" with a melody.
- ※ When the pager receives the individual message (CAP2), the pager number flashes.
- ※ When the pager receives the group message (CAP4), display will show the pager number continuously.
- ※ When the pager is in the charger base, display will show the pager number continuously.
- ※ When the batter needs to be charged, display will show "LO".

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS :**

**(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RCL KOREA