

TLK-TX72LA wireless transmitter

Plug the 9V DC power adapter into a grounded outlet, and set the transmitter to the desired frequency following the instructions in the user's manual. Install the front antenna or rear antenna as per the conditions in the field. Connect the audio source and transmitter the audio cable. The transmitter will transmit the audio signal wirelessly to the receiver through the FM antenna. The frequency range is 72.1MHz to 75.9MHz.