

USER INSTRUCTION FOR HANDHELD WIRELESS REMOTE IGNITION DEVICE

Instruction of Use:

1. Press the “Start” button twice to start the generator unit. If the generator unit is too cold or in a low speed mode, it may not be ignited by the Device. Please press the “Start” button for a longer time until the unit starts.
2. Press the red “Off” button on the device once to turn off the generator unit.
3. Notice and Warning:
 - The handheld wireless remote ignition device (“Device”) is made with delicate parts or components. Please avoid dropping the Device on hard ground or soaking the Device in liquid such as water.
 - Adding an antenna to the Device will increase wireless signal emissions and thus the distance of remote ignition.
 - When the battery charge is low, which may be indicated by a dimmed indicator light, the remote ignition distance may decrease and/or result in a malfunction of the Device.



Caution Made Under 47 C.F.R. 15.21:

Changes or modification not expressly approved by authorized professional personnel will void the user's authority to operate the device.