

INSTRUCTION GUIDE

IMC Battery-Operated Remote LED Candle

Model #: RM007

FCC ID: IMC88RMCAB-GL1100

Congratulations on a wise purchase !

Instructions

for the Transmitter:

- 1. Remove bottom cover by pushing down on tab and lifting up cover.**
- 2. Insert 2 "AAA" alkaline batteries (not included)**
- 3. Slide cover back into position and Snap in place**
- 4. Choose which of one following:**
 - 1. On Steady**
 - 2. Flicker**
 - 3. Off**

For the Receiver:

- 1. Remove bottom section of candle by turning counterclockwise**
- 2. Insert 2 "AA" alkaline batteries (not included)**
- 3. Replace bottom of candle by turning clockwise**
- 4. Insert candle in candleholder**

Please enjoy your remote control candle.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user ' s authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user ' s authority to operate the device.