


Manual

View

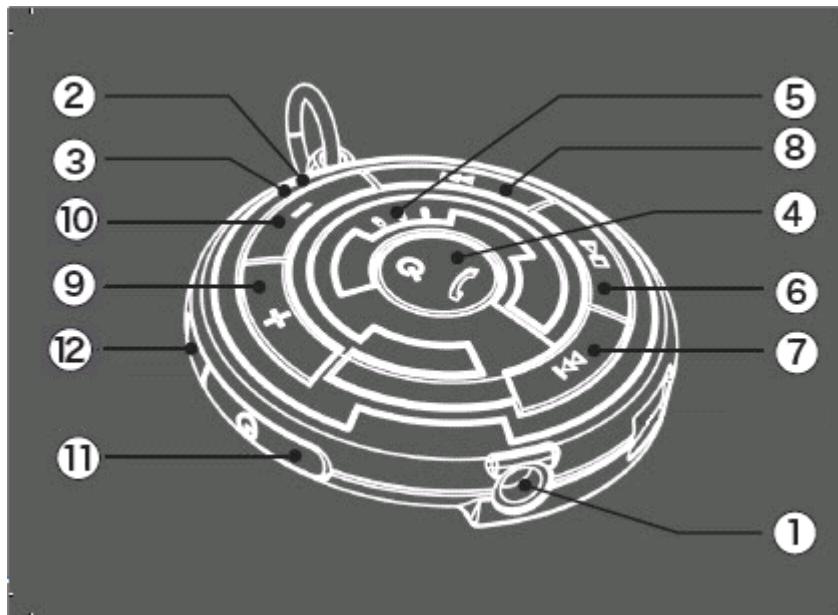

① Earphone Jack	⑧ Previous Track Key
② Blue LED Charging Indicator	⑨ Volume Up Key
③ Blue LED Power Indicator	⑩ Volume Down Key
④ Power/Answer/End Call Key	⑪ Time Display Key
⑤ Microphone	⑫ Time Setting Key
⑥ Play/Stop Key	
⑦ Next Track Key	

How to charge & set up Escape C


- The battery must be fully charged before using for the first time.
- When charging, the red LED charging indicator will turn on.
- The red LED charging indicator (pictured) can only be seen when viewed at an angle.
- Charging can take up to 2 hours.
- When fully charged, the red LED charging indicator will turn off.
- Disconnect the charger from Escape C and from the power source.

How to pair Escape C to your Phone

- Use your earphones so that you can hear the alert sound that Escape C makes.
- First ensure that Escape C is turned off by pressing and holding the power key for 3 seconds (three will be no blue LED power indicator lit when Escape C is off).
- Press and hold the power key until the red and blue LED indicators flash and you hear 2 bleeps. Escape C is now in discoverable mode.
- Turn on your Bluetooth wireless technology enabled device and ask it to search for devices.
- When your Bluetooth wireless technology enabled device has found Escape C, confirm by selecting KISAI ESCAPE from the list.
- If asked to enter a pass-code, enter 0000 when prompted.
- If pairing was successful the LED indicator flashes red and blue quickly to indicate standby mode.
- Escape C is now ready to make or receive calls or listen to music.
- If pairing was unsuccessful, repeat the above steps. You only need to pair Escape C once.

How to use Escape C to communicate (Headset Profile)

- To answer a call, press the answer key on Escape C or on your phone.
- To end a call, press the end call key on Escape C or on your phone.
- To reject a call, press the end call key on Escape C or on your phone once.
- To make a call, dial the number from your phone, press the call key on your phone and the call will be transferred to Escape C.
- To redial the last number called, press and hold the answer key for at least 2 seconds whilst in standby mode.
- Press the volume up key to increase the volume down key to decrease the volume.
- Certain function keys may not be supported or may be limited by some devices.

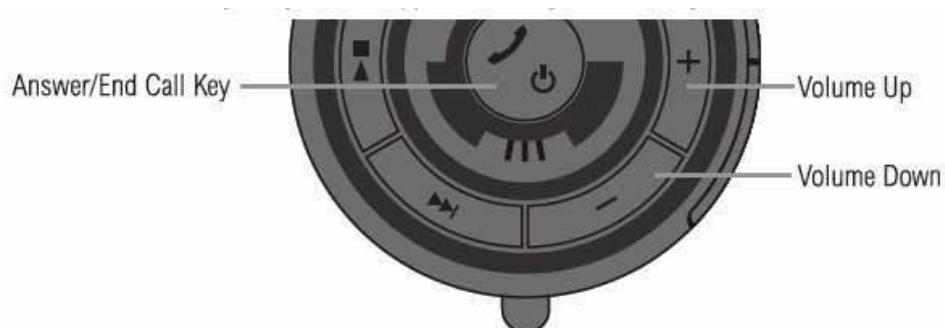

Technical specification

- Earphones: Stereo
- Interface: A2DP, AVRCP, HFP, HSP
- Frequency range: 2.402-2.480GHz.
- Frequency response: 20Hz – 20KHz
- Talk time: Up to 6 hours
- Standby Time: Up to 180 hours

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.