Quick Reference Guide STP8000/8100

sepura



Sepura plc Radio House, St Andrew's Road, Cambridge, CB4 1GR England www.sepura.com Switch On Press the Mode Key.

Switch Off Press & Hold the Mode Key.

Volume Adjust Rotate the Navi Knob™.

Emergency Call Press and hold the Emergency Key.

- no gono, can

Change Talkgroup Press the Mode Key once, and then rotate the Navi Knob™ to choose from the list of talkgroups in the current folder, or dial the number of the talkgroup using the keypad. Wait or press the PTT to activate

the new talkgroup.

Press the Mode Key once, and then use the Up and Change Folder

Down Navigation Keys to select a talkgroup folder.

Then change the talkgroup as explained above.

Talkgroup Call Press the PTT.

Call one Radio

Dial the radio number and select (using Up/Down Navigation Keys), then press PTT to start

the call.

Telephone Call

Dial the required number and select (using Up/Down Navigation Keys), and then press the appropriate Context Key to start the call.

appropriate Context Key to start the call. To end the call press the other Context key.

Press the Mode Button twice and then rotate the Navi Knob™ to select a status value. Press PTT twice to

send to the currently active talkgroup. These messages can also be accessed from the menu

structure.

Menu Access

Send Status

From the default screen:

- Press the Down Navigation Key once to see the menus available;
- Press the Left or Right Navigation Key to move across and select the menus;
- Press the Down Navigation Key to enter menu;

 Press the Left or Right Navigation Key to move across the cards within the menu.

Press and hold the Up Navigation Key to exit the menus and return to the default screen. Alternatively, do nothing and the default screen will reappear after a timeout

Activating Menu Options

Some menu cards allow you to alter settings within the radio by checking or unchecking a checkbox. Press the appropriate Context key to activate a function and 'check' its checkbox or to deactivate a function and 'uncheck' its checkbox. In the Network Selection Menu only one Network can be activated, so the previous network is deactivated automatically.

Entering Text

Within menu cards that allow text entry, e.g. to send message;

Press and hold the Down Navigation Key to start editing;

Enter or edit your text as required from the keypad;

Press the appropriate Context key to action your changes or to exit.

Activating Soft key Functions

Press and hold the required soft key.

(A list of soft key functions may be displayed on the Help key if programmed.) Some soft keys are a "toggle" function, requiring no further action. Some are navigation keys requiring a second action.

Icons

Description	Icon
Half duplex call	
Broadcast call	
Telephone type call dialling mode	
Transmit Inhibit	3
Emergency call	4
New message	

Description	Icon
DMO Gateway	
Signal strength	*
DMO Repeater found	
Battery	
Keypad Locked	
Volume level meter	

Description	Icon
Missed Call	
Low battery	
Lone Worker	
Covert Operation	
Calls not encrypted	7
Power from charger	4
Paging Alert	
Turn Navi-knob™ clockwise to move cursor	
Communication mismatch	
DMO Repeater	A D
Privacy Mode	
Group Focus	
GPS	GPS
TETRA type dialling mode	
Incoming Call	
Folders	
External Alerts	Image: Control of the
Function is activated	•
Radio Information	i
DMO Outgoing Call	
Man Down Motion and Tilt Sensors On	3
Man Down Tilt Only Sensor Active	S

Description	Icon
Packet Data session	
Scanning	
Radio Settings	3
WAP	
Calls are E2E encrypted	7
Telephone style call	6
Status Messages	
Turn Navi-knob™ anticlockwise to move cursor	5
Messages	><
Directory	91
Call History	- 国
Message Store	
GPS disabled	GPS
Device connected using <i>Bluetooth</i> ®	833
Outgoing Call	
Network Selection	
Short Data Applications	
Function not activated	0
Bluetooth® On	8
DMO Incoming Call	
Man Down Motion Only Sensor Active	2 →