

SUMMARY

Structure



No.	Name	Function
1	Power button	To turn on/off the device
2	Menu button	Return to main menu screen
3	Mini USB socket	To supply power to PND or communicate when a PC is connected or use as antenna while FM transmission enabled.

4	headset jack	To connect to stereo headset
5	AV IN	Video input socket
		Insert a SD card contains map programs, mp3, etc. press down to the end until firmly locked, press again to eject the card.
		<i>NOTE: Never eject the card while in use.</i>
6	SD card slot	
7	Reset hole	To press the button inside the hole to reset the whole system
		To indicate the recharging condition. Red is in process, green
8	Recharge indicator	for complete.
		Microphone
9	(optional)	Mic for hand free calls(optional)
10	Display screen	TFT touch screen
		Where Sounds of music and voice
11	Speaker	from
		For hand writing on the screen to
12	Stylus	input

BASIC OPERATION

2.1 Getting-Started

Insert a SD card (optional) into the slot at the left bottom of device.

Press the power button  on the left top of the device to turn it on.



After seconds of starting up, then enters into the main menu screen as below.



2.2 Power off /Sleep

Press the power button  on the top side of your device to turn off your device, the screen prompts "equipment is about to turn off", please tap the icon to select in 20 seconds, the default operation is to turn off.

Or select sleep, the device actually enters a suspend state and the system stops operation. Once you turn on the system again, it resumes.

PROGRAMMING & SETTINGS

Press the power button  to turn on the GPS unit. The

Main Menu screen will be displayed as below:



Tap the icon  or  to go to next page of menu.



3.1 GPS

Double tap the GPS icon  or  to start GPS navigation program.



3.2 Music



3.2.1 Music Play

Tap the "Music" icon or on the main menu and enter into following interface.



: close the window and return.

: minimize

: order of playback: random, repeat, single, play all, repeat all

: equalizer

: previous

: seek bar

: pause/play

: next

: stop

: music list

: volume control

3.2.2 Music List

Tap the “Music List” icon and enter into the following interface.



: close the window and return.

: adding single

: adding all

: delete single

: delete all

3.2.3 Equalizer

Tap the “Equalizer” icon and enter into the following interface.



: close the window and return.

: tap it and select preset value

: check it to enable the equalizer

: reset the equalizer



3.3 Movie/video play



3.3.1 video

Tap the "video" icon  or  on the main menu and enter into following interface.



: pause/play

: seek bar

: stop

: video list

: close the window and return

: volume control

3.3.2 video list

Tap the  icon and enter into the following interface.

Double tap to select the movie you want to play and  to return.



3.4 Photo



3.4.1 photo

Tap the Photo icon  or  on the main menu and enter into following interface.



: previous

: next

: zoom in

: zoom out

: rotate

: full screen

: photo list

: close window and return

3.4.2 photo list

Tap the  icon and enter into the following interface.



3.4.3 full screen


Tap the  icon and enter into the full screen mode.



Then tap the seek bar to set time of slide show, value from 1s~10s.

Double tap to quit full screen mode.


3.5 Ebook

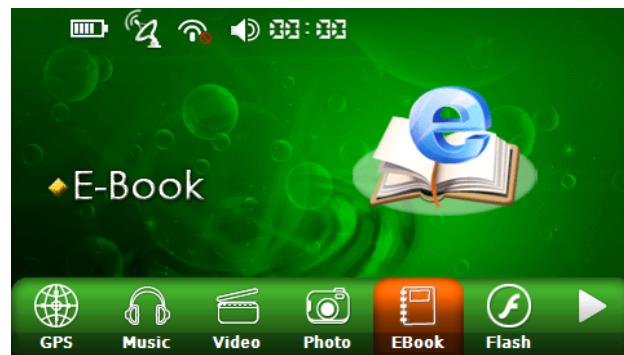

3.5.1 Ebook



Tap the icon  or  on the main menu again and enter into following interface.

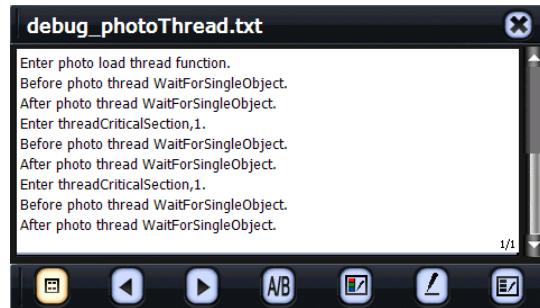

: close the window and return

: previous

: next

: font setting

: color setting

: bookmark

: bookmark list

: ebook list

3.5.2 Ebook List

Tap the icon  and enter into following interface.



3.5.3 Font Setting

Tap the icon  and enter into following interface.



: close the window and return.

: save

3.5.4 Color Setting

Tap the icon and enter into following interface.



: close the window and return.

: saving

3.5.5 bookmark list

Tap the icon  and enter into following interface.



: close the window and return.


: adding new bookmark

: delete bookmark

3.6 Flash



Tap the icon  or  on the main menu and enter into following interface.

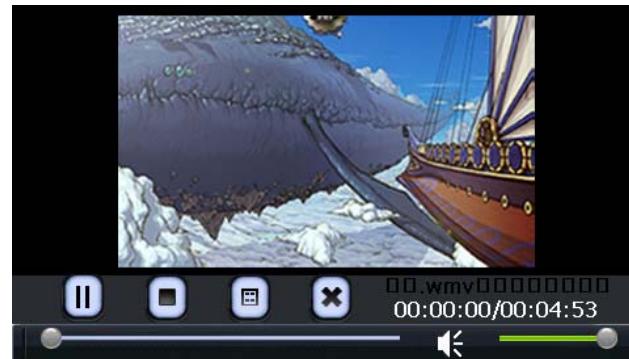

: pause/play

: stop

: seek bar

: flash list

: close the window and return.

: volume control

3.6.1 Flash List

Tap the icon  and enter into following interface.



3.7 Games



Tap the icon  or  on the main menu again and enter into following interface.



3.7.1 Chinese chess



Tap the icon and enter into following interface.



3.7.2 Linlink



Tap the icon and enter into following interface.



3.7.3 Russia Block

Tap the icon  and enter into following interface.



3.7.4 JawBreaker

Tap the icon  and enter into following interface.



3.7.5 BoxMan



Tap the icon **BoxMan** and enter into following interface.



3.7.6 BreakOut




Tap the icon **BreakOut** and enter into following interface.



3.8 Tools



Tap the icon  or  on the main menu again and enter into following interface.

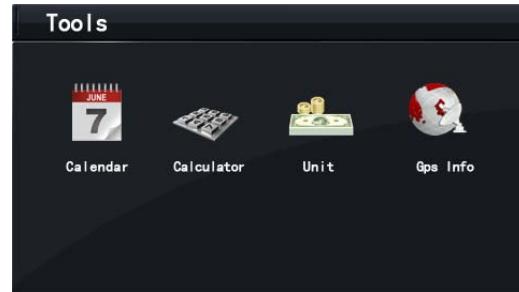

3.8.1 Calendar

Tap the icon  and enter into following interface.



3.8.2 Calculator

Tap the icon  and enter into following interface.




3.8.3 Unit



Tap the icon **Unit** and enter into following interface.


Unit: Length, Weight Mass, Cubic Capacity, Square Area, Circular Angular, Power, Pressure, Speed, Temperature

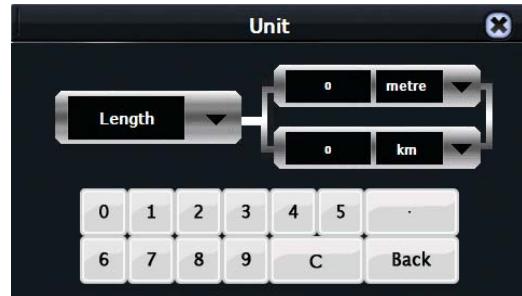

3.8.4 GPS info



Tap the icon **Gps Info** and enter into following interface.

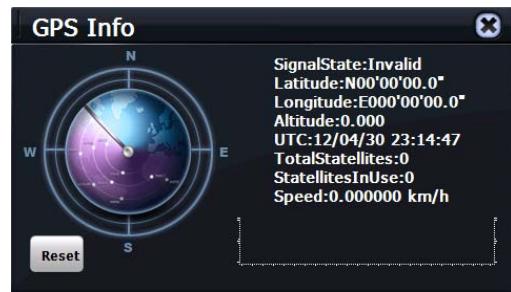

3.9 Setting




Tap the icon  or  on the main menu and enter into following interface.



3.9.1 Volume

Tap the icon  in the setting menu and enter into following interface.

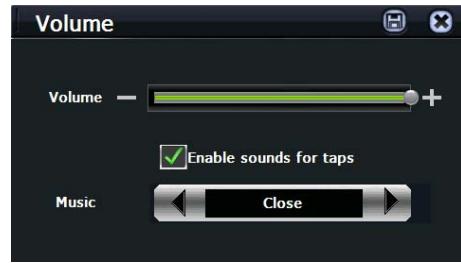

: close the window and return.

: save

: volume control


: can select "Enable sounds for taps" or not

: start music

3.10.2 Backlight



Tap the icon on the system menu and enter into following interface.

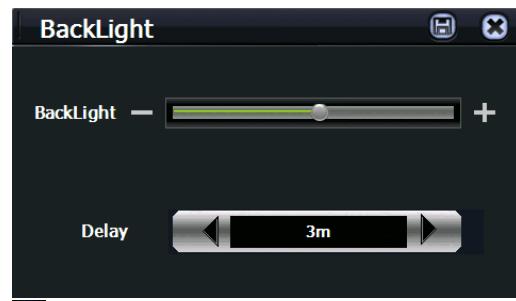

: close the window and return.

: save

: backlight control

: auto dimming if no operation in the time

3.9.3 Language

Tap the icon on the system menu and enter into following interface.




tap or icon to change the language.

: close window and return

: save

3.9.4 FM Transmitter


Tap the icon in setting menu and enter into following interface.

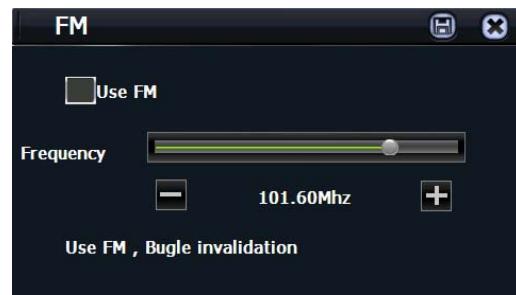

 close window and return

 save

  Use FM : check the box to enable FM

Frequency  101.60MHz  

tap "+" or "-" icon to increase or decrease the emissive frequency of FM

3.9.5 DateTime

 Tap the icon  in the setting menu and enter into following interface.



 close window and return

 save

   : tap  or  icon to adjust the time



: tap or icon to adjust the date



: tap or icon to change the

time zone.

3.9.6 Calibration



Tap the icon on the system menu and enter into following interface.



3.9.7 System Info



Tap the icon in the setting menu and enter into the following display



3.9.8 USB

Tap the icon  on the System menu, to set the USB working mode.



3.9.9 Factory Reset


Tap the icon  on the System menu and enter into following interface.



3.9.10 Nav Path



Tap the icon **Nav Path** in the setting menu and enter into following interface.

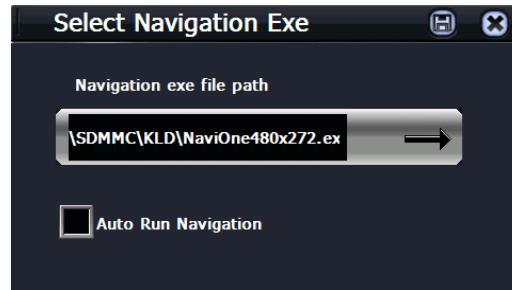

: close window and return : save

: tap to browse the navigation programs, often the program stored in the SD card and double tap the exe file icons to select.

Warranty

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.