

Photographs of EUT



Primary Antenna & Secondary Antenna with Cover

Primary Antenna(right) & Secondary Antenna(left)





External ports



Primary Antenna (located at Bottom of Antenna)



Primary Antenna (located at Bottom of Antenna)




External ports




Secondary Antenna (located at Bottom of Antenna)

Label drawing:

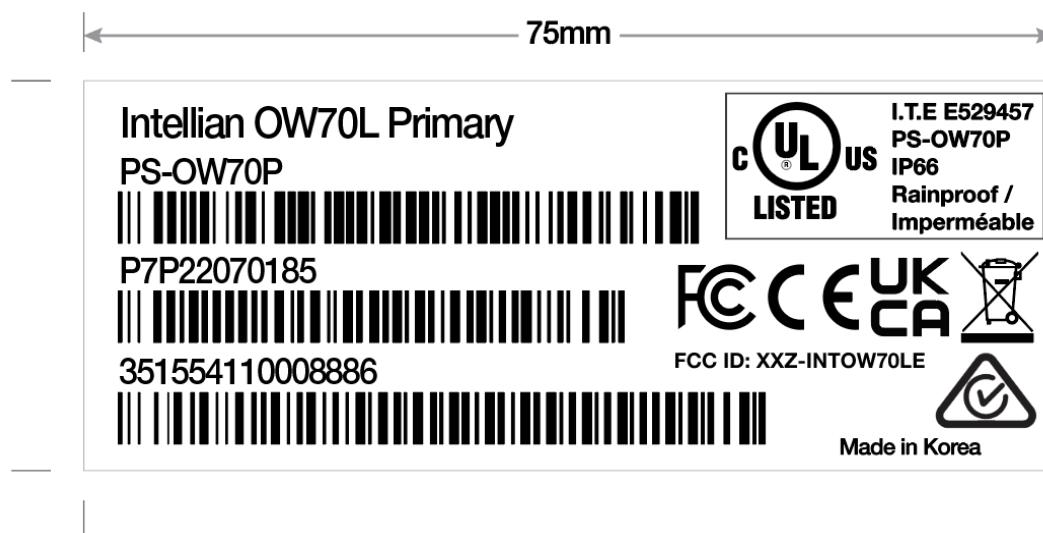

for Primary Antenna Unit

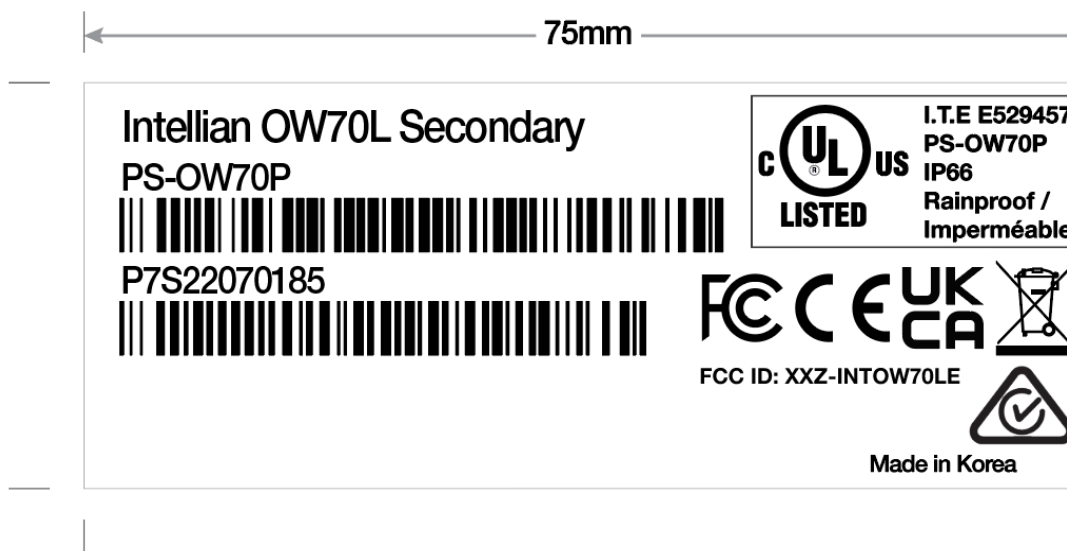

for Secondary Antenna Unit

CNX-BB (Customer Network Exchange)






CNX-BB (Customer Network Exchange)



Customer Network Exchange I/O port

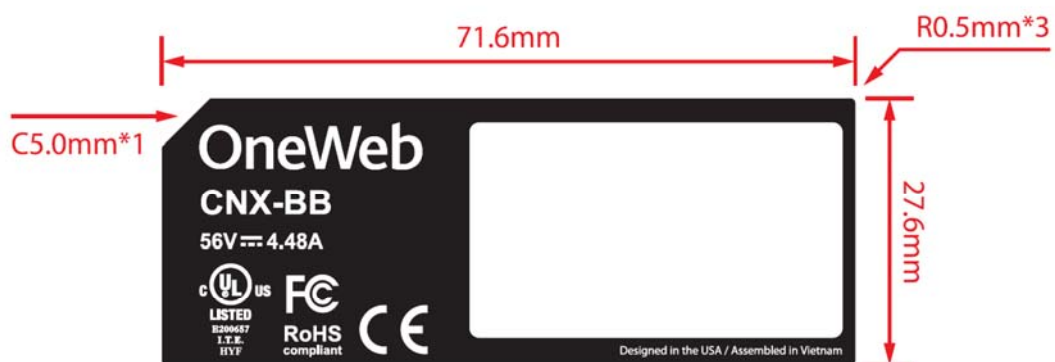

Label

AC Adapter for CNX-BB

