




Photographs of EUT

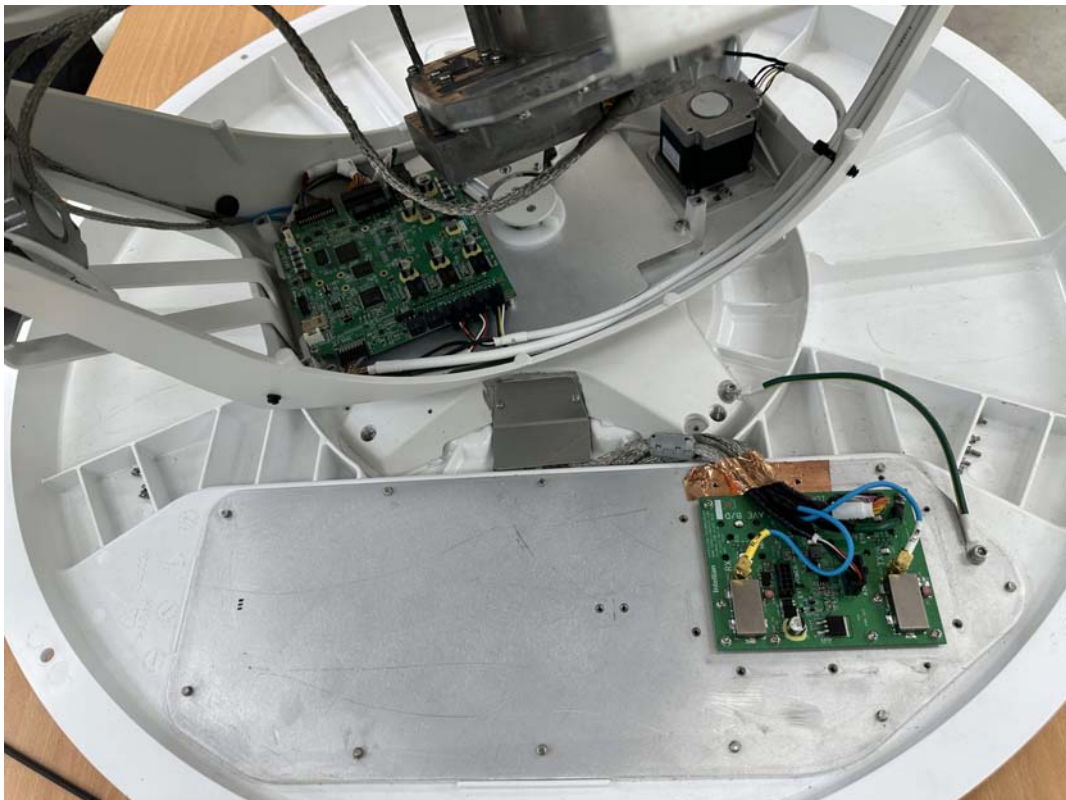

Primary Antenna Unit Cover opened (overall)





Secondary Antenna Unit Cover opened (overall)





AIM board

installed in (Primary and Secondary Antenna Unit)

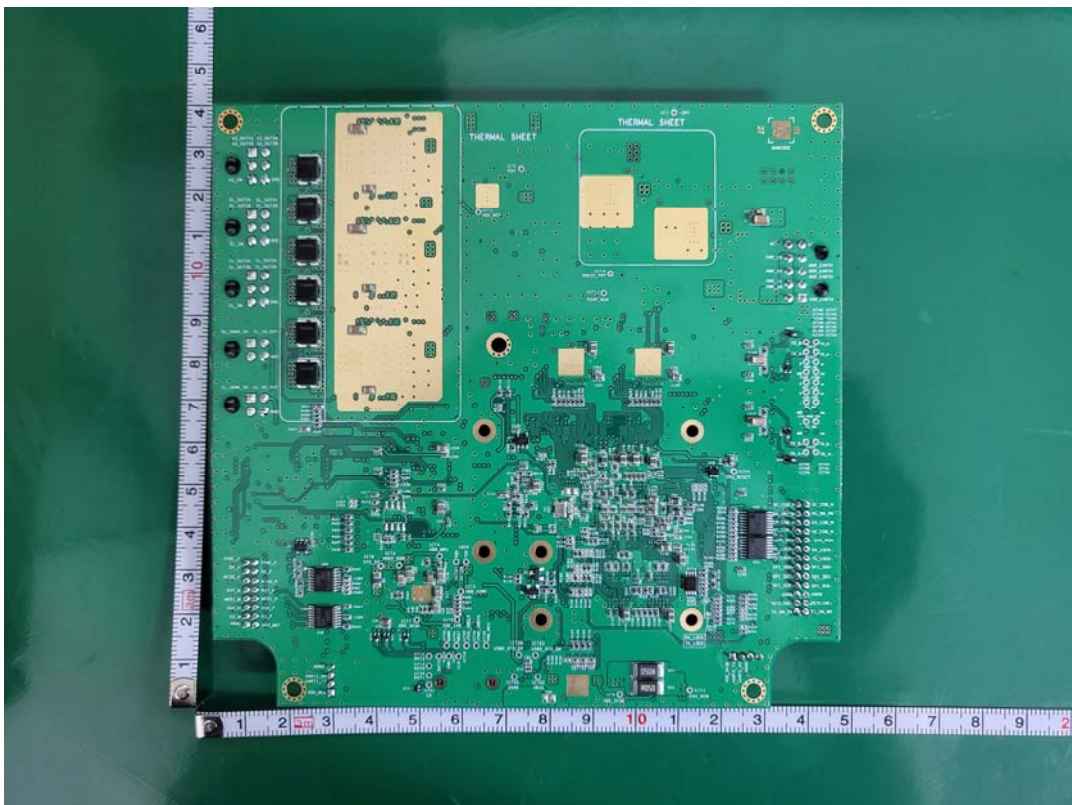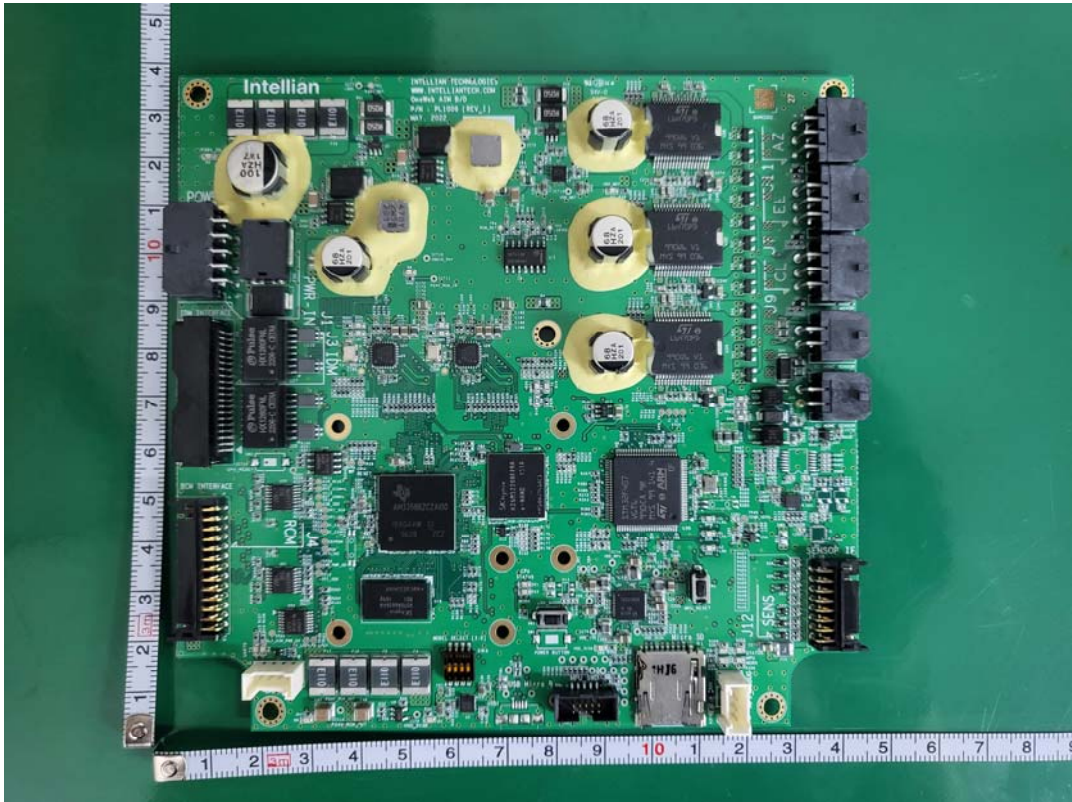



IMU board

installed in (Primary and Secondary Antenna Unit)

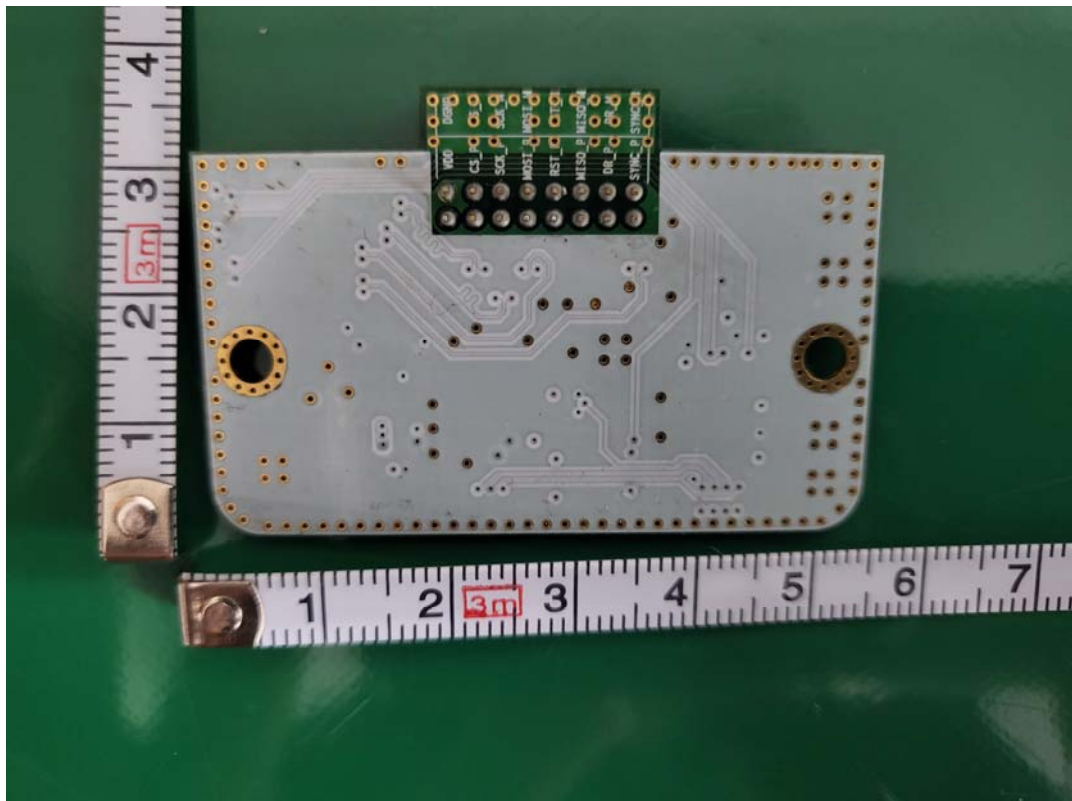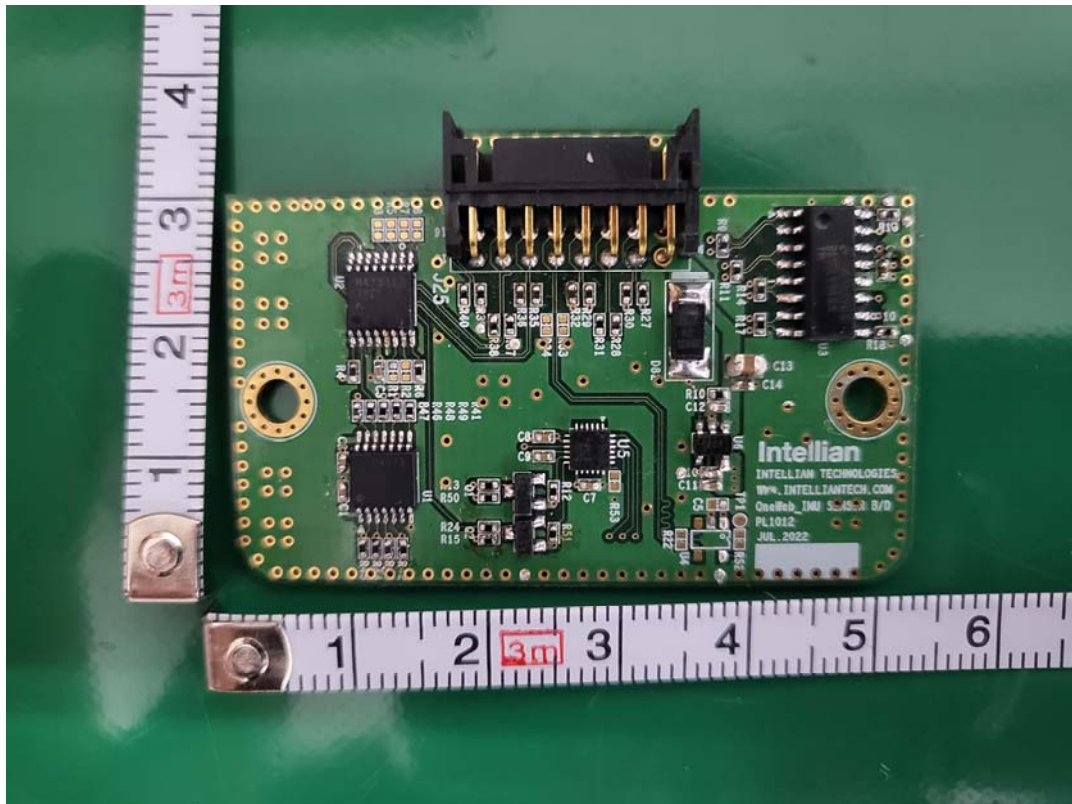

RCM board



installed in (Primary and Secondary Antenna Unit)

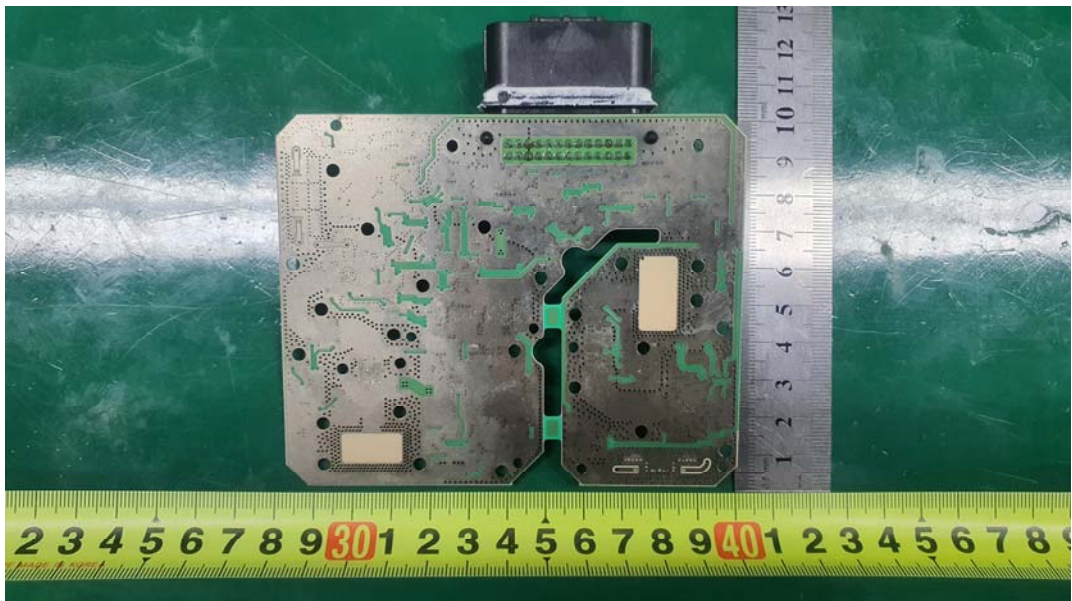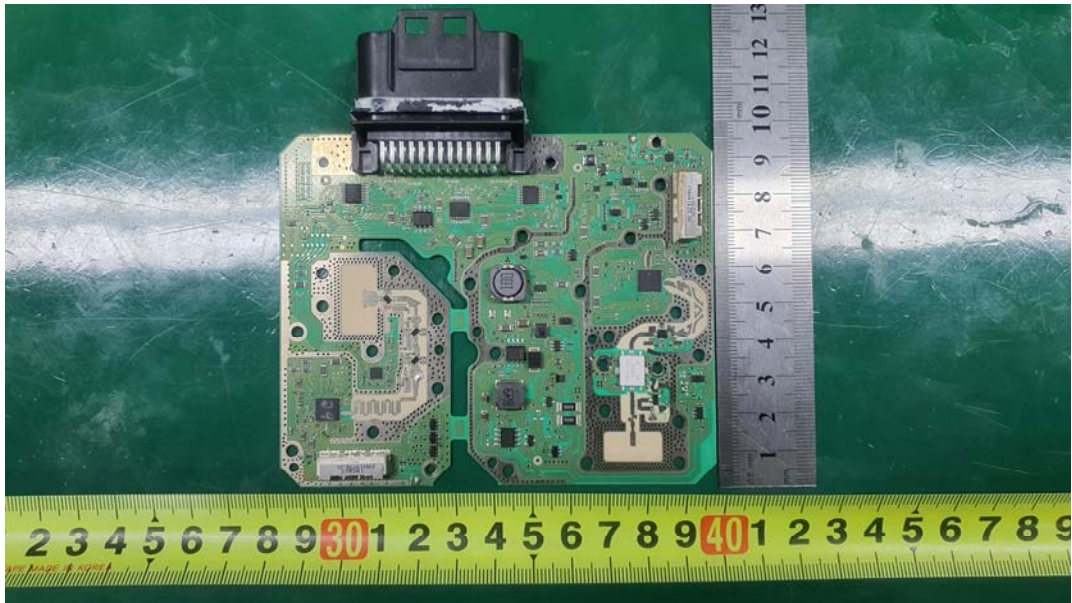



DDM board



installed in (Primary Antenna Unit)

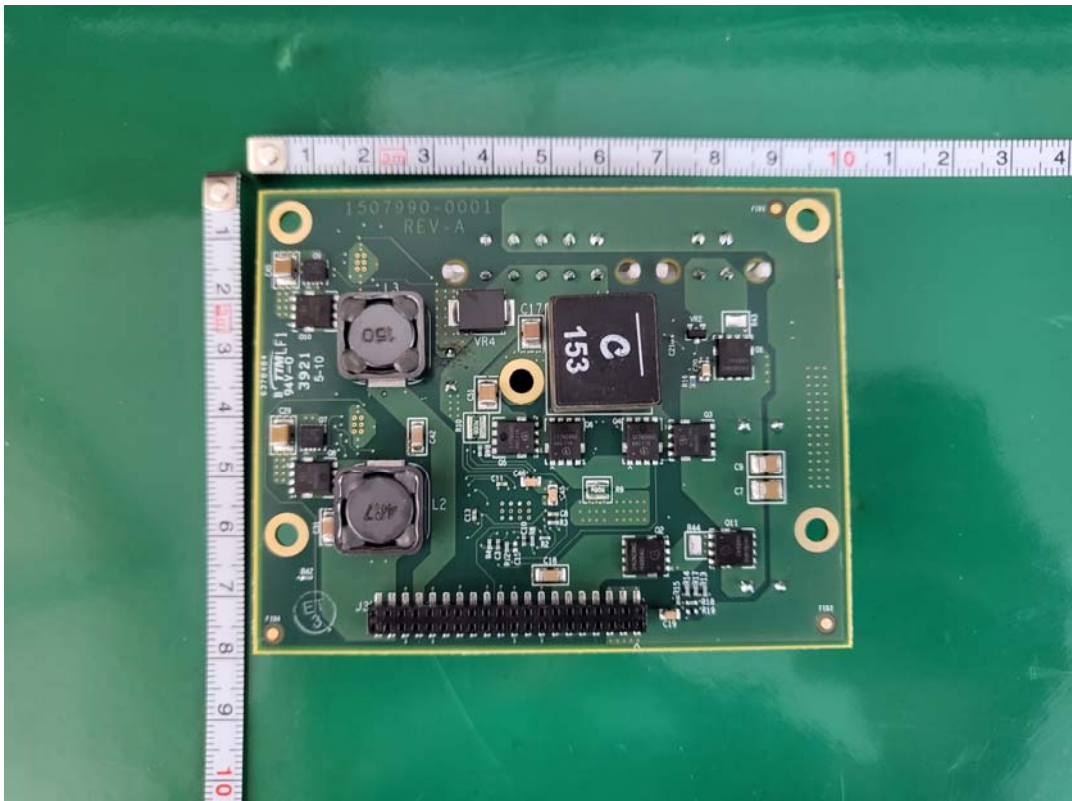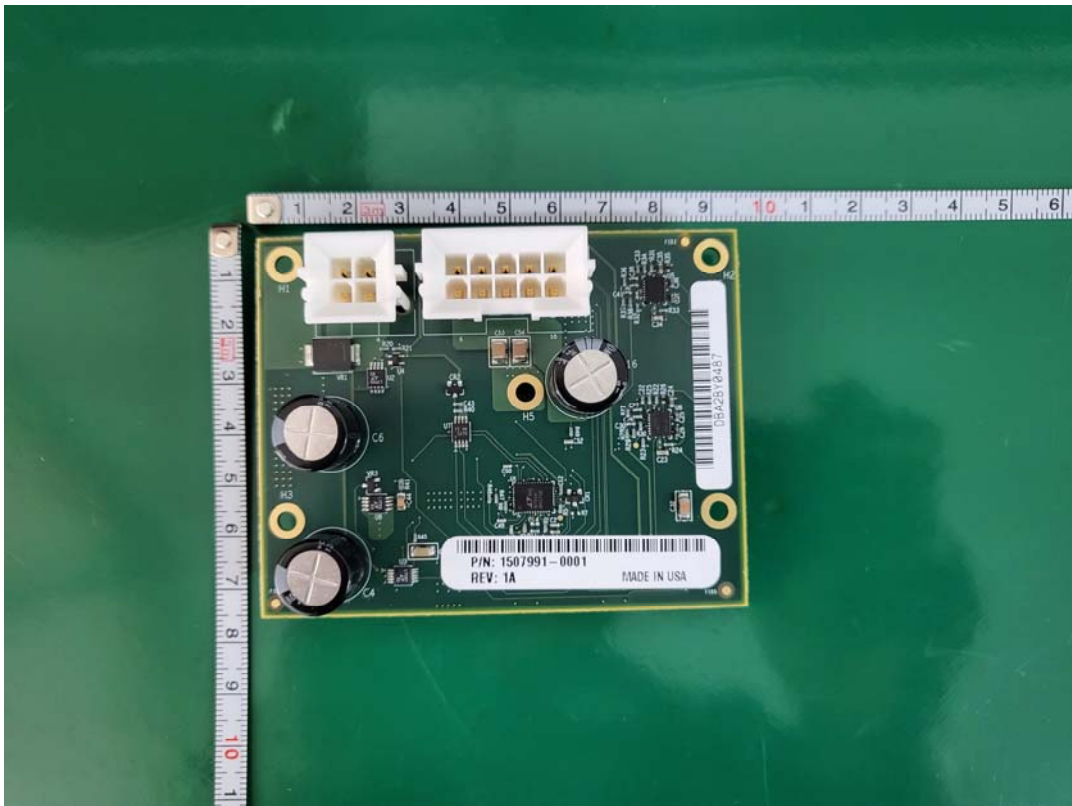



EGR board



installed in (Primary Antenna Unit)

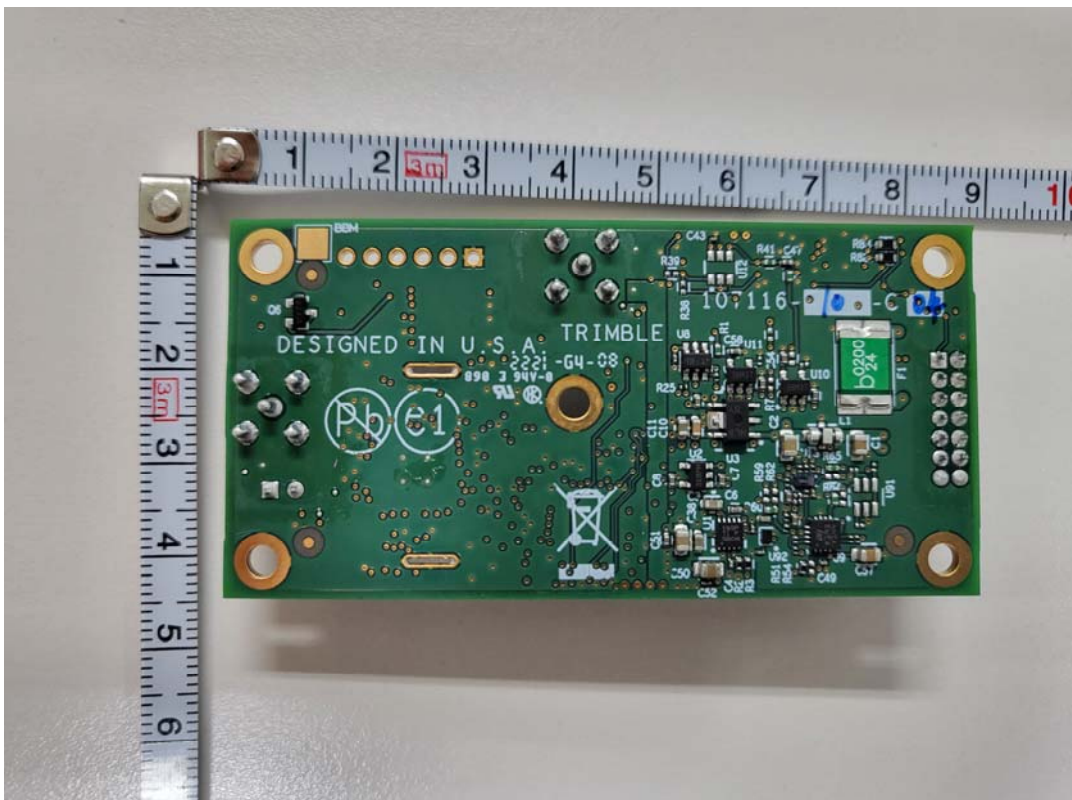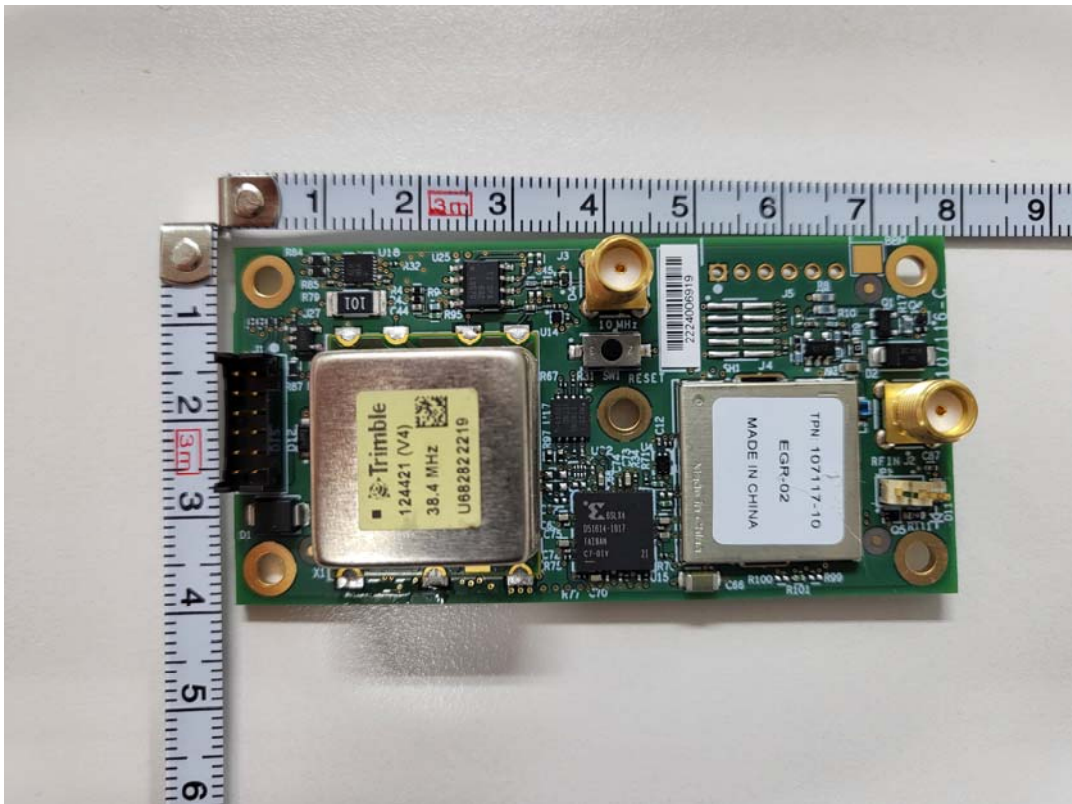




IDM board

installed in (Primary Antenna Unit)

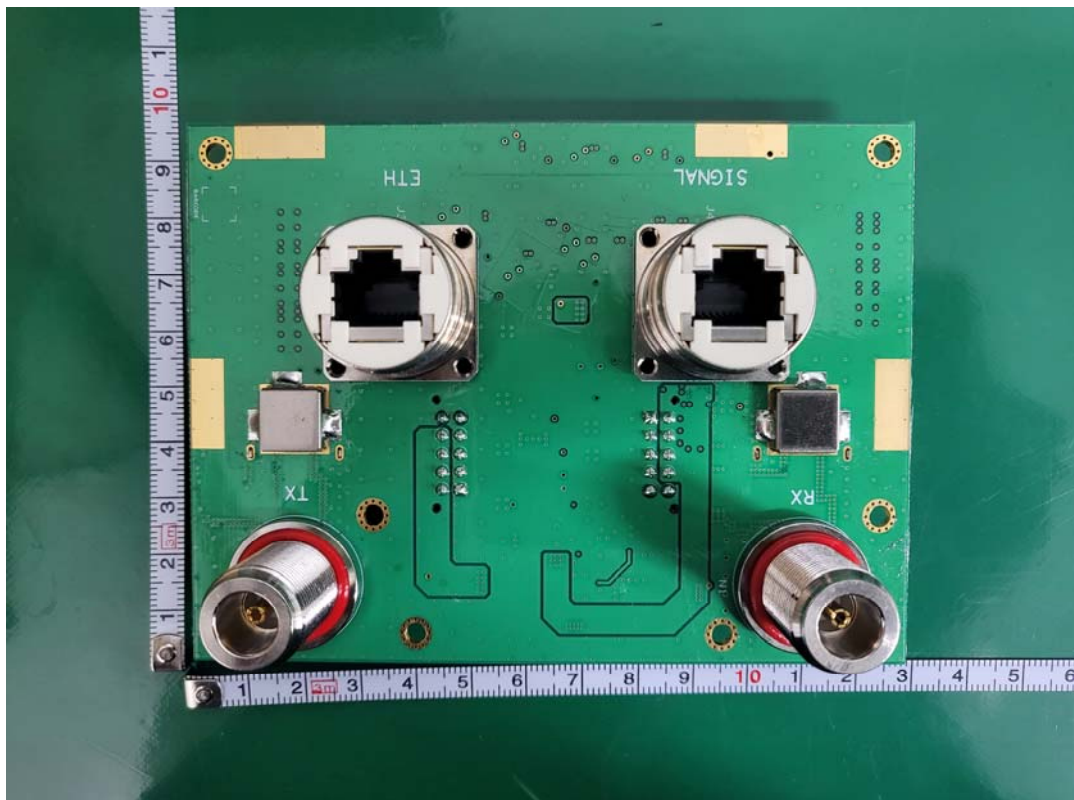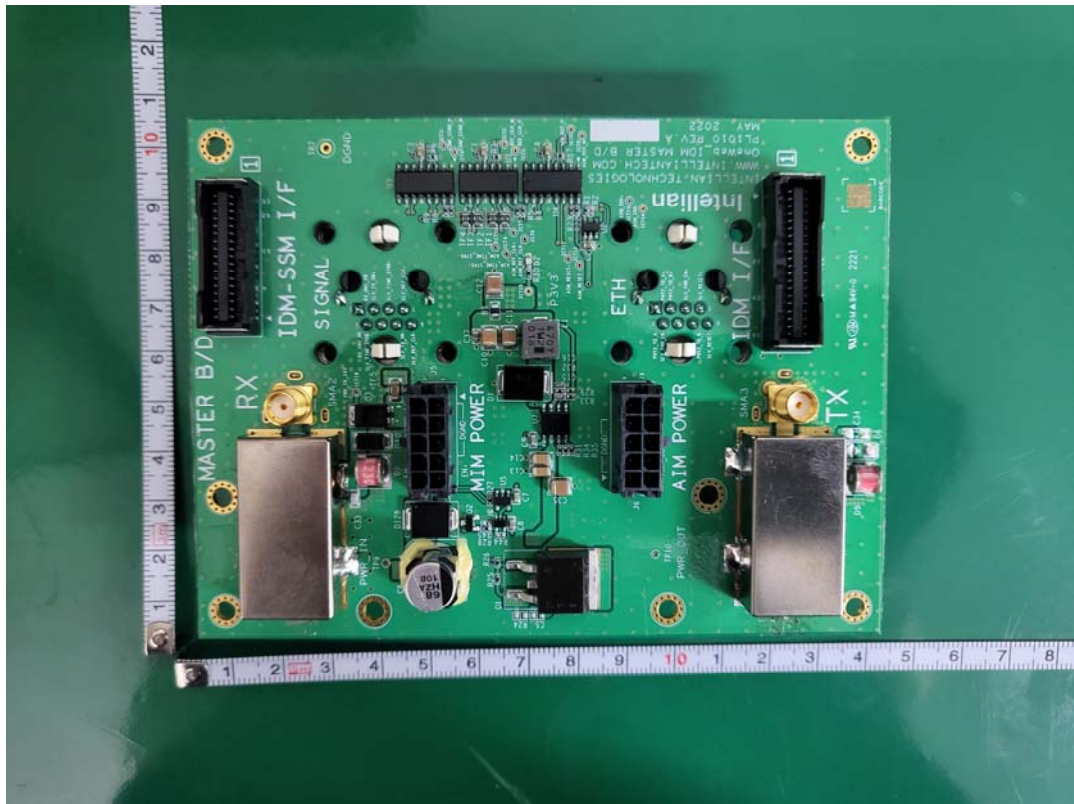

IDM board

installed in (Primary Antenna Unit)


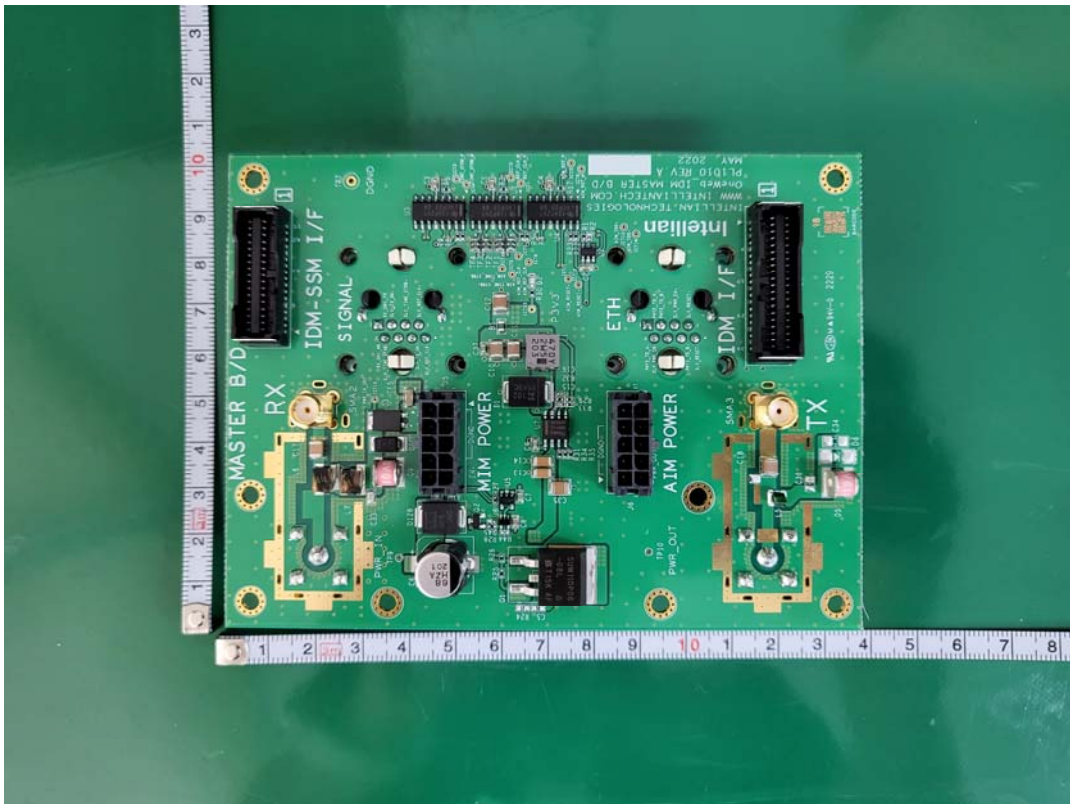


Shielding CAN removed



SSM board


installed in (Primary Antenna Unit)

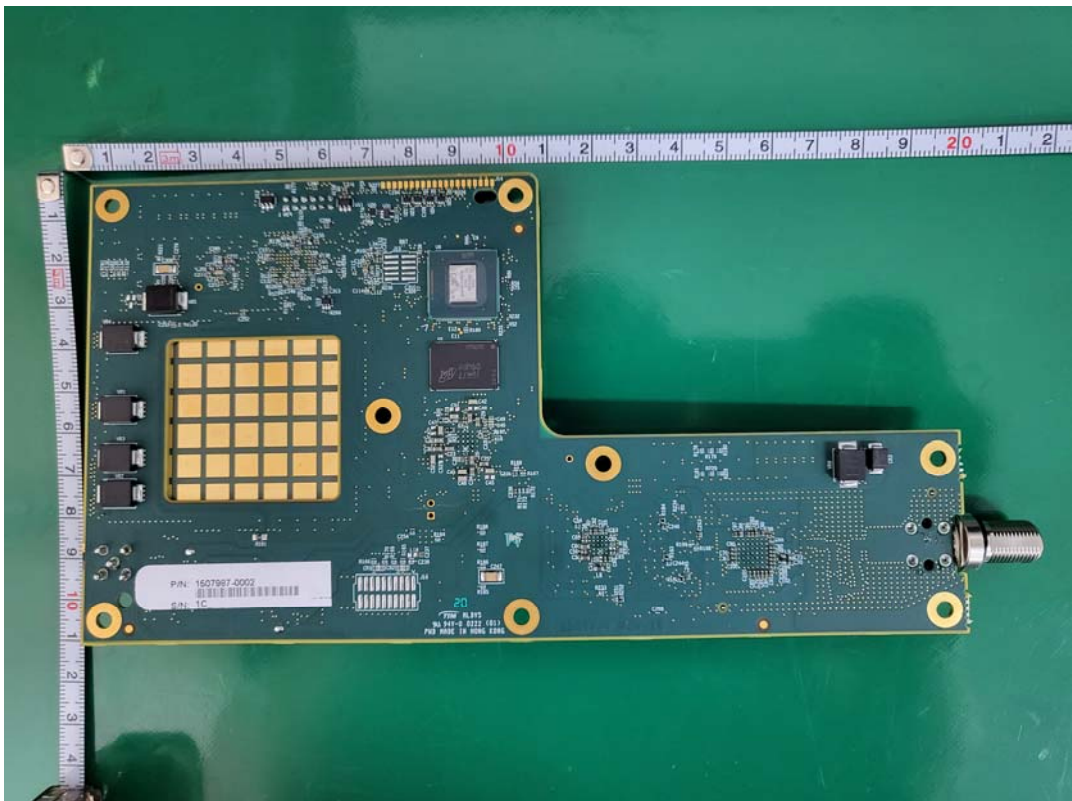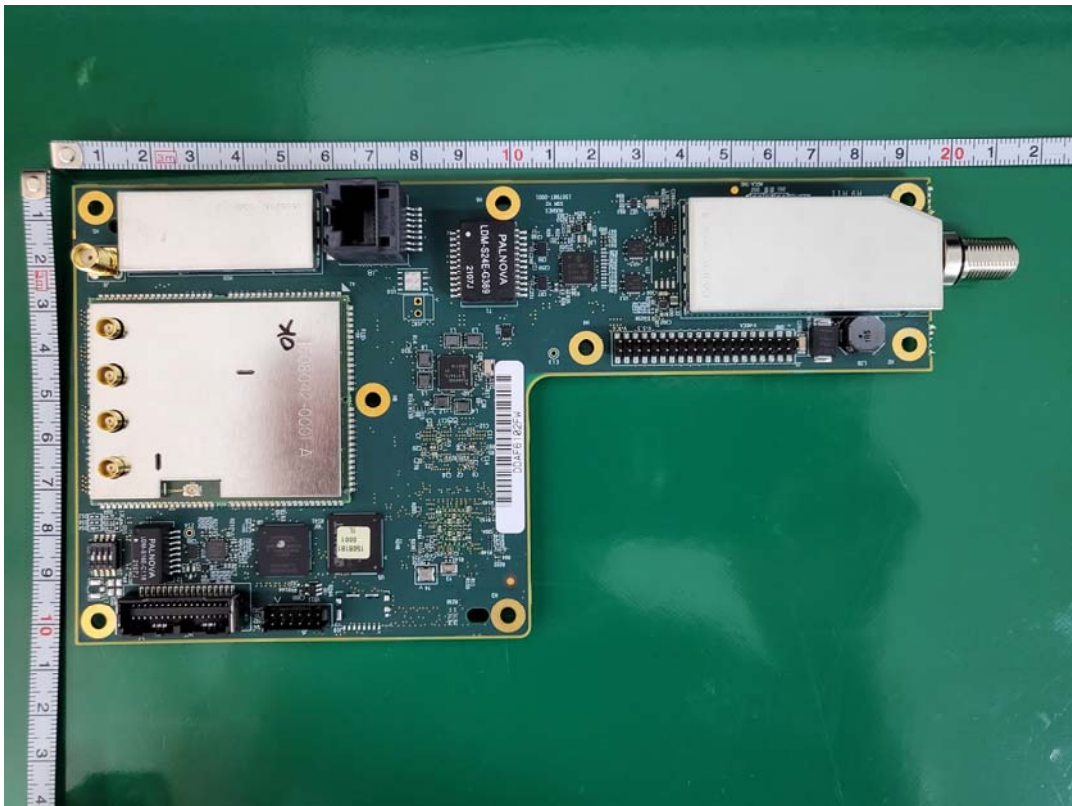



SSM board

installed in (Primary Antenna Unit)


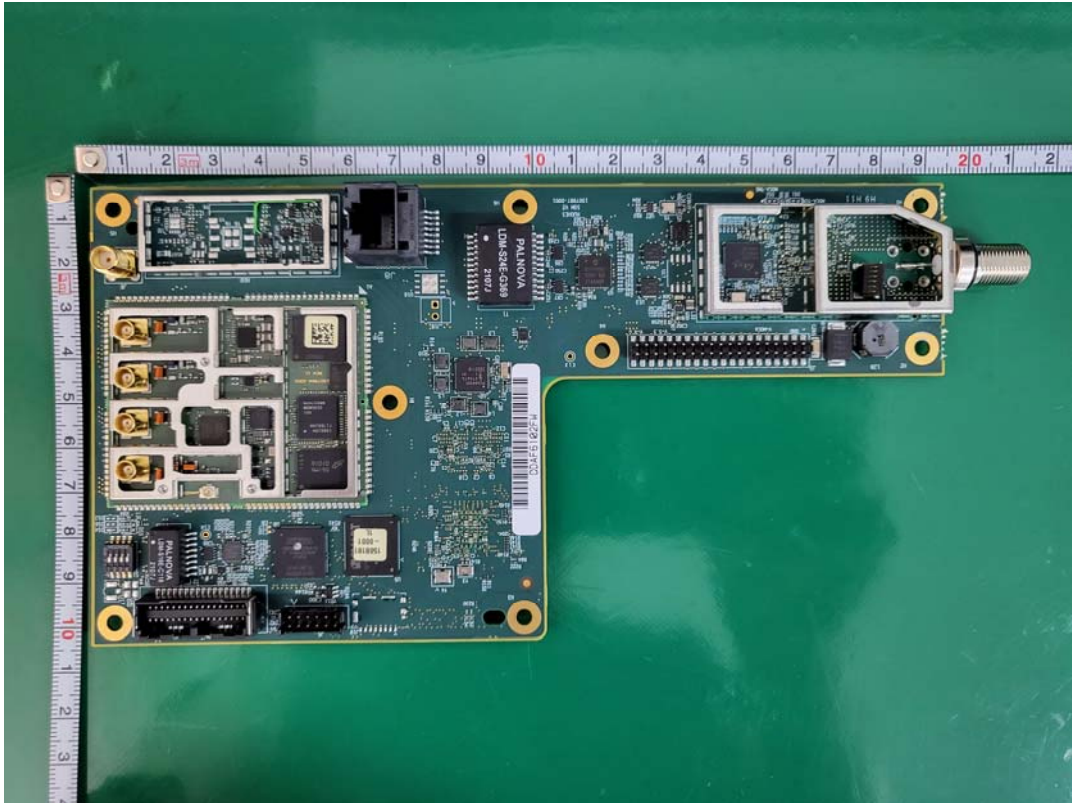


Shielding CAN removed




IDM board

installed in (Secondary Antenna Unit)

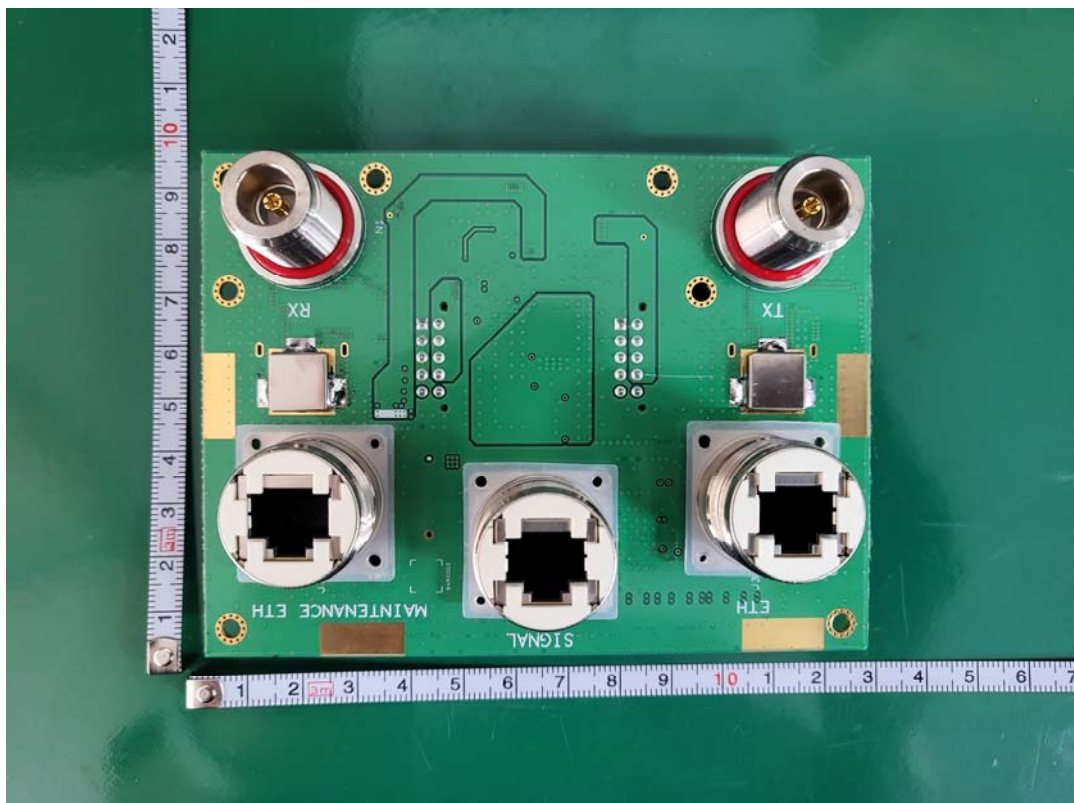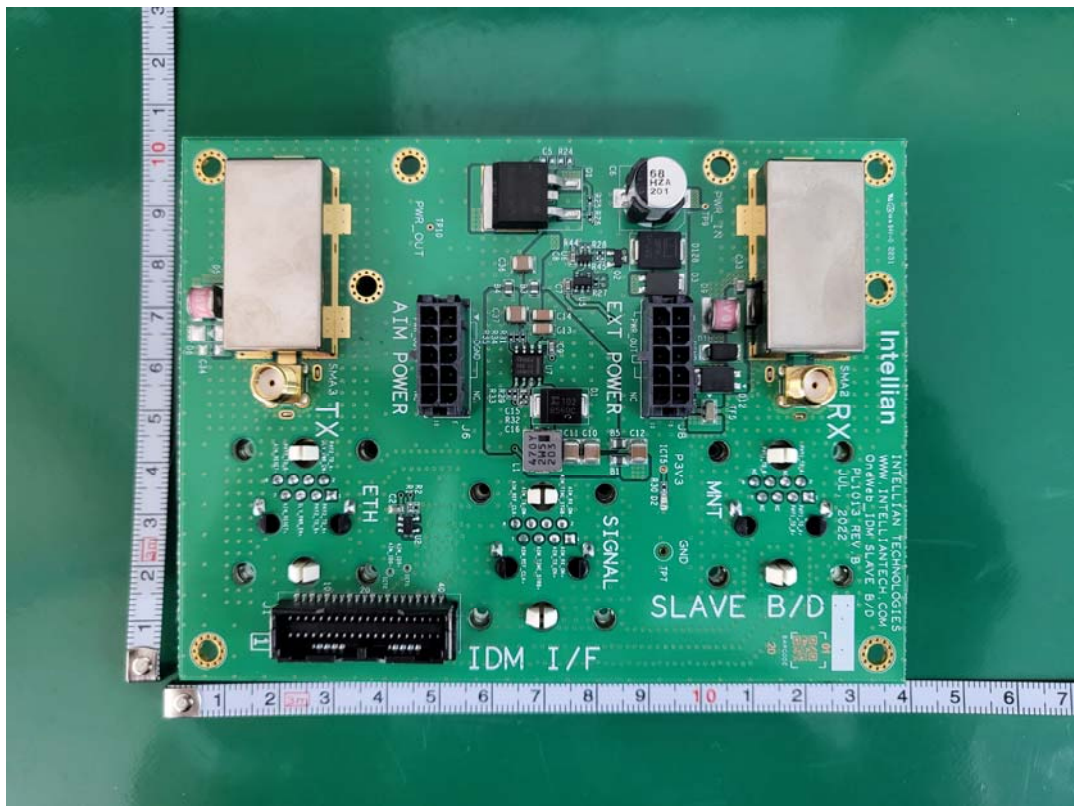

IDM board

installed in (Secondary Antenna Unit)

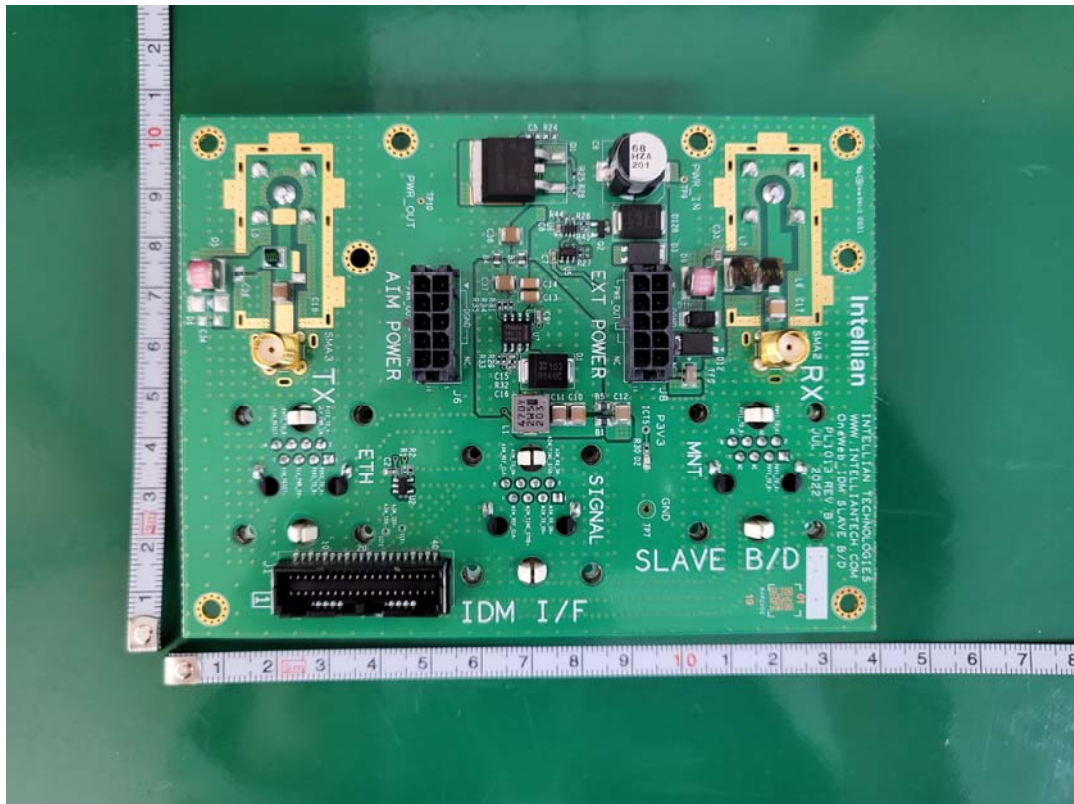

Shielding CAN removed





CNX-BB





Mainboard


installed in (CNX-BB)

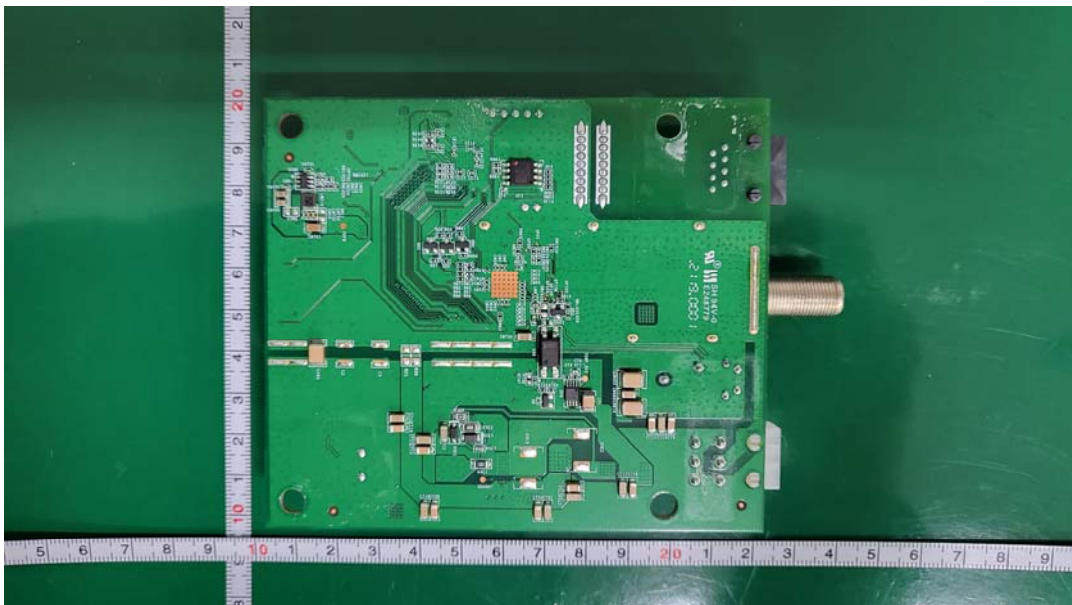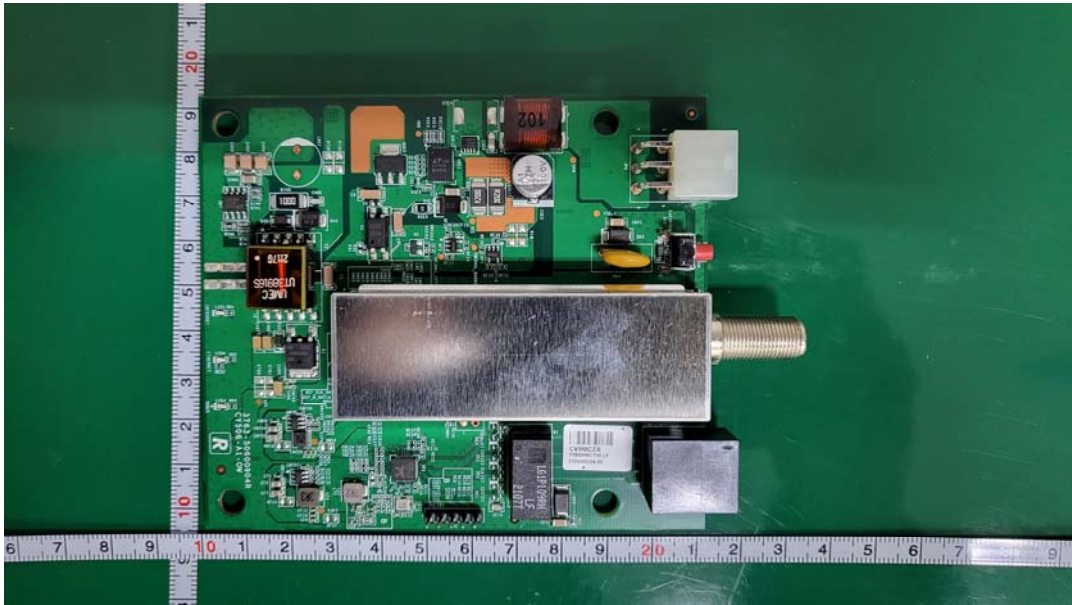



Mainboard

installed in (CNX-BB)

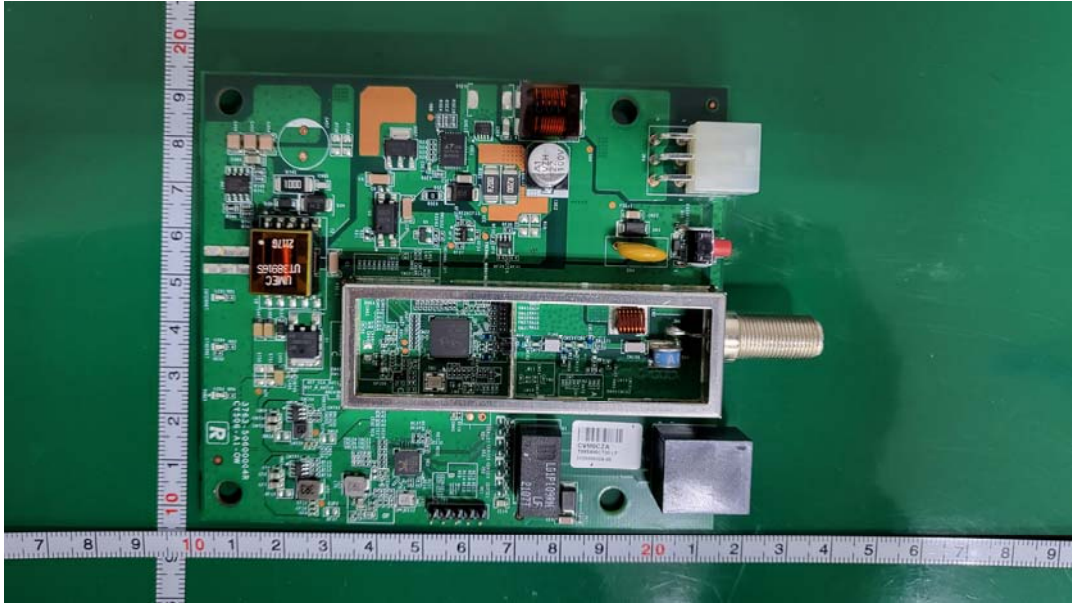

Shielding CAN removed