



NeverMiss

MS320

*People need You,
not just your Phone*

DRAFT

www.remoteringer.com

Simply turn it on...

Press and hold the button. Release when your NeverMiss vibrates. The light on the other side now blinks **blue** every 7 seconds.

Your new NeverMiss needs charging before first use (about 2 hours), and paired with your cell phone. See “Pairing your new device”.

...Clip it...




The side with light & logo goes onto your skin. Clip it on clothing, slip into a bra cup, waistband, socks or even a snug sleeve. You can also remove the clip by first pressing in the small tab.

...No stress. You're in touch.

Your NeverMiss will give short vibrations when your phone is ringing. If you leave your phone, it will give one long buzz to remind you.

Pairing your new device

Please charge your new NeverMiss. Use the wall plug, or connect the cable directly to a computer USB port. The NeverMiss' **red** light is on until charging is done (about two hours).

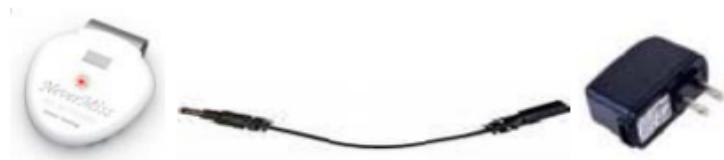

Then pair with your Bluetooth®-enabled phone:

- ✓ **Your phone's Bluetooth® must be ON – look for the symbol .**
- ✓ Start with your NeverMiss off (no light blinks). Hold the NeverMiss button 5 seconds, even after it vibrates, until the **blue** light stays on.
- ✓ Find the Bluetooth® discovery (pairing) mode in your cell phone, and accept the connection to the NeverMiss (ID: RR2Vib, password 0000). *It's usually under Settings / Bluetooth. If it is hard to*

find, check your phone's manual, or website, or visit our website for links: www.remoteringer.com

Now paired, the NeverMiss vibrates once, then the **blue** light blinks slowly. Done!

More about your NeverMiss

You don't want to miss a call from the people who need to reach you. The NeverMiss helps both in noisy places and in quiet meetings. You are informed of the incoming call without advertising to the people around you.

Turning NeverMiss on and off...

Press the button for two seconds to turn NeverMiss ON...	<i>NeverMiss vibrates once. Blue light blinks every seven seconds.</i>
Press for four seconds to turn NeverMiss OFF...	<i>NeverMiss vibrates three times. Lights are now off.</i>

Charging your NeverMiss...

Your NeverMiss works for at least a day before it needs recharging. When the battery is low the light will blink red instead of blue.

When the battery is too low, the NeverMiss will vibrate 3 times and turn off automatically.

Connect the cable to the wall charger which plugs into standard US wall outlets. Charge until the red light turns off (about two hours). The charging cable can also be plugged directly to a computer USB port.

When your phone rings...

The NeverMiss is designed to notify you of phone calls by vibrating while pressed against your skin.

When your cell phone rings the NeverMiss gives you three short double-vibrations. It then remains quiet until the next call.

When you leave your phone...

When you leave your cell phone behind, the NeverMiss will give one long vibration to remind you that it can no longer notify you of calls - and in case you forgot your phone!

The link between your cell phone and NeverMiss reaches about twenty-five feet in open air, reduced by walls and other objects in the area.

When you return to the phone, your NeverMiss quietly reconnects (within about 1 minute).

Only want to receive special calls?

Your new NeverMiss will vibrate when anyone calls. **If you only want to be notified when certain people call, you can save their numbers:**

When a “special” person is ringing, hold the button for five seconds...	<i>NeverMiss vibrates (and blinks) once to confirm the number is saved.</i>
If you decide they are no longer “special”, when they call just double-click the button (press-release-press)...	<i>NeverMiss vibrates once to confirm the number is removed. The Red light blinks.</i>
To return to being notified of every call, hold the button for twelve seconds...	<i>NeverMiss vibrates three times as all numbers are removed.</i>

You can save up to 16 “special” numbers, and your NeverMiss will vibrate only when they are calling.

Trying to save more gets a double-buzz: your list is full.

Other Questions?

For more information, tips and suggestions, and to register your product, please visit our website:

www.remoteringer.com

Warranty

Your NeverMiss is designed, built, and tested to serve you well for years of use. If it does not, please contact us at the website below.

If in the first year from purchase, your NeverMiss is found to be defective in workmanship, we will replace the product and apologize for the inconvenience.

Contact us at www.remoteringer.com or write to the address at the end of this manual.

© “Bluetooth” and the blue-and-white figure mark are trademarks of Bluetooth SIG, Inc.

© NeverMiss and the swirl figure mark are trademarks of RemoteRinger LLC.

FCC Notice to Users

FCC ID Y2C3208. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Users are not permitted to make changes or modify the device. (*instead, contact us with your idea and we'll try to help!*)

RF warning statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Never Miss

People need You, not just your Phone



Remote Ringer LLC www.remoteringer.com
12165 Upper Heather Ave N., Hugo MN 55038

MS320-IM5