

For Insert Card

Title :

Magic Dress! This is not only the normal dress and wand which you can light-up with them individually, but also the dress can be interacted by the wand switch on this Magic Dress!!!

How to play :

Light Up the “Magic Dress !” Please follow below step :

Step One : Please ensure remove the plastic tape on wand and slide “Normal” switch on dress first

Step Two : Press the button of wand to light up the dress

Customer Information :

Warning ! Not suitable for children under 3 years of age, due to small parts.

Colours and contents may vary from items shown. Where applicable, remove all packaging before giving this item to your child.

For Instruction Sheet

1) Dress Light-up independently



a) Slide “Normal” the switch on dress first



b) Press “Gem” button on front of the dress

2) Dress Light-up interactive with wand

a) Slide “Normal” the switch on dress first



b) Remove the plastic tape at battery case



c) Press the button of the wand, the light of wand and dress will flash

ATTENTION : Battery / Batteries should be installed by an adult only.

Battery Installation - Dress

- 1) Use a small Phillips head screwdriver to loosen the screw on the battery compartment. Remove **BATTERY COVER**.
- 2) Place 2 fresh, new AAA (LR03) Alkaline batteries in the battery compartment, with each battery pointing in the direction shown.
IMPORTANT : Observe battery polarity (+ and -)
- 3) Replace battery cover. Tighten screw

Battery Installation – Wand

- 1) Use a small Phillips head screwdriver to loosen the screw on the battery compartment. Remove **BATTERY COVER**.
- 2) Place 3 fresh, new AG3 (LR41) batteries in the battery compartment, with each battery pointing in the direction shown.
IMPORTANT : Observe battery polarity (+ and -)
- 3) Replace battery cover. Tighten screw

Warning ! Not suitable for children under 3 years of age, due to small parts.

Colours and contents may vary from items shown. Where applicable, remove all packaging before giving this item to your child.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help**