



grass valley

LDX 100

LIVE PRODUCTION CAMERA

User's Guide

13-00096-000

2020-12-24

www.grassvalley.com

FCC Compliance

In order to comply with FCC/CFR47: Part 15 regulations, it is necessary to use high-quality, triple-screened Media or Monitor cable assemblies with integrated ferrite suppression at both ends.

Patent Information

This product may be protected by one or more patents.

For further information, please visit: www.grassvalley.com/patents/

Copyright and Trademark Notice

Grass Valley®, GV® and the Grass Valley logo and/or any of the Grass Valley products listed in this document are trademarks or registered trademarks of GVBB Holdings SARL, Grass Valley USA, LLC, or one of its affiliates or subsidiaries. All other intellectual property rights are owned by GVBB Holdings SARL, Grass Valley USA, LLC, or one of its affiliates or subsidiaries. All third party intellectual property rights (including logos or icons) remain the property of their respective owners.

Copyright ©2020-2020 GVBB Holdings SARL and Grass Valley USA, LLC. All rights reserved. Specifications are subject to change without notice.

Terms and Conditions

Please read the following terms and conditions carefully. By using LDX 100 Series documentation, you agree to the following terms and conditions.

Grass Valley hereby grants permission and license to owners of LDX 100 Series to use their product manuals for their own internal business use. Manuals for Grass Valley products may not be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose unless specifically authorized in writing by Grass Valley.

A Grass Valley manual may have been revised to reflect changes made to the product during its manufacturing life. Thus, different versions of a manual may exist for any given product. Care should be taken to ensure that one obtains the proper manual version for a specific product serial number.

Information in this document is subject to change without notice and does not represent a commitment on the part of Grass Valley.

Warranty information is available from the Legal Terms and Conditions section of Grass Valley's website (www.grassvalley.com).

Title LDX 100 User's Guide

Part Number 13-00096-000

Revision 2020-12-24, 09:56

Important Safety Information

This section provides important safety guidelines for operators and service personnel. Specific warnings and cautions appear throughout the manual where they apply. Please read and follow this important information, especially those instructions related to the risk of electric shock or injury to persons.

Symbols and Their Meanings



Indicates that dangerous high voltage is present within the equipment enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



Indicates that the user, operator or service technician should refer to the product manuals for important operating, maintenance, or service instructions.



Indicates that static sensitive components are present, which may be damaged by electrostatic discharge. Use anti-static procedures, equipment and surfaces during servicing.



The presence of this symbol in or on Grass Valley equipment means that it has been tested and certified as complying with applicable Underwriters Laboratory (UL) regulations and recommendations for USA.



The presence of this symbol in or on Grass Valley equipment means that it has been tested and certified as complying with applicable Canadian Standard Association (CSA) regulations and recommendations for USA/Canada.



The presence of this symbol in or on Grass Valley equipment means that it has been tested and certified as complying with applicable Underwriters Laboratory (UL) regulations and recommendations for USA/Canada.



Intertek

The presence of this symbol in or on Grass Valley equipment means that it has been tested and certified as complying with applicable Intertek Testing Services regulations and recommendations for USA/Canada.



The presence of this symbol in or on Grass Valley product means that it complies with all applicable European Union (CE) directives.



The presence of this symbol in or on Grass Valley product means that it complies with safety of laser product applicable standards.

Warnings



A warning indicates a possible hazard to personnel, which may cause injury or death. Observe the following general warnings when using or working on this equipment:


- Any instructions in this manual that require opening the equipment cover or enclosure are for use by qualified service personnel only.
- Do not operate the equipment in wet or damp conditions. If the unit is in a wet or damp environment, a rain cover must be used to protect it for personal safety reasons.
- Disconnect power before cleaning the equipment. Do not use liquid or aerosol cleaners; use only a damp cloth.
- Dangerous voltages may exist at several points in this equipment. To avoid injury, do not touch exposed connections and components while power is on.
- Prior to servicing, remove jewelry such as rings, watches, and other metallic objects.
- To avoid explosion, do not operate this equipment in an explosive atmosphere.
- Have qualified service personnel perform safety checks after any service.

Cautions



A caution indicates a possible hazard to equipment that could result in equipment damage. Observe the following cautions when operating or working on this equipment:

- Products that have no on/off switch, and use an external power supply must be installed in proximity to a main power outlet that is easily accessible.
- Do not operate with suspected equipment failure. If you suspect product damage or equipment failure, have the equipment inspected by qualified service personnel.
- To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer all servicing to qualified service personnel.
- Follow static precautions at all times when handling this equipment. Servicing should be done in a static-free environment.
- Provide proper ventilation. To prevent product overheating, provide equipment ventilation in accordance with the installation instructions. Do not block the hot airflow coming from air outlet(s).

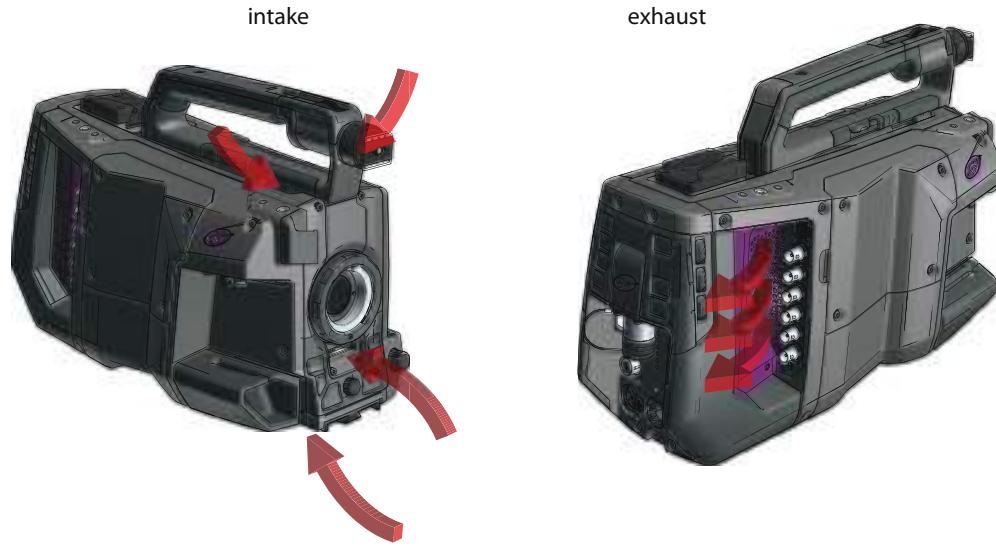

Precautions

To ensure continual high performance from the camera take the following precautions into consideration:

- Avoid damp places. If the environment is wet or damp a rain cover must be used to protect the unit.
- Do not subject the unit to severe shocks or vibration.
- Do not expose the camera to extremes of temperature.
- Do not leave the unit in direct sunlight or close to heating appliances for extended periods.
- Do not allow sunlight to shine into the viewfinder.
- Do not allow laser beams to shine into the lens as this could damage the imagers.
- Avoid extreme highlights as these can cause various kinds of optical reflections.
- Be careful when connecting and disconnecting fiber cables.
- Do not connect Grass Valley camera systems with other manufacturer's camera system parts.
- Make connections swiftly and firmly to avoid false error messages.

Electrostatic Discharge (ESD) Protection



Electrostatic discharge occurs when electronic components are improperly handled and can result in intermittent failure or complete damage adversely affecting an electrical circuit. When you remove and replace any card from a frame always follow ESD-prevention procedures:

- Ensure that the frame is electrically connected to earth ground through the power cord or any other means if available.

- Wear an ESD wrist strap ensuring that it makes good skin contact. Connect the grounding clip to an *unpainted surface* of the chassis frame to safely ground unwanted ESD voltages. If no wrist strap is available, ground yourself by touching the *unpainted* metal part of the chassis.
- For safety, periodically check the resistance value of the antistatic strap, which should be between 1 and 10 megohms.
- When temporarily storing a card make sure it is placed in an ESD bag.
- Cards in an earth grounded metal frame or casing do not require any special ESD protection.

Environmental Information

European (CE) WEEE directive.



This symbol on the product(s) means that at the end of life disposal it should not be mixed with general waste.

Visit www.grassvalley.com for recycling information.

Grass Valley believes this environmental information to be correct but cannot guarantee its completeness or accuracy since it is based on data received from sources outside our company. All specifications are subject to change without notice.

If you have questions about Grass Valley environmental and social involvement (WEEE, RoHS, REACH, etc.), please contact us at environment@grassvalley.com.

Laser Safety - Fiber Output SFP and QSFP Modules Warning

LASER SAFETY



The average optical output power does not exceed 0 dBm (1mW) under normal operating conditions. Unused optical outputs should be covered to prevent direct exposure to the laser beam.

Even though the power of these lasers is low, the beam should be treated with caution and common sense because it is intense and concentrated. Laser radiation can cause irreversible and permanent damage of eyesight. Please read the following guidelines carefully:

- Make sure that a fiber is connected to the board's fiber outputs before power is applied. If a fiber cable (e.g. patchcord) is already connected to an output, make sure that the cable's other end is connected, too, before powering up the board.
- **Do not** look in the end of a fiber to see if light is coming out. The laser wavelengths being used are totally invisible to the human eye and can cause permanent damage. Always use optical instrumentation, such as an optical power meter, to verify light output.

Safety and EMC Standards

This equipment complies with the following standards:

Safety Standards



IEC62368-1:2018

Audio/video, information and communication technology equipment: part 1

EN 62368-1:2018

EU national deviations.

EMC Standards

This unit conforms to the relevant Union harmonization legislation and the requirements of the following directive/standards:

RED 2014/53/EU

EMC testing; EN 301 489-1 V2.2.3, EN 301 489-3 V2.1.1 and EN 301 489-19 V2.1.1.
EN 62311:2020N

Radio testing; EN 303 413 v1.1.1 (GPS)

Radio testing; EN 300 330 v2.1.1 (NFC)

FCC / CFR 47:Part 15 (Class A)

Federal Communications Commission Rules Part 15, Subpart B

Caution to the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

following the provisions of:

- the RED directive 2014/53/EU



Note

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



EU DECLARATION OF CONFORMITY

This Declaration of Conformity is issued under the sole responsibility of the manufacturer.

Manufacturer's Name: Grass Valley Nederland B.V.

Manufacturer's Address: Bergschot 69, 4817PA, Breda, The Netherlands

Trade/Brand Name: Grass Valley

Document Number: LDX100 -C01-100.docx

Device Name : LDX 100 (1-0200100-0000)

Device Description: LDX 100 Broadcast Camera

Year CE marking was first affixed to declared product/device: **20**

The product/device of the declaration described above is in conformity with the relevant Union harmonization legislation and the requirements of the following directive/standards:

RED 2014/53/EU

EMC testing; EN 301 489-1 V2.2.3, EN 301 489-3 V2.1.1 and EN 301 489-19 V2.1.1.
EN 62311:2020

Radio testing; EN 303 413 v1.1.1 (GPS)

Radio testing; EN 300 330 v2.1.1, (NFC)

Notified body Telefication BV, 0560 performed B+C assessment and issued an EU-type examination certificate RED
202140120/AA/00

Safety; IEC 62368-1: 2018 Audio/video, information and communication technology equipment: Part 1
EN 62368-1: 2018 EU national deviations.

Signed for and on behalf of Grass Valley Nederland B.V.

A handwritten signature in black ink, appearing to read "Julien Renaud".

Julien Renaud, Sr. Compliance Specialist
Montreal, Quebec, Canada – Issued on October 5, 2020

EMC performance of cables and connectors

Grass Valley products are designed to meet or exceed the requirements of the appropriate European EMC standards. In order to achieve this performance in real installations it is essential to use cables and connectors with good EMC characteristics.

All signal connections (including remote control connections) shall be made with screened cables terminated in connectors having a metal shell. The cable screen shall have a large-area contact with the metal shell.

SIGNAL/DATA PORTS

For unconnected signal/data ports on the unit, fit shielding covers. For example, fit EMI blanking covers to SFP(+) type ports and fit 75Ω RF terminators to BNC type ports.

COAXIAL CABLES

Coaxial cables connections (particularly serial digital video connections) shall be made with high-quality double-screened coaxial cables such as Belden 8281 or BBC type PSF1/2M and Belden 1694A (for 3Gbps).

D-TYPE CONNECTORS

D-type connectors shall have metal shells making good RF contact with the cable screen. Connectors having "dimples" which improve the contact between the plug and socket shells, are recommended.

Notices

toc

Table of Contents

1	Introduction	1
Welcome	1	
About this guide	1	
Related documents	1	
Technology	1	
Work Field	1	
Remote production	1	
Options	2	
Superior digital processing	2	
Key features	2	
System components and accessories	3	
2	Installation	5
Installing a (Q)SFP module	5	
Mounting a lens	5	
EC 2-100 viewfinder	6	
Mounting the viewfinder	6	
Positioning the viewfinder	8	
Distance viewing	9	
Microphone	10	
LDK 5301/10 Tripod adapter plate	10	
Adjusting the shoulder pad	12	
Adjusting the handgrip position	13	
3	Configurations	15
Camera mode	15	
NativeIP mode	15	
XCU mode	16	
DirectIP/IP+ with hybrid power extender	16	
Local mode	16	
Control network	16	
Locking	17	
Main video configurations	17	
NativeIP mode: 1X speed UHD workflow	17	
NativeIP mode: 1X speed UHD with redundancy workflow	18	
NativeIP mode: 3X Speed UHD workflow	19	
XCU mode: 1X Speed UHD workflow	20	

4 IP Media setup 21

Camera Connect	21
IP Media Network setup	22
Local ports setup.....	22
Main video	24
Main video in 4K uncompressed mode.....	25
IP Mon\Live tab	28
IP Video In tab.....	30
IP Audio tab.....	32
IP Intercom tab.....	34
PTP tab	36

5 Operating instructions..... 39

Using the camera.....	39
Powering the camera.....	39
Switching on	39
Location of controls and indicators.....	40
Camera front panel.....	40
Camera left panel	42
Camera back panel	43
Controlling the camera	46
Navigating the camera menu.....	46
Entering the camera menu	47
Finding your way.....	47
Leaving the camera menu	48
Making value changes.....	48
Undoing changes	49
Assigning user buttons	49
Left side and lens buttons	50
Handgrip button	51
Viewfinder controls.....	52
Front.....	52
Back	53
Viewfinder information	54
Indicators	54
On screen marker indicators	55
Viewfinder LED indicators	56
Information pages.....	57
Focus assist	59
Viewfinder zoom	59
Lens operation	59
Back focus adjustment.....	59
CLASS.....	59
Auto Iris.....	60
Extended Iris	61
Precision focus	62
Lens indicators in the viewfinder.....	62
Connecting audio	63

Analog audio	63
Digital audio	64
Using intercom	64
Selecting intercom channels	64
Adjusting intercom volume	65
Routing signals	65
Adjusting sidetone volume	65
Assigning buttons	66
Setting up the Tracker headset	66
Call button	66
Communication	67
Return video channels	67
PickMe button	67
Other communication	68
Managing files	68
Scene files	68
Operator files	69
Lens files	69
Media files	69
Standard files	69

6 Video setup 71

Video settings	71
Standard settings	71
Video mode	71
Sensitivity mode	71
Color bar	72
Gain	73
Gamma (NOT valid for HDR)	74
Gamma correction	74
Gamma curve	74
Gamma presets	74
Contrast	75
Contrast adjustment	75
Black Stretch	75
Knee (not valid for HDR)	76
Knee (in PowerCurves mode)	76
Knee (in compatibility mode)	77
Optical filters	78
Exposure	79
Exposure time	79
Lighting correction	80
V-Shift (vertical acquisition shift)	80
LED Wall Filter	80
Color	80
Color Temperature	80
Color Tint	81
Color Filter	81
Selecting color temperature	81

Variable color temperature	82
Auto White Balance	82
Saturation.....	84
Color Gamut	84
Color Protect.....	84
Secondary color correction	85
Sharpness.....	86
Detail	86
Texture	86
Advanced options.....	86
Lens related functions	87
Detail Equalizer	87
Skin Detail	87
Image control	89
Freeze Frame.....	89
Reverse Scan	89
Appendix A Menu references.....	91
Reference tables.....	91
Installation menu.....	92
Operator Toolbox menu.....	98
Production Setup.....	105
Creative Control.....	112
Configuration menu.....	118
Licenses menu	127
Diagnostics menu	130
Service menu.....	141
Appendix B Connectors.....	143
Right front side.....	143
Front microphone connector	144
Lens connector.....	144
Viewfinder connector.....	144
Right side connector panel	145
Ethernet Trunk/IP connector.....	145
REF/AES connector	146
BNC A to E connectors.....	146
HDMI connector.....	146
Back panel	147
Hybrid fiber transmission connector	147
USB connector	148
Intercom headset connector.....	148
Audio 1+2 input connectors	148
DC Power input connector.....	149
DC Power output connector	149
Auxiliary connector.....	150
RS-232 connector	151
C2IP Ethernet connector.....	151

Appendix C Video signals 153

XCU mode	153
Configuration	153
Baseband signals.....	153
IP Streams.....	153
NativeIP mode	153
Configuration	153
Baseband (BNC) signals.....	153
IP Streams.....	154
Incoming IP streams.....	155
Outgoing IP streams.....	157

Appendix D Procedures 161

Licenses.....	161
About licenses/options	161
Installation procedure	161
Calibrations	162
Black Calibration	162
Full Black.....	163
Formatting the SD Card.....	164
Updating camera software.....	164

Appendix E Installation of (Q)SFP modules 165

(Q)SFP modules configurations	165
Changing (Q)SFP modules	165
List of (Q)SFP modules.....	168

Appendix F Specifications 171

General	171
Camera	171
Video	171
Connectivity	172
Dimensions	173

Contact Us 175

Table of Contents

1 Introduction

Welcome

The LDX 100 is high-end live production camera using the Grass Valley's new 2/3-inch UHD Titan imagers.

About this guide

The purpose of this guide is to present a detailed description of how to operate an LDX 100 camera. It provides the information necessary to use the camera in different configurations and with various attachments.

This guide describes all operating features of the camera so it can be used to its full potential. This guide is so designed that it can be used as an introduction to those who are new to the camera, as a simple procedural guide to those who wish to set-up and start shooting immediately, and as a reference work to be consulted as required during the long life of the camera.

Related documents

Before proceeding, check the Grass Valley website at www.grassvalley.com for the latest version of this user's guide and additional information:

- User's guide updates, data sheets, brochures and application notes.
- Camera software package updates, release notes and installation instructions.

Technology

Work Field

The LDX 100 is designed for flexibility, with the ability to be used for both dramatic productions and live broadcasts, especially sports. The use of compact broadcast 2/3-inch lenses with a B4-mount gives you the large zoom range, speed and depth of field which is required for demanding live and many dramatic productions.

Remote production

The LDX 100 is the best choice for At-Home/REMI (REmote Integration) productions. With the implementation of Grass Valley's NativeIP transmission, the LDX 100 is the first studio system camera that is fully IP based. Thanks to NativeIP, the camera connects directly to your IP infrastructure in studio and OB-production environments. Additionally, the LDX 100 can also operate in an existing XF transmission workflow using the XCU Universe UXF.

Options

The following options are available for the LDX 100:

- NativeIP
- UHD 3X
- UHD 1X

(Options can be installed using licenses)

Superior digital processing

The advanced video processing of the camera is done with floating point precision while all major camera functions are processed in the digital domain, including knee, gamma, detail, matrix and color correction.

To make images look their best, the LDX 100 incorporate TrueTexture™—a unique feature to preserve texture throughout all processing parameters.

Chromatic lens aberration correction (CLASS) offers impressive sharpness improvements on the outer regions of the image by canceling out shifts in color registration. This algorithm works in conjunction with lens data, using industry standard lens interface protocols.

The Dynamic Detail Equalizer provides more control over image sharpness than ever before. Detail enhancement can be fine-adjusted for each individual tonal range.

Video contrast adjustment offers unmatched creative control over the luminance levels of the picture: shadows, midtones and highlights can be adjusted individually while natural transitions between the areas are maintained.

Key features

- New camera platform designed for extension into the future
- UHD HDR images at 3X high speed
- Simple, scalable multi-format image capture and distribution
- First camera to employ full IP network connectivity thanks to NativeIP. No separate base station required for NativeIP. Backward compatible is still offered with the UXF XCU using XF transmission.
- Fastest time to deploy and configure
- Extensive operator training not required
- At-a-glance settings and diagnostics for immediate status recognition
- Software update and reconfiguration of licenses and settings (if required) in less than 7 minutes
- Field-tested rugged and reliable
- Suite of inventory management features
- Quickly align camera configuration to production requirements for superior cost management
- Field-replaceable SFP/QSFP modules for different IP configurations

System components and accessories

System components and power supply options:	
XCU Universe UXF	XF Transmission Fiber Base Station
HPE-300	300 W Hybrid Power Extender with single AC mains input
HPE-300-2AC	300 W Hybrid Power Extender with dual AC mains input
LDK 4425	3G Fiber Power Converter unit
SHED-BS	SMPTE Hybrid Elimination Device (Base Station)
Camera Control components:	
CGP 500	Creative Grading Control Panel
CCS-One	Cameras Control Server
CGA	Creative Grading Application (PC tablet required)
Viewfinders:	
EC 2-100	2-inch ocular viewfinder for LDX 100 Series
VF 7-100X	7-inch native HD viewfinder for LDX 100 Series
Camera accessories:	
LDK 5031/10	Tripod Plate
LDK 4475	Reflex SuperXpander

Introduction

System components and accessories

2 Installation


Installing a (Q)SFP module

The camera is shipped without a (Q)SFP module. Before operating the LDX 100 make sure that the right (Q)SFP module is installed that suits your transmission configuration. Refer to Appendix E for more information about how to install (or exchange) a (Q)SFP module.

Mounting a lens

To attach a lens to the camera head proceed as follows:

- Ensure that the lens locking ring (1) is in the unlocked position (turned counterclockwise).
- If present, remove the dust protection cap.
- Slot the lens into the lens mount and make sure that lens and camera are accurately aligned.
- Turn the lens locking ring (1) clockwise until the lens locks firmly into place.
- Connect the lens cable (2) to the lens connector at the right side of the camera.
- Use the cable tray (3) to stow the loop of the lens cable.

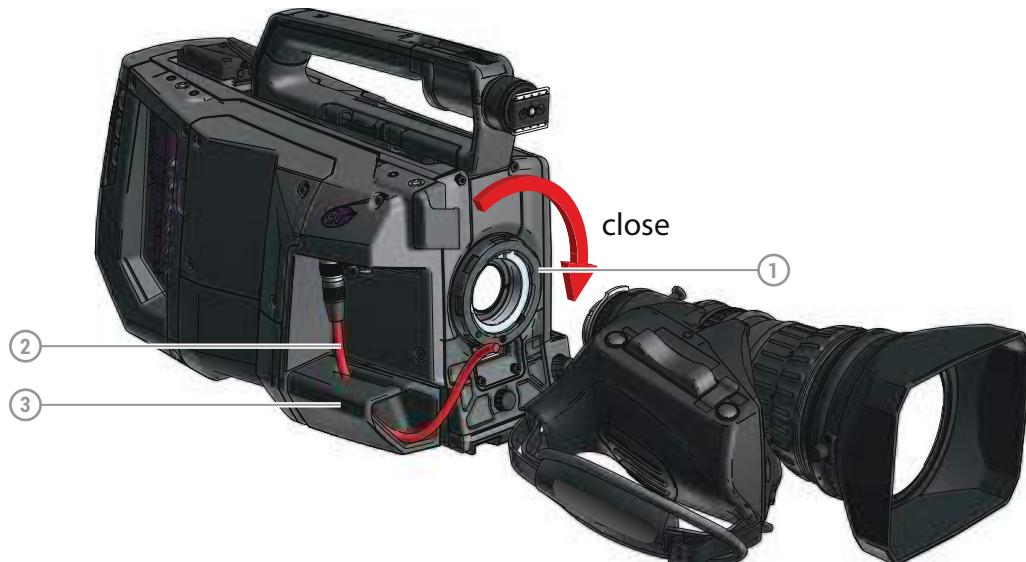



Caution

Do not attach a lens weighing more than 5 kg (11 lbs) to the camera without a proper lens support.

When a new lens is fitted to the camera it may be necessary to carry out some adjustments to optimize its use, for example, back focus or shading. For more information about these adjustments refer to the lens manufacturer's documentation.



Note

If you are using a lens with an analog interface, make sure to set the lens interface type to Analog: in the camera menu, go to the **Configuration > Lens > Lens Settings** menu and use the **Lens IF Type**.


Always place the dust protection cap when the lens is not connected to the camera.

EC 2-100 viewfinder

Mounting the viewfinder

To mount the viewfinder on top of the camera proceed as follows:

- Loosen locking ring **(2)** of viewfinder support bracket **(1)** at the front of the camera handgrip. (As seen from the rear of the camera, turning the locking ring counterclockwise moves it towards the handgrip.)
- Push the locking pin **(3)** in and slide the viewfinder onto the viewfinder support bracket **(1)**.
- Tighten the locking ring **(2)** by turning it clockwise (as seen from rear) so that the viewfinder is mounted securely to the support.

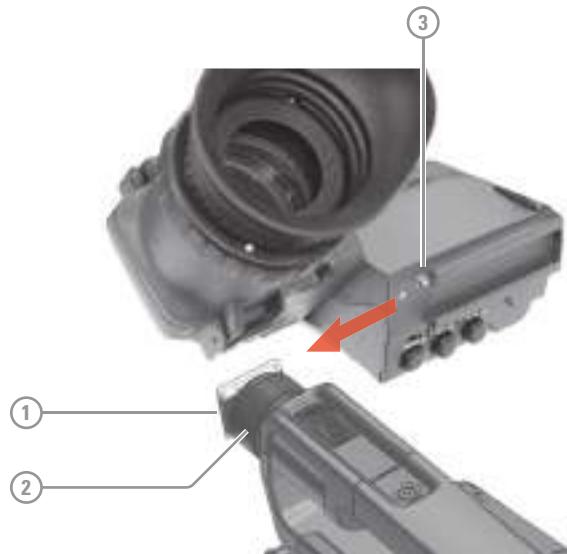

- Connect the viewfinder cable to the viewfinder connector socket **(4)** under the recess at the right side of the camera.
- Guide the cable through the upper cable clip **(4a)** and down along the cable holder **(4b)**.
- Attach the microphone holder **(5)** onto the viewfinder and secure it with the knurled screw **(6)** on top.




Positioning the viewfinder

Horizontally

The horizontal position of the viewfinder can be adjusted as follows to suit your preferences:

- Loosen the locking ring **(1)**. As seen from the rear of the camera, turning the locking ring counterclockwise moves it towards the handgrip.
- Slide the viewfinder horizontally along the rail to the desired position.
- Tighten the locking ring **(1)** again by turning clockwise.

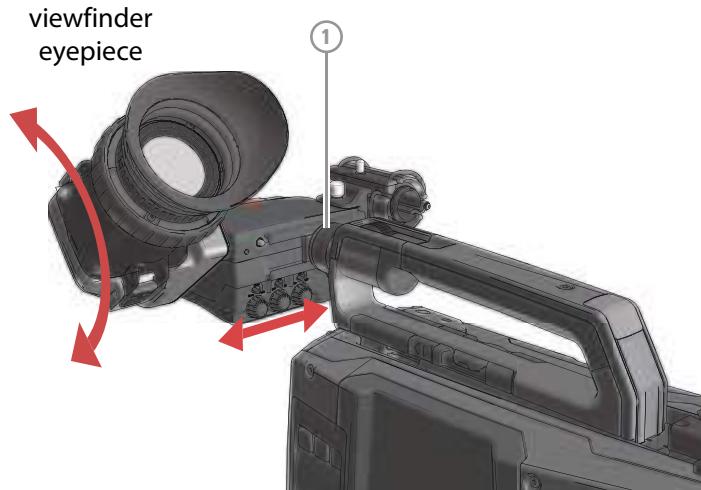

Angular

Hold the viewfinder eyepiece with your hand and rotate it to the desired angle.

Laterally

The viewfinder can be positioned backwards and forwards along the camera axis (lateral):

- Loosen the locking disc **(1)** by turning it counterclockwise using your thumb and index finger.
- Press both sides of the handgrip clip **(2)** using your thumb and index finger and with the lever pressed in, move the handgrip (with viewfinder) back or forth.
- When the desired position is reached release the clip. Note: the rail on the camera body has indents so make sure to place the handgrip is placed at a fixed position.
- Tighten the locking disc **(1)** by turning it clockwise.




Note

Moving the handgrip also changes the weight balance of the camera. Make sure to balance the camera with the lens mounted and the cables attached.

Distance viewing

The viewfinder display can also be viewed from a distance:

- Push down the bottom clip (4) below the eyepiece and swing it free of the associated clip. The eyepiece can also be swung downwards; push down the top clip to release the eyepiece and swing it downwards.

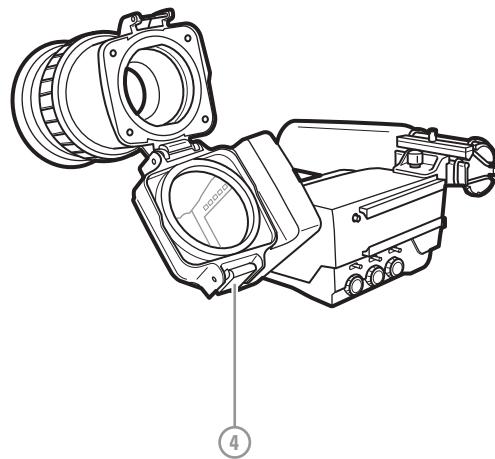

Note

Handle the eyepiece with care when folded back—its position is not secured.

Microphone

To attach the optionally available microphone to the camera proceed as follows:

- Open the microphone holder by unscrewing the knurled screw (1) of the microphone support bracket (2) on the viewfinder and open.
- Slide the microphone into the split tube until the microphone shoulder reaches the mark (4) in the tube (about half way in).
- Place the tube with the microphone into the holder with the split facing upwards. Mount the microphone as straight as possible.
- Ensure that the rubber supports at the back and front of the holder fit into the rims (6) around the tube.
- Close the holder and tighten the knurled screw at the top. Don't allow the wind hood to touch the holder as this reduces the damping effect.
- Connect the microphone cable to the MIC audio XLR connector on the right side of the camera. To avoid mechanical pick-up, do not let the microphone cable touch the holder.

Other microphones with a diameter of 21 mm (0.83 in) can also be used, however, ensure that the sensitivity of the input that match that type of microphone are correctly selected in Audio section of the camera **Configuration** menu. When a longer microphone is used, it is not necessary to place it in the split tube.

Phantom power can be switched on or off for the front microphone socket in the Audio section of the camera **Configuration** menu.

LDK 5301/10 Tripod adapter plate


To mount the camera on a tripod, the tripod plate must first be attached to the tripod. Follow the tripod manufacturer's instructions to mount the wedge plate supplied with the tripod and the tripod adapter plate firmly onto the tripod. Attach the camera to the tripod adapter plate as follows:

- Slide the camera horizontally along the tripod adapter plate from back to front ensuring that the front of the camera engages the V-slot (1) at the front of the tripod adapter plate, and that the slot on the bottom of the camera engages the stud (2) at the rear of the tripod adapter plate.
- Firmly push the camera forward until it clicks into place.
- When the camera is mounted firmly, the locking lever (5) swings around fully to the rear of the plate. If the lever does not travel the full distance, you should manually lock it into place.



Caution

Failure to attach the camera to the tripod adapter plate in the correct manner could result in an unsecured camera. Ensure that the rear stud (2) is engaged and that the camera clicks into place.

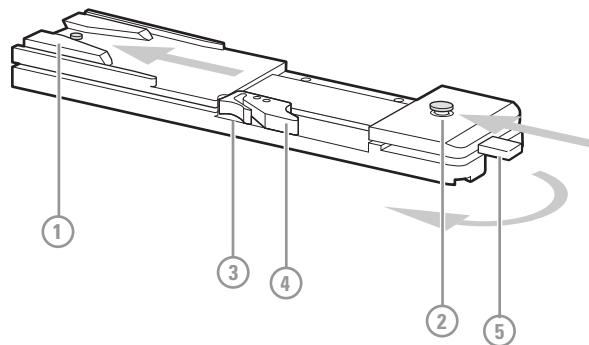

Remove the camera from the tripod as follows:

- Open the locking lever (5) to free the rear stud (2).
- Press and hold the red locking lever (3) against the release handle (4).
- Ensure that you have a firm hold of the camera.
- Pull the release handle (4) forward.
- Move the camera backwards and up.


Adjusting the shoulder pad

To change the position the shoulder pad press and hold the adjustment lever at the bottom left of the camera body, just behind the handgrip. The shoulder pad can now be moved backwards and forwards along the axis of the camera.



Tip

Adjust the shoulder pad after all other units (viewfinder, lens, cables) have been mounted to get the best balanced shoulder position.

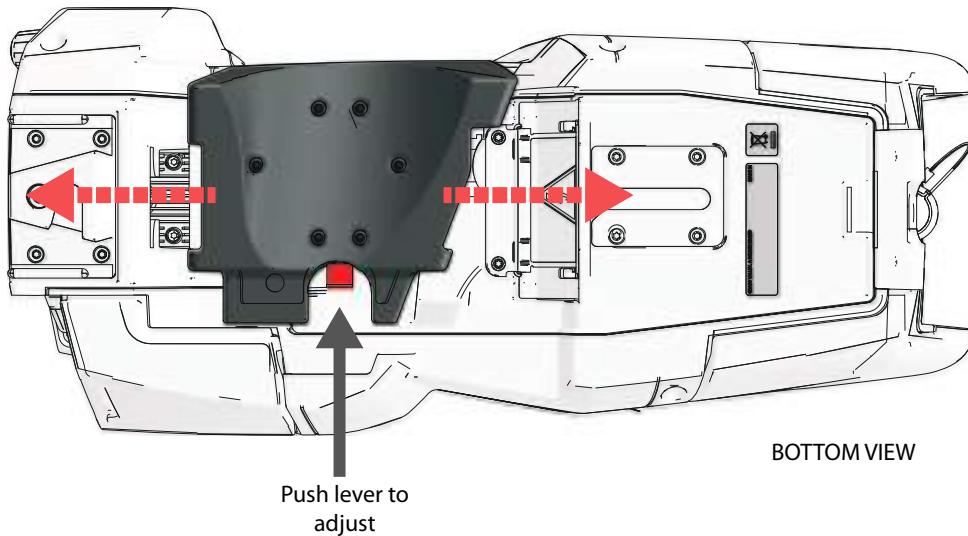

Adjusting the handgrip position

The handgrip position can be adjusted along the axis of the camera body.

- Loosen the locking disc by turning it counterclockwise using your thumb and index finger.
- Press both sides of the handgrip clip using your thumb and index finger and with the lever pressed in, move the handgrip back or forth.
- When the desired position is reached release the clip. Note: the rail on the camera body has indents so make sure to place the handgrip is placed at a fixed position.
- Tighten the locking disc by turning it clockwise.



Installation

Adjusting the handgrip position

3 Configurations

Camera mode

The LDX 100 camera can be used in three different camera modes:

- NativeIP mode
- XCU mode
- Local mode

To set or change the camera mode, enter the camera menu, go to the **Installation** menu and use the **Camera Mode** function to select 'IP' (for NativeIP mode) or 'XCU' (for XCU mode or Local mode).


There are multiple options to power the LDX 100, depending on the camera mode and system configuration:

- HPE-300/HPE-300-2AC Hybrid Fiber Extender
- XCU Universe UXF Base Station
- A local Power Supply Unit (>300 W)

NativeIP mode


Using a hybrid power extender

Power is supplied by the HPE-300/HPE-300-2AC while optical transmission is put through from the hybrid fiber cable to single mode fiber:

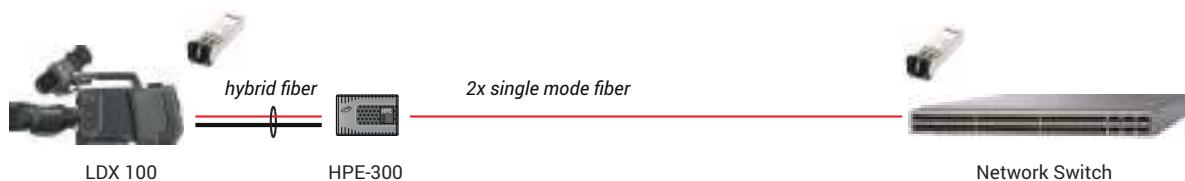

Using a power supply unit and fiber converter

Power is delivered by a power supply unit while optical transmission is put through from the hybrid fiber cable to single mode fiber using a converter:

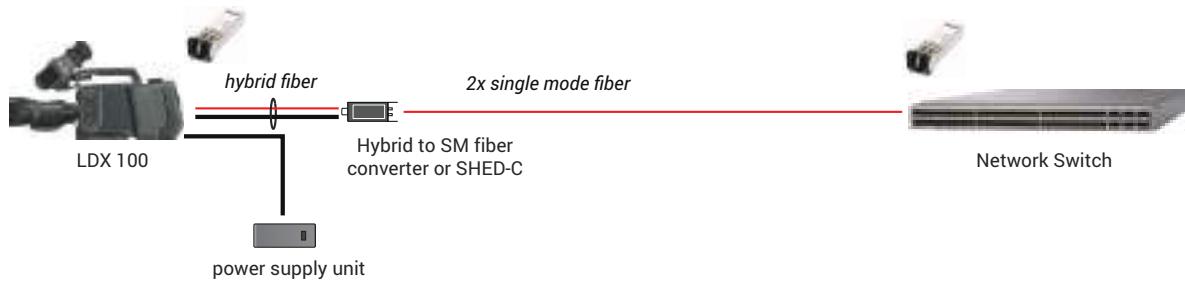


XCU mode

Power is delivered by the XCU through the hybrid fiber cable:




DirectIP/IP+ with hybrid power extender

Power supply solution is similar to the NativeIP configuration.

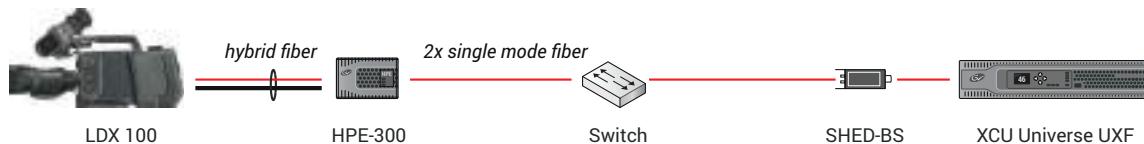

Local mode

Power is delivered by a local power supply unit and all signals are local baseband:

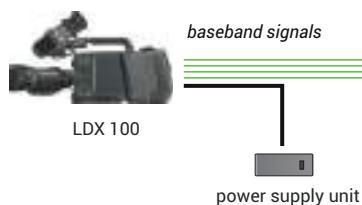

Control network

The LDX 100 is controlled by the Creative Grading camera control system that uses the C2IP network. There are several methods to connect the camera to the C2IP network:

- in XCU mode: connect the C2IP network to the C2IP Ethernet connector on the backpanel of the XCU.
- in NativeIP mode: create a tagged VLAN on the IP Media network

- In Local mode: connect the C2IP network directly to the C2IP Ethernet connector at the back panel of the camera.


Locking

The LDX 100 can be locked using different methods:

- by PTP over the IP Media network (preferred method)
- Trilevel Sync
- Black Burst
- Freerun (not locked)

Main video configurations

NativeIP mode: 1X speed UHD workflow

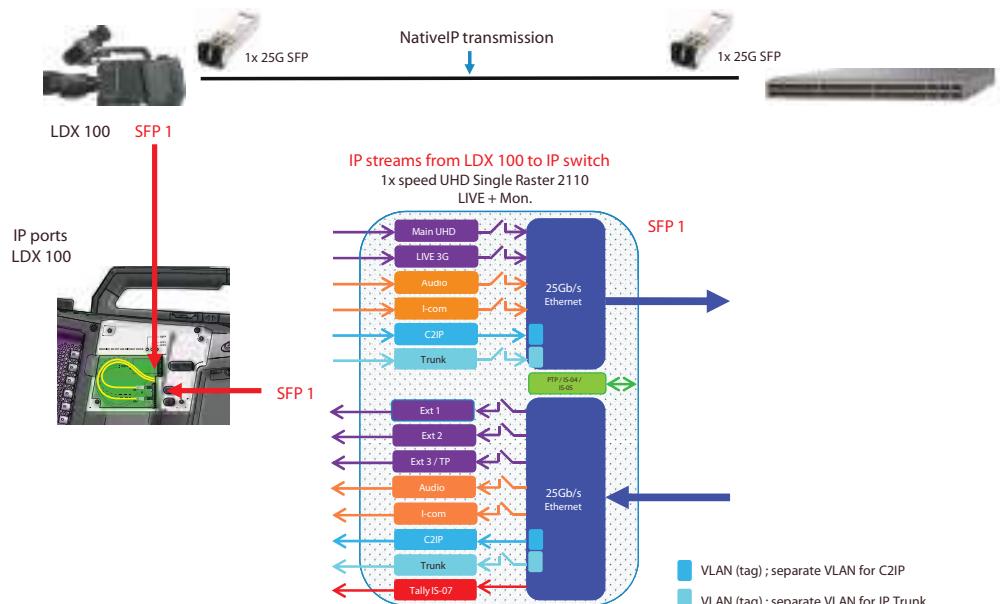


Video mode:	Signal name:	Bandwidth (2110-20):
2160p	Main UHD	11.1 Gb/s
1080p	Live 3G	2.8 Gb/s
	Total (25 G bandwidth capacity)	13.9 Gb/s (56%)

Configurations


NativeIP mode: 1X speed UHD with redundancy workflow

NativeIP mode: 1X speed UHD with redundancy workflow

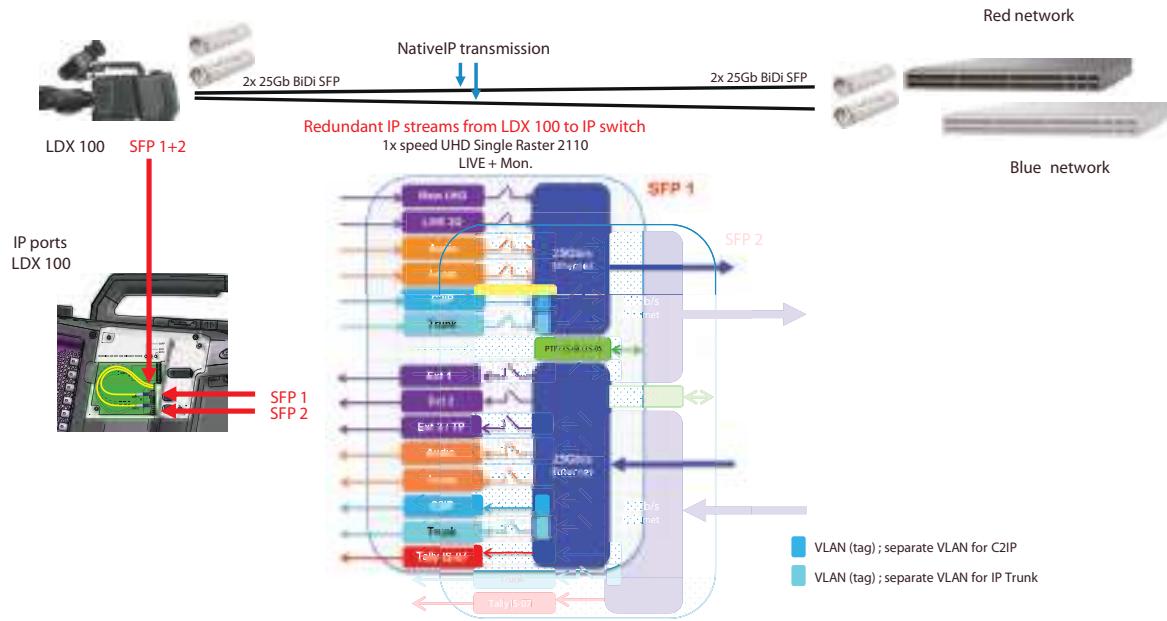

Video mode:	Signal name:	Bandwidth (2110-20):
2160p	Main UHD	11.1 Gb/s
1080p	Live 3G	2.8 Gb/s
	Total (25 G bandwidth capacity)	13.9 Gb/s (56%)

NativeIP mode: 3X Speed UHD workflow

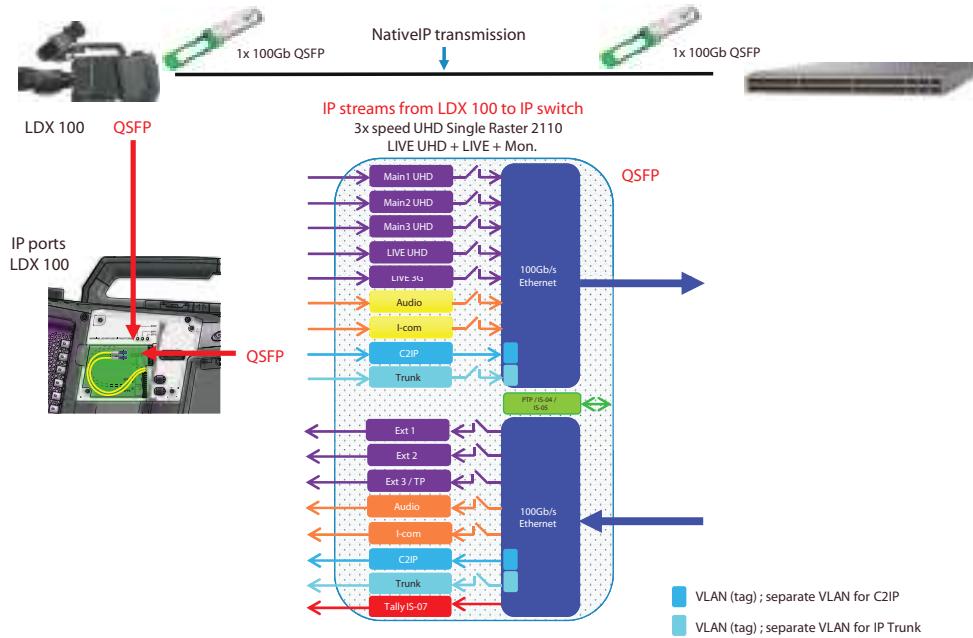


Video mode:	Signal name:	Bandwidth (2110-20):
2160p	Main 1 UHD	11.1 Gb/s
2160p	Main 2 UHD	11.1 Gb/s
2160p	Main 3 UHD	11.1 Gb/s
2160p	Live UHD	11.1 Gb/s
1080p	Live 3G	2.8 Gb/s
	Total (100G bandwidth capacity)	47.2 Gb/s (47%)

Configurations

XCU mode: 1X Speed UHD workflow

XCU mode: 1X Speed UHD workflow

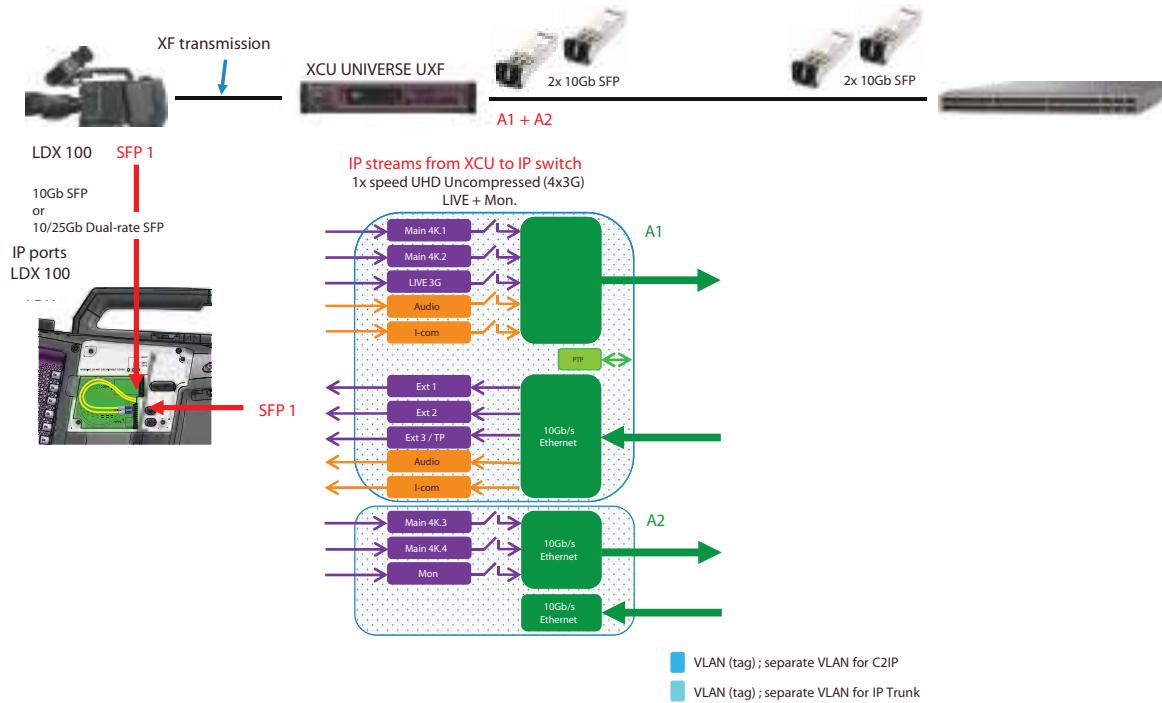

Video mode:	Signal name:	Bandwidth (2110-20):
1080p (SDQS/2SI)	Main 4K.1	2.8 Gb/s
1080p (SDQS/2SI)	Main 4K.2	2.8 Gb/s
1080p (SDQS/2SI)	Main 4K.3	2.8 Gb/s
1080p (SDQS/2SI)	Main 4K.4	2.8 Gb/s
1080p	Live 3G	2.8 Gb/s
1080i	Mon	1.4 Gb/s
	Total (2x 10G bandwidth capacity)	15.4 Gb/s (77%)

Camera Connect



Note

Make sure the version of Camera Connect 1.64 or higher.

Camera Connect is Grass Valley's configuration and setup tool for camera systems. The software comes pre-installed on the CCS-One Cameras Control Server and can be accessed through the C2IP network by a web-browser that runs on a PC or tablet computer.

- Make sure you are connected to the C2IP network. Open the web-browser on your device and enter one of the following links:
 - <http://10.127.44.32/camconnect>
 - <http://169.254.0.201/camconnect>
- The Camera Connect login window is shown:



- Enter user name and password. The default login name is **admin** and the password **admin** (these can be changed after login).
- Click or tap Login. The Camera Connect user interface is shown.



Note

All user entries in the Camera Connect application are case sensitive.

Click the IP tab at the top of the page; a row of sub tabs appears. The following sub tabs are used to configure the IP Media Network: Network Ports, NMOS, Main Video, Highspeed Video, Live | Mon, Extern Video, Audio, Intercom, PTP, DirectIP and DirectIP+:




Note

The IP tab only list camera systems that are IP enabled.

IP Media Network setup

Local ports setup

The list of camera systems is shown, sorted by camera number. Click the IP Media Port A tab: here you can configure (local) IP addresses, subnet mask and default gateway for Port A.

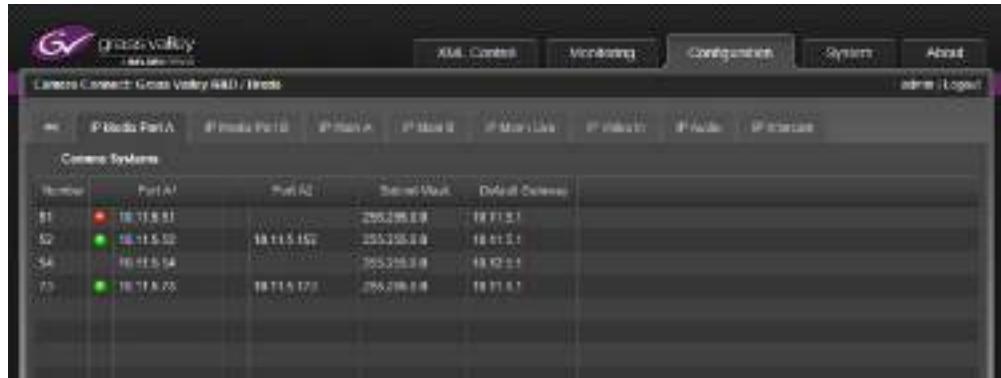

The indicator(s) in front of the IP addresses for port A1 and port A2 show the status of the physical IP network connection:

Off	port is not in use.
	indicates a connection between the port and a 10 G IP device (e.g. a switch)
	no connection



Note

A green light does not indicate a *correct* communication link between XCU and the 10 G IP device.

Click the camera system you want to set up. A popup window appears and you can edit the following parameters:



Port A1 IP — this is the local IP address of Port A1 in the IP Media Network. It is recommended to use an IP address in the 10.11.5.xxx range.

Port A2 IP — this is the local IP address of Port A2 in the IP Media Network. It is recommended to use an IP address in the 10.11.5.xxx range.

Subnet mask — for most situations the subnet mask is set to 255.255.0.0. This is also the default value.

Default gateway — for most situations the default gateway is set to 10.11.5.1. This is also the default value.




Note

Do not use IP address 10.11.5.1 as it is already in use for the Default Gateway. If you still want to use this address then you must enter a different default gateway.

Make sure to set unique IP addresses for each camera system in the IP Media Network to avoid network conflicts.

Main video

In the IP Main A tab you can set up IP address and port number for the Main video outgoing stream for the primary IP Media Network Port. The transport standard for Main video is also selected in this tab.

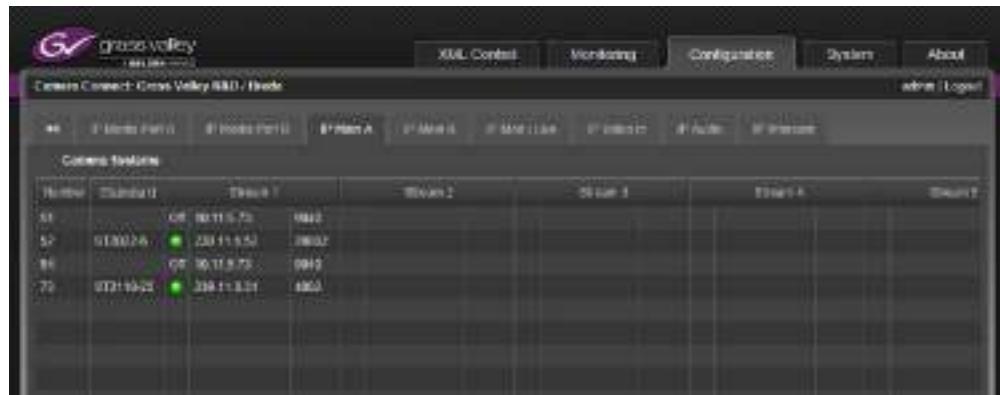

Present indicator for Main video (sub) stream:

Off	(Sub) stream is disabled
	(Sub) stream is enabled and stream is active.
	(Sub) stream is enabled but stream is not active.

Normally, Main video is sent as a single IP stream but with uncompressed 4K the signal is split into four (sub)streams.

Click the camera system you want to configure. A popup window appears in which you can set the following parameters:



Main Video

Enabled — selects whether the Main video is included in the IP Media Network stream and to which port the stream is sent:

- Port A: Main video is routed to Port A (default setting).

- *Port A+B*: Main video is routed to both Port A and B to enable redundant network operation.
- *Off*: Main video is NOT inserted into the IP Media Network stream (this is also indicated with the indication *off* in front of stream 1).

Standard — this is the transport standard for Main video. Select either *ST2022-6* ('embedded SDI with audio and ancillary data over IP') or *ST2110-20* ('Video essence over IP').

Stream 1 (port A):

Dest. IP address — the destination IP address to which the stream is sent.

Dest. Port — the destination port number for the stream.



Note

When the same IP address is used for the Main video, Monitoring video and/or Live video streams, the port numbers for each stream **MUST** be set to different values.

Main video in 4K uncompressed mode


In the IP Main A tab you can set up IP addresses and port numbers for the four (sub)streams of the 4K uncompressed Main video outgoing stream. The transport standard for Main video is also selected in this tab.



When the window does not display the four (sub)streams as indicated in the example above, the compression mode needs to be set to *Uncompressed* first. To do this, click the camera system you want to configure. A popup windows appears. Set the 4K Output item to *Uncompr* (indicated in red below) and click OK to activate the changes.

IP Media setup

Main video in 4K uncompressed mode

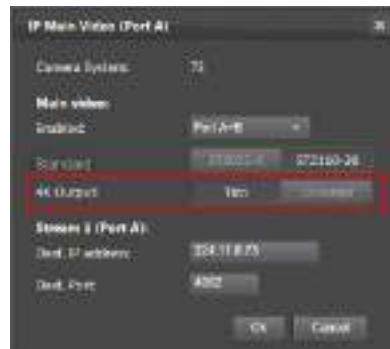

With the 4K Output compression mode set to *Uncompr*, click the camera system you want to configure. A popup window appears in which you can set the following parameters:



Main Video

Enabled — selects whether the Main video is included in the IP Media Network stream and to which port the stream is sent:

- *Port A*: Main video is routed to Port A (default setting).
- *Port A+B*: Main video is routed to both Port A and B to enable redundant network operation.
- *Off*: Main video is NOT inserted into the IP Media Network stream (this is also indicated with the indication *off* in front of stream 1).

Standard — this is the transport standard for IP Main Video. Select either *ST2022-6* ('embedded SDI with audio and ancillary data over IP') or *ST2110-20* ('Video essence over IP').

4K Output — in this case *Uncompr* is selected.

Stream config — defines how streams 2,3, 4 are configured, based on settings for stream 1:

- *AutofillIP*: the IP addresses for stream 2, 3 and 4 are automatically filled in based on the entered IP address for stream 1. The last digit of the IP address for Stream 1 is increased by 2 for the subsequent streams.
- *AutofillPrt*: the port numbers for streams 2, 3 and 4 are filled in based on the port number entered for stream 1. The port number is subsequently raised by 1.
In case of a single destination unicast/multicast address, the port number of the first stream is entered and the port number for the subsequent streams is increased by 1.



Note

This is not applicable for receivers with two 10G ports. A single IP destination address causes the Ethernet switch to flood both ports with all four streams. This can only be used for 25G and 40G port receivers.

- When *Manual* (default setting) is selected you can enter the IP addresses and port numbers manually for all four (sub)streams.

For streams 1 to 4

IP address — the destination IP address to which the stream is sent. By default, use four different multicast IP addresses.

Port — the destination port number for the stream.



Note

When the same IP address for Main Video, Monitoring video and or Live video is used, the port numbers for each stream MUST be set to different values.

IP Mon\Live tab

The list of camera systems is shown, sorted by camera number. In this tab Monitoring video and/or Live video outputs can be set up.



Note

Live video is available as a selectable stream. In HD SDR operation the video mode is the same as Main video.



Click the camera system you want to set up. The edit popup window appears in which you can edit the following parameters:



Monitoring

Enabled — selects whether the Monitoring video is included in the IP Media Network stream and to which port the stream is sent:

- *Port A*: Monitoring video is routed to Port A (default setting).
- *Port A+B*: Monitoring video is routed to both Port A and B to establish a redundant network connection.
- *Off*: Monitoring video is NOT inserted into the IP Media Network stream (this is also indicated with the indication *off* in front of Stream 1).

Standard — this is the transport standard for Monitoring video. Select either *ST2022-6* (embedded SDI with audio and ancillary data over IP) or *ST2110-20* (Video essence over IP).

Port A output

Dest. IP address — the destination IP address for Port A to which Monitoring video is sent.

Dest. Port — the destination port number for Port A for Monitoring video.

Port B output



Note

Port B is only used when redundant operation is enabled.

Dest. IP address — the destination IP address for port B to which Monitoring video is sent.

Dest. Port — the destination port number for Port A for Monitoring video.

Live video



Note

Live video is only present when HDR is enabled and/or when the XCU is running in a 4K video mode.

Enabled — selects whether the Live video is included in the IP Media Network stream and to which port the stream is sent:

- *Port A*: Live video is routed to Port A (default setting).
- *Port A+B*: Live video is routed to both Port A and B to establish a redundant network connection.
- *Off*: Live video is NOT inserted into the IP Media Network stream.

Standard — this is the transport standard for Live video. Select either *ST2022-6* (embedded SDI with audio and ancillary data over IP) or *ST2110-20* (Video essence over IP).

Port A output

Dest. IP address — the destination IP address for Port A to which Live video is sent.

Dest. Port — the destination port number for Port A for Live video.

Port B output



Note

Port B is only used when IP Redundancy is in operation.

Dest. IP address — the destination IP address for port B to which Live video is sent.

Dest. Port — the destination port number for Port B for Live video.

IP Video In tab

The list of camera systems is shown, sorted by camera number. In this tab the incoming External 1, External 2 and Teleprompter video inputs can be set up.

Number	External 1	Port	External 2	Port	Teleprompter	Port	Multicast					
51	●	20001	No	●	20006	No	●					
52	●	ST2023-8	20002	No	ST2023-8	20006	No					
54	●	40001	No	●	41009	No	●					
73	●	ST2023-80	20007	238.11.5.92	●	ST2119-20	20002	238.11.8.92	●	201.00.0.8	19847	238.26.175.70

The Extern 1, Extern 2 and Teleprompter columns show the present indicator, transport standard, port number and Multicast IP address for each incoming video stream.

Click the camera system you want to set up. The edit popup window appears in which you can edit the following parameters:



For Extern 1, Extern 2 and Teleprompter:

Present — the present indicator can have the following status indications:

<input type="radio"/> no indication	Steam is not present or not available.
<input checked="" type="radio"/> Yes	Steam is present.
<input type="radio"/> Unsupported format	Stream is present but audio has an unsupported format.
<input type="radio"/> No	Stream is not present or an error has occurred.

Standard — this is the expected transport standard for the incoming video stream. Select either *ST2022-6* or *ST2110-20*;

Port — the receiving port number for the video stream.

Multicast — Yes or No. Select whether you want to use multicast or not.

Multicast IP — the receiving multicast IP address (when Multicast = Yes)



Tip

It is recommended to use port numbers in the 1000..49152 range.

IP Audio tab

The list of camera systems is shown, sorted by camera number. In this tab the outgoing and incoming IP Audio streams can be set up.



The screenshot shows a table titled 'Camera Systems' with the following columns: Number, Output IP Port A, Output IP Port B, Channels Out, Input, Port, Incoming IP, and Channels In. There are four entries in the table:

Number	Output IP Port A	Output IP Port B	Channels Out	Input	Port	Incoming IP	Channels In
51	200.11.5.151	None	5004	8	None	200.11.5.152	8
52	200.11.5.152	None	5004	8	None	200.11.5.151	8
53	200.11.5.179	5000	5001	8	None	200.11.5.150	8
70	200.11.5.179	5000	5001	8	None	200.11.5.150	8

The columns show relevant information for both outgoing (on Ports A and B) and incoming streams.

Click the camera system you want to set up. The edit popup window appears in which you can edit the following parameters:



AES67 Audio Out

Enabled — selects whether AES67 Audio output is included in the IP Media Network stream and to which Port the stream is sent:

- **Port A:** AES67 Audio is routed to Port A (default setting).
- **Port A+B:** AES67 Audio is routed to both Port A and B to establish a redundant network connection.

- *Off*: AES67 Audio is NOT inserted into the IP Media Network stream.

Channels — Number of audio channels that is inserted into AES67 Audio output. Can be 2,4,6, 8 or 16 channels.

Packet Time — Selects packet time of the AES67 Audio packets.

Port A output

Dest. IP address — the destination IP address for Port A to which AES67 Audio output is sent.

Dest. Port — the destination port number for Port A for AES67 Audio output.

Port B output



Note

Port B is only used when redundant operation is enabled.

Dest. IP address — the destination IP address for port B to which AES67 Audio output is sent.

Dest. Port — the destination port number for Port B for AES67 Audio output.

AES67 Audio In

Present — indicates whether an AES67 Audio input is present on the IP Media Network. It can have the following status indications:

	no indication	Steam is not present or not available.
	Yes	Steam is present.
	Unsupported format	Stream is present but audio has an unsupported format.
	No	Stream is not present or an error has occurred.

Multicast — Yes or No. Select whether you want to use multicast or not.

Multicast IP — the receiving multicast IP address, when Multicast = Yes.

Channels — Number of audio channels that is inserted into AES67 Audio input. Can be 2,4,6, 8 or 16 channels.

Buffer Size — Selects buffer size for AES67 Audio input. Can be 0.33 ms, 0.67 ms, 1 ms, 2 ms, 3 ms, 4 ms, 8 ms or 15 ms.



Tip

Check the 'Apply settings to all camera systems' box and press OK to apply the (changed) settings in this window to all camera systems (where applicable).

IP Intercom tab

The list of camera systems is shown, sorted by camera number. In this tab the incoming and outgoing IP Intercom streams can be set up.



Number	Device IP/Port	Output IP/Port	IP Address	IP Mask/DSI	IP Intercom	IP Audio	IP Video
81							
82	192.168.11.52	5064	192.168.12.5.112	255.255.0.0	8	1 ms	Analog
83							Digital
73	192.168.10.4.11	5062	192.168.12.5.11	255.255.0.0	8	1 ms	AES67

Click the camera system you want to set up. The edit popup window appears in which you can edit the following parameters:



Source — Selects input source for intercom Eng and Prod channels. Analog = from intercom subD-connector at backpanel of XCU (Cradle); Ext1 = from embedded SDI audio of external video input 1 (EXT1). AES67 = from AES67 Intercom stream on the IP Media Network.

Program source — Intercom or Audio.

AES67 Intercom Out

Enabled — selects whether the AES67 intercom output is included in the IP Media Network stream and to which port the stream is sent:

- *Port A*: AES67 intercom is routed to Port A (default setting).
- *Port A+B*: AES67 intercom is routed to both Port A and B to establish a redundant network connection.
- *Off*: AES67 intercom is NOT inserted into the IP Media Network stream (this is also indicated with the indication *off* in front of Stream 1).

Channels — Number of audio channels that is inserted into AES67 intercom output. Can be 2,4,6,8 or 16 channels.

Packet Time — Selects packet time of the AES67 intercom output audio packets.

Port A output

Dest. IP address — the destination IP address for Port A to which AES67 intercom output is sent.

Dest. Port — the destination port number for Port A for AES67 intercom output.

Port B output



Note

Port B is only used when redundant operation is enabled.

Dest. IP address — the destination IP address for port B to which AES67 intercom output is sent.

Dest. Port — the destination port number for Port B for AES67 intercom output.

AES67 Intercom In

Present — indicates whether AES67 intercom input is present on the IP Media Network.

Multicast — Yes or No. Select whether you want to use multicast or not.

Multicast IP — the receiving multicast IP address, when Multicast = Yes.

Channels — Number of audio channels that is inserted into AES67 intercom input. Can be 2,4,6,8 or 16 channels.

Buffer Size — Selects buffer size for AES67 intercom input. Can be 0.33 ms, 0.67 ms, 1 ms, 2 ms, 3 ms, 4 ms, 8 ms or 15 ms.



Tip

Check the 'Apply settings to all camera systems' box and press OK to apply the (changed) settings in this window to all camera systems (where applicable).

AES67 Channel mapping for audio and intercom

For the audio and intercom audio channel mapping on the IP Media Network, refer to the table below:

	Ch 1	Ch 2	Ch 3	Ch 4	Ch 5 to 8/16
Output stream					
Audio A1	Cam Audio 1	Cam Audio 2	Cam AES1	Cam AES2	(digital silence)
Intercom A1	Eng	Prod	(digital silence)	(digital silence)	(digital silence)
Input stream					
Audio A1	Prog intercom	Prog spare	(not used)	(not used)	(not used)
Intercom A1	Eng	Prod	Prog intercom	Prog spare	(not used)

PTP tab

The XCU can be synchronized over the IP Media Network to a PTP grandmaster clock using the Precision Time Protocol (PTP).

- The PTP sub tab can be found by clicking the double arrow (<<) at the left. The PTP sub tab is located in the first group of tabs.


The list of camera systems is shown, sorted by camera number. In this tab you can set up synchronization to a PTP grandmaster.



The screenshot shows the 'Camera Systems' table in the PTP tab. The table has columns: Number, PTP, PTP Network, Camera to GW, and PTP Status. There are four entries: S1 (PTP Enabled, S1PTOSSP, 7ms, Enabled), S2 (PTP Enabled, S2PTOSSP, 7ms, Enabled), S4 (PTP Enabled, S4PTOSSP, 107ms, Enabled), and S3 (PTP Enabled, S3PTOSSP, 107ms, Enabled).

Number	PTP	PTP Network	Camera to GW	PTP Status
S1	Enabled	S1PTOSSP	7ms	Enabled
S2	Enabled	S2PTOSSP	7ms	Enabled
S4	Enabled	S4PTOSSP	107ms	Enabled
S3	Enabled	S3PTOSSP	107ms	Enabled

Click the camera system you want to set up. The edit popup window appears in which you can edit the following parameters:

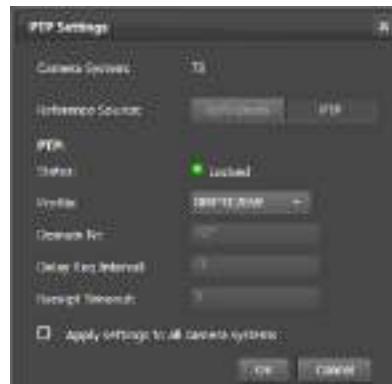

Reference Source — select the source of the video reference to which the camera system locks. When *RefVideoIn* is selected the camera system locks to the Reference input signal on the BNC REF IN connector (can be HD Tri-Level sync or SD Black Burst), when *PTP* is selected the camera system configured to lock to a PTP grandmaster reference clock on the IP Media Network.

PTP

Status — shows PTP locking status. The following status indications are possible:

 locked	XCU is locked to the PTP grandmaster clock.
 calibrating	XCU has found a PTP grandmaster and is calibrating to the grandmaster.
 listening	XCU is searching for a PTP grandmaster on the IP Media Network
 disabled	PTP is switched off (for example when Reference Source = RefVideoIn)
 off	XCU is not connected to the IP Media Network.

Profile — select the PTP protocol/domain used for locking to the PTP grandmaster; either *SMPTE2059*, *AES67*, *AES-SMPTE* or *User*.

When *User* is selected the parameters *Domain Nr*, *Delay Req Interval* and *Receipt Timeout* must be set. For more information about these parameters, refer to the IEEE1588 PTP (Precision Time Protocol) specification.



Tip

Check the 'Apply settings to all camera systems' box and press OK to apply the (changed) settings in this window to all camera systems (where applicable).

5 Operating instructions

Using the camera

Attach a lens, viewfinder, microphone and any other accessories to the camera. Attach the hybrid cable (when used) and other necessary cables to the camera. Refer to the Installation chapter for more details.

Powering the camera

There are several ways of supplying power to the camera, depending on the system configuration:

- by a hybrid power extender such as Grass Valley's HPE-300 or LDK 4425 through the hybrid cable connector (in NativeIP mode);
- by an XCU through the hybrid fiber cable and connector (in XCU mode);
- by a DC Power Supply Unit connected directly to the camera (in 'local mode').

The power supply for the camera is normally supplied via the hybrid fiber cable from the base station. The Power On indicator lights when power is supplied and the camera power switch is set to the on position.

When power is supplied via the hybrid fiber cable, an output power socket supplies +12V, 4.0 A maximum for powering accessories. The power overload indicator lights up when maximum power is exceeded.

If excessive current flows into the camera the internal safety circuit shuts off power to all the units. If this happens shut off power and check the units for faults and if necessary take corrective actions before switching on power again.

When an ocular viewfinder is used the BATT indicator in the viewfinder lights if the camera supply voltage is less than 11.5 VDC when using an external power supply.

Switching on

- Switch on power on the power source (HPE-300, LDK 4425, XCU or power supply unit)
- Set the power switch of the camera to the ON  position (lower back panel)
- Allow a few moments for the camera to perform a self-test and for the system to establish communications.

To switch the camera to stand-by, set the power switch of the camera to the  position.

Location of controls and indicators

Camera front panel



(1) Rear Tally lamp

Lights Red when the camera is On Air.

(2) White Balance button

Press and hold two seconds to start the Auto White Balance procedure.

(3) Menu Rotary and Select

Turn the rotary to navigate the camera menu and push to select items.

(4) Back / Info button

Back: Used when navigating the menu;
Info: Press and hold to view information on the viewfinder screen.

(5) Intercom Prod

This button is used to activate the intercom Production channel ('talk').

(6) Headset volume

Adjusts the overall audio volume of the intercom headset.

(7) Intercom Eng

This button is used to activate the intercom Engineering channel.


(8) Return A

This button can be assigned to an External/Return Video channel.

(9) Return B

This button can be assigned to an External/Return Video channel.

Camera left panel

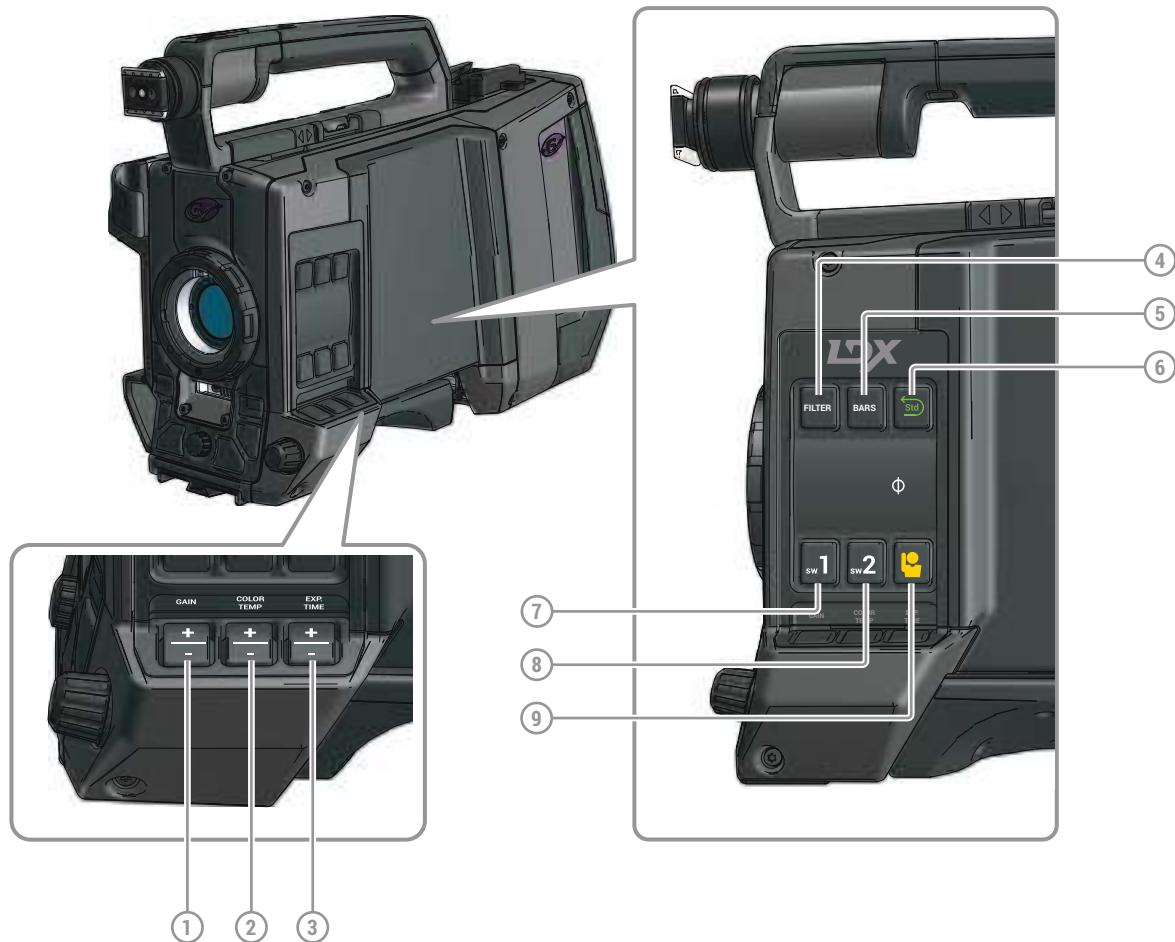

(1) Gain up/down switch

Press plus or minus to select a Gain preset or hold the plus to set a variable gain value.

(2) Color temperature up/down switch

Press plus or minus to select a color temperature preset or hold the plus to vary.

(3) Exposure time up/down switch

Press plus or minus to select an exposure time or hold the plus to set a variable exposure time. Note: exposure can only be changed in single speed video modes.

(4) Filter button

Press to enter the filters selection menu and select neutral density (ND) and/or effects (FX) optical filters.

(5) Bars buttons

Switches the test bars on and off and selects bar type.

(6) Standard Recall (or 'Green button')

Press and hold two seconds to recall standard values for the camera.

(7) User button SW1

Assignable user button SW1.


(8) User button SW2

Assignable user button SW2.

(9) PickMe button

This button can be configured to send an attention signal to the studio.

Camera back panel

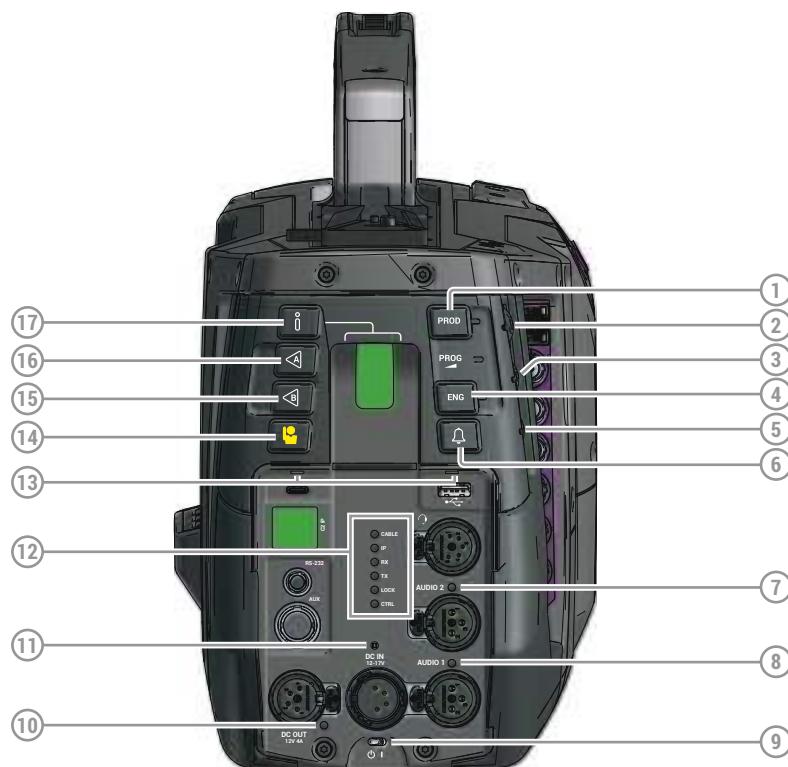

(1) Intercom Prod button

This button is used to activate the intercom Production channel ('talk').

(2) Intercom Prod volume

Headset volume for the intercom Production channel.

(3) Intercom Prog volume

Headset volume for the intercom Program channel.

(4) Intercom Eng button

This button is used to activate the intercom Engineering channel ('talk').

(5) Intercom Eng volume

Headset volume for the intercom Engineering channel.

(6) Call button

Press to send a Call signal to the studio. The Call indicator on the control panel(s) lights.

(7) Audio 1 indicator

This LED lights green when the audio input is set to mic sensitivity level, it lights blue when phantom power is switched on.

(8) Audio 2 indicator

This LED lights green when the audio input is set to mic sensitivity level, it lights blue when phantom power is switched on.

(9) Power switch

Main camera power switch.

(10) Power out indicator

This LED lights green when Power Out is available, it lights red when too much power is drawn from the Power output connector (overload indicator).

(11) Local power indicator

This LED lights green when Local power is present and OK, it lights red when the supplied voltage is lower than 12 VDC or higher than 17 VDC.

(12) IP diagnose indicators

Press and hold the info button at the back panel (17) or front panel to activate the IP diagnose indicators:

Indicator:	Color/Status:	Description:
CABLE	Yellow	Camera runs in XCU mode
	Purple	Camera runs in NativeIP mode
	Orange	Camera runs in DirectIP mode

Indicator:	Color/Status:	Description:
IP	Off	No (Q)SFP module present
	Red	(Q)SFP module mismatch
	Yellow	(Q)SFP module is present but no network link
	Green	(Q)SFP module is present and the network link is OK
RX	Red	Camera is not receiving IP Media data
	Yellow	Camera is receiving errors
	Green	Incoming IP Media data is valid
TX	Green	Outgoing IP Media data is enabled and delivered
	Red	Outgoing IP Media data is enabled but no ARP messages are received from receiver in unicast mode, or: unicast destination port number does not match the receiver's port number
	Off	Camera is not transmitting data (TX = 0 Mbps)
Lock	Green	Camera is locked
	Yellow	Reference signal present but camera is not locked
	Red	Camera is not locked
CNTRL	Green	Camera control link OK
	Red	Camera control link not valid
	Off	No camera control link

(13) Outside illumination (2x)

Two bright white LEDs illuminate the back panel to help locating connectors.

(14) PickMe button

This button can be configured to send an attention signal to the studio.

(15) Return B

This button can be assigned to an External/Return Video channel.

(16) Return A

This button can be assigned to an External/Return Video channel.

(17) Info button and indicator

Press and hold to view information on the viewfinder screen.

The indicator LED in the button indicates if there is a system error or warning. When the Info button is pushed once, the first info page with most important camera settings is shown in combination with the IP diagnose indicators.

Press again to show the IP info page with more detailed info about the IP link. The IP diagnose indicators stay active.

The diagnose page and the IP diagnose indicators extinguish after a few seconds or after the info button is held for more than 1 second. The number of seconds can be programmed in the camera menu.

Controlling the camera

There are several ways to control the camera:

- by using the operational switches on the camera;
- by using the (internal) camera menu to select functions;
- by using the Creative Grading Panel (CGP) and/or the Creative Grading Application (CGA) in the studio;
- by using the Camera Connect software package (for advanced configuration).



Note

If you cannot access some camera functions or you wish to restrict access, refer to "Access and security".

Navigating the camera menu

The camera menu can be viewed in the viewfinder, a connected monitor or remotely on the CGA. The camera menu can be navigated by means of the menu (rotary/push) button and back button which are located at the front of the camera:



The functions of the camera are grouped into a structure of menus and sub-menus. Each of the menus gives you access to a particular group of functions. Spend some time using the controls and menus to discover the various functions. You will quickly learn to operate the camera intuitively.




Note

Some of the menu items may not appear if the user level is not set to 3 or S (Service).

Entering the camera menu

Push the menu button after the camera is switched on, the message **Menu off** appears in the viewfinder. Press the menu button again while this text is showing, the **Main** menu appears in the viewfinder.

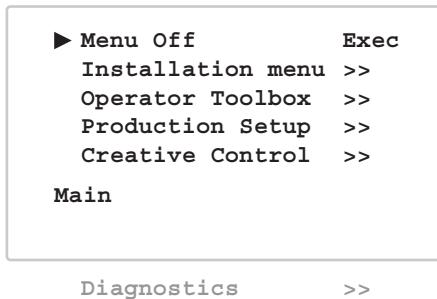

The **Main** menu screen shows five items. The name of the menu is shown below these. More items are hidden but become visible when you scroll down using the menu button. The cursor shows your position in the menu. Turn the menu button to move the cursor up and down.

Finding your way


Turn the menu button to move the cursor through the menu items. If a double arrow (>>) is visible, then pressing the select button brings you one level lower in the menu system. Only five items are visible in each menu. Scroll up or down to see any additional items. When you first enter a menu (other than the **Main** menu) the cursor is positioned next to the first item.

Press the back button to go back to the menu that you were in before the current one. The cursor is positioned next to the last menu.

You can also use the **Top** and **Previous** items to navigate. These items are not immediately visible but are located above the first item. Use the rotary control to scroll up to them.

- Select **Top** to bring you back to the **Main** menu.
- Select **Previous** to go back to the menu that you were in before the current one.

The **Production Setup** menu, for example, shows the items displayed when you first enter the menu. The other items are available by scrolling up or down with the rotary control.

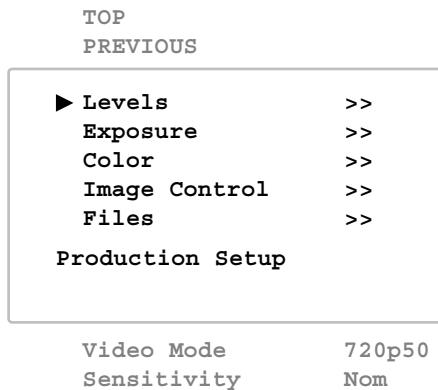

Leaving the camera menu

If you are deep within the menu structure, the recommended way of leaving the menu is to press the back button a number of times until the menu is abandoned. You can also navigate to leave the menu:

- If necessary move the cursor to the left column with the menu or back button.
- Scroll upwards with the rotary control until the cursor points to **Top** (the **Main** menu).
- Press the select button. The cursor now points to the **Menu off** item of the **Main** menu.
- Press the select button again to leave the camera menu.

If you do not use the menu it disappears after a few seconds. This delay can be programmed in the **Operator Toolbox** menu. You can also press and hold the or back button for 2 seconds to make the menu disappear.

When you press the select button again you enter the camera menu at the last position of the cursor and not at the top of **Main** menu.

To prevent confusion the next time you enter the camera menu, it is advisable to leave the menu by using the back button or by returning to the **Main** menu and selecting **Menu Off**.

Making value changes

To find out where you have to go to change a function, consult the camera menu reference to discover under which menu group or sub-group the function you want to change is located. If the cursor points to an item (and there are no double arrows to indicate a sub-menu) then the item pointed to has a value. This value can be:

- a toggle value (only two values, like on and off)
- a list value (more than two values)
- an analog value (in most cases variable from 0 to 99)
- unavailable.

If the value is unavailable it cannot be changed. This is indicated by three dashes (---). This can occur, for example, when a function is switched off. The analog values associated with that function are then unavailable.

If there are only two values associated with the function, then pressing the select button toggles between these two values. If a value is displayed next to a function that is one of several possible values, then pressing the select button places the cursor in a list menu indicating the value currently selected. Use the rotary control to point to a new value. Press the select button to return the cursor to the function list.

If an analog value is displayed next to a function name, then pressing the select button places the cursor in front of the value and the rotary control is used to change the analog value. Press the select button to return the cursor to the function list.

Undoing changes

If you make changes to the video settings in the camera menu and you decide not to keep them, use the green standard button at the side of the camera to recall a standard set of values for the video parameters.

Assigning user buttons

The camera has three assignable buttons: two on the left side panel (SW1 and SW2) and one under the handgrip. The operation of the RET and the VTR button on the lens can also be assigned. The assignment and switching mode (momentary or alternating) of these buttons can be set in the **Operator Toolbox > User buttons** menu.

Left side and lens buttons




User button SW1 can be assigned to:

- Intercom Call (Call)
- Switch to Return Video A (Ret A) - default
- Switch to Return Video B (Ret B)
- Production intercom (Prod)
- Engineering intercom (Eng)
- Select (for menu navigation)
- ND+ (ND filter selection up)
- Start Auto White Balance (AW)
- Extended Auto Iris (Eliris)
- Focus Assist (FocAst)
- Back (for menu navigation)

User button SW2 can be assigned to:

- Extended Auto Iris (Eliris)
- Viewfinder zoom function (Zoom)
- Focus Assist (FocAst)
- Switch to Return Video A (Ret A)
- Switch to Return Video B (Ret B) - default
- Production intercom (Prod)
- Engineering intercom (Eng)
- ND- (ND filter selection down)
- Intercom Call (Call)
- Back (for menu navigation)
- Select (for menu navigation)

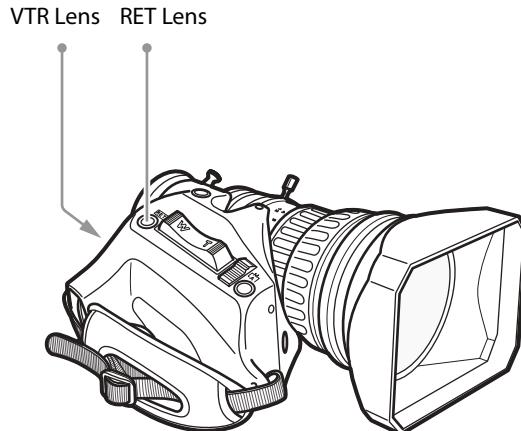

The VTR Lens button can be assigned to:

- Production intercom (Prod) - default
- Engineering intercom (Eng)
- Viewing zoom function (Zoom)
- Switch to Return Video A (Ret A)
- Switch to Return Video B (Ret B)
- VTR
- Info button (Info)

The RET Lens button can be assigned to:

- Switch to Return Video A (Ret A) - default
- Switch to Return Video B (Ret B)
- Viewing zoom function (Zoom)
- Focus Assist (FocAst)

Handgrip button



The right handgrip button is assigned to:


- Switch to Return Video A (Ret A) - default
- Switch to Return Video B (Ret B)
- Viewing zoom function (Zoom)
- Focus Assist (FocAst)

The left handgrip button can be assigned to:

- Production intercom (Prod) - default
- Engineering intercom (Eng)

Viewfinder controls

Front

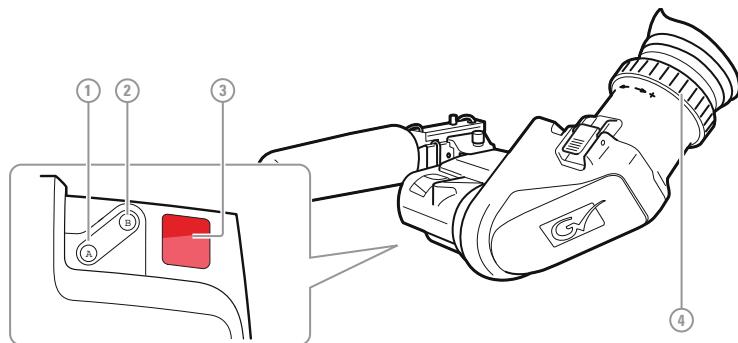

(1) User button (A)

This user button can be assigned in the viewfinder menu.

(2) User button (B)

This user button can be assigned in the viewfinder menu.

(3) Front tally indicator


This indicator (and the one at the rear of the handgrip of the camera) lights to indicate that the camera is On Air.

(4) Diopter adjustment ring

The diopter of the viewfinder can be adjusted to suit your eyesight by turning the diopter adjustment ring. Turn to the right for negative diopter values, turn to the left for positive values.

Back

Set up the viewfinder according to your own preferences; adjust viewing parameters, select markers, message boxes and on-screen display times in the **Operator Toolbox** menu.

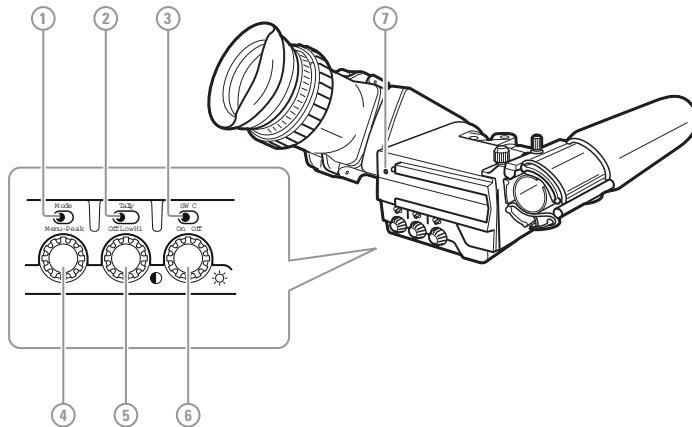

(1) Mode switch

This switch determines the function of the Menu/Peak rotary control below. Set the mode switch to the right (Peak) to use the rotary for peaking control. Set the mode switch to the left (Menu) to use the rotary for menu navigation.

(2) Tally switch

This switch is used to control the tally indicators at the front of the viewfinder and the rear of the camera handgrip. The toggle switch has three settings: Off, Low and Hi.

When the tally switch is set to the Off position, the tally indicators do not light even when the camera is On Air.

(3) User switch C (underscan)

Set this toggle switch to On to see a scaled down (to about 85% of the area) picture in the viewfinder. This allows for a greater viewing distance from the eyepiece. A blue border around the picture and the message "underscan" appear. Set the switch to Off to return to the original picture.

(4) Peaking/Menu control

With the mode switch set to Peak, turn this rotary control to adjust peaking (sharpness) of the viewfinder picture.

With the mode switch set to Menu, push this rotary control to enter the viewfinder menu and rotate to navigate the menu.

(5) Contrast control

Turn this rotary control clockwise to adjust the contrast of the viewfinder picture according to your preferences. The range runs from 0 (low) to 99 (high contrast).

(6) Brightness control

Turn this rotary control clockwise to adjust the brightness of the viewfinder picture according to your preferences. The range runs from 0 (very dark) to 99 (very bright).


(7) Rear tally indicator

This indicator lights to indicate that the camera is On Air. This indicator has the same function as the front tally indicator.

Viewfinder information

Indicators

Navigate to the **Operator Toolbox > Indicators** menu and select the on screen indicators you want to display in the viewfinder screen. The following indicators can be set up:

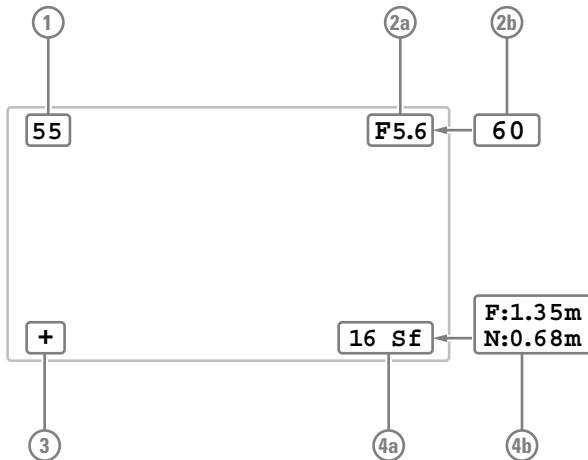

(1) Zoom indicator

Shows the percentage to which the lens has been zoomed out or in, ranging from 0 (wide angle) to 99 (telezoom). It shows 50 if the lens does not support this feature.

(2a) Iris indicator

Shows the iris opening (or F-value) of the lens. Typical range is from F1.4 to F25. The indicator shows 'Closed' when the lens is closed or capped.

(2b) Focus indicator

Shows the percentage of the lens focus distance. Typical range is from 0 (close-up) to 99 (infinity).

(3) Precision Focus indicator

Shows the Precision Focus indicator (if supported by the lens).

(4a) Filter indicator

Shows the selected optical filter(s).

(4b) Depth of Field indicator

Shows Depth of Field (DOF) of the current lens position. F = Far limit in meters, N = near limit in meters. Note: this feature must be supported by the lens.




Note

When the Iris indicator (2a) is switched on, the Focus indicator (2b) is automatically switched off and vice versa. When the Filter indicator (4a) is switched on, the Depth of Field indicator (4b) is automatically switched off and vice versa.

On screen marker indicators

Navigate to the **Operator Toolbox > Indicators** menu and select the marker indicators you want to display in the viewfinder screen. The following marker indicators can be set up:

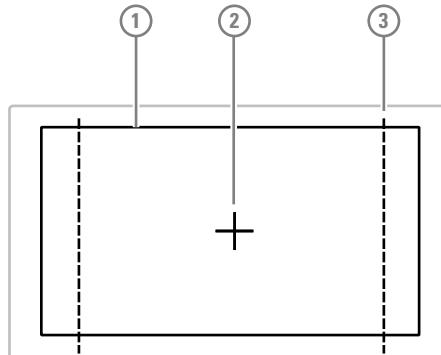

(1) Safe Area

Shows the minimum area that can be seen on a television screen. Different aspect ratios for the safe area can be set in the menu.


(2) Center Cross

Marks the center of the picture.

(3) Marker

A dotted white line or a shaded area that shows the limits of a 4:3, 15:9 or 14:9 picture.

Viewfinder LED indicators

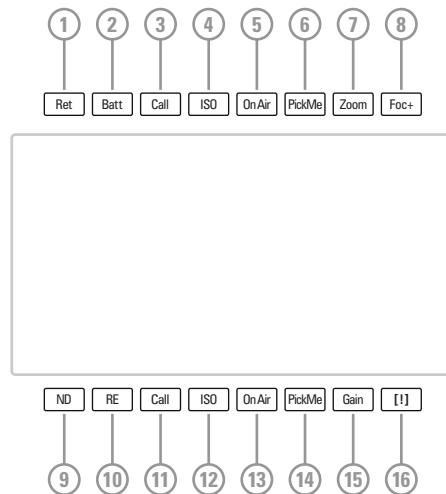

(1) Return video indicator

Lights if one of the return video channels is switched on.

(2) Battery indicator

Lights if the camera supply voltage is less than 11.5 V (when using an external supply).

(3,11) Call indicators (green)

Lights if Call signal or green tally is active.

(4,12) ISO indicators (yellow)

Lights if ISO signal or Yellow On Air is active.

(5,13) On Air indicators (red)

Lights if On Air is active.

(6,14) PickMe indicators (green)

Lights if PickMe is active.

(7) Zoom indicator

Lights when viewfinder zoom is active.

(8) Focus Assistant indicator

Lights when focus assistant is active.

(9) ND Filter indicator

Lights when a Neutral Density (ND) filter is used.

(10) Range Extender indicator

Lights when a Range Extender is enabled.

(15) Gain indicator

Lights when gain is lower than 0 dB or if gain is higher than +3 dB.

(16) Non-standard indicator

The non-standard video settings indicator (!) lights when one or more of the following conditions occur:

- Exposure Time is not set to the nominal value;
- Black Stretch is switched on;
- Extended Iris is switched on;
- AWC (Auto White Continuous or automatic white balance) or FL color temperature is switched on.

Information pages

Press and hold the info button at the front or at the back panel of the camera to view information on the viewfinder screen. The first info page appears in the viewfinder or monitoring channel. Press the info button again to scroll through 4 pages. Release the button and after a few seconds the info page disappears.

Page 1: IP connection page


	QSFP	SFP1	SFP2
Present	No	Yes	No
Los		Ok	
Link		Yes	
TX Mb/s		11032	
RX Mb/s		2208	
QSFP IP		10.11.5.2	
SFP1 IP		10.11.6.2	
SFP2 IP		10.12.7.2	

Page 2: Video and camera modes page

VideoMode CameraMode IP mode	4 k / 50 IP 25G
------------------------------------	-----------------------

Page 3: Basic video settings and buttons page

This info page shows mostly identification and operational information.

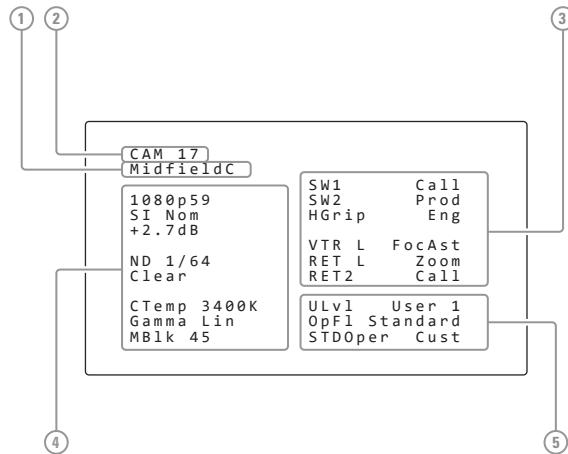

(1) System Alias

Displays the camera System Alias.

(2) Camera number

Displays the camera number.

(3) User button assignments

Displays the assignments for the user buttons on the camera.

(4) Video settings

Displays video mode, master gain, ND filter, FX filter, color temperature, selected Gamma curve and Master Black level

(5) Basic operator settings

Displays the current user level ("ULvl"), the last recalled operator file ("OpFl") and the standard recall file ("STDOper").

Page 4: BNC outputs on the camera

RX1	Act	Yes	Bnc - A	Main
RX2	Act	Yes	Bnc - B	Live
RX3	Act	No	Bnc - C	Ext1
Audio	Act	No	Bnc - D	Ext2
Icom	Act	No	Bnc - E	VF

Focus assist

The focus assist function can be switched on or off in the **Operator Toolbox** menu. This function adds a motion effect in the viewfinder to objects in sharp focus. The FOC+ indicator in the viewfinder lights when this function is on.

Viewfinder zoom

The viewfinder zoom function is another feature that helps you focus. This function enlarges the center of the viewfinder image. Choose one of the following buttons and the way it operates (momentary or toggle) to control this function in the **Operator Toolbox** menu:

- The VTR button on the lens,
- The RET switch on a zoom control when a SuperXpander is used.

When the viewfinder zoom function is in use, the viewfinder markers are switched off to improve the clarity of the display. The Zoom indicator in the viewfinder flashes when the viewfinder zoom function is active.

Lens operation

Back focus adjustment

When you fit a lens to the camera you may need to adjust the back focus. Refer to the lens manufacturer's instructions to find out how to do this. The **Lens** menu allows you to choose and, if necessary, adjust other parameters to suit your lens type and your personal preferences.

CLASS

The Chromatic Lens Aberration and Sharpness Solution (CLASS) compensates for chromatic aberration by using lens data. Most major lens manufacturers support this feature.

Make sure that the lens interface is set to Digital in the **Configuration > Lens > Lens Settings > Lens IF Type** menu.

When a lens is attached to the camera for the first time, the camera reads the lens data at startup. This is done only once and may take some time to finish. Reading the lens data is a background process and does not influence normal camera operation.

Some lenses also require a manual calibration of the lens ring positions. If this is the case, a message ("CLASS: Turn lens rings") is briefly shown in the viewfinder. Turn both zoom and focus ring all the way from one end to the other.

After startup when CLASS is active, a message ("CLASS: Active") is shown in the viewfinder.

In the (very rare) occasion that lens aberration data becomes corrupted, a reset of the lens data can be forced:

Go to the **Configuration > Lens > Lens Settings > CLASS > Reset CLASS Data** menu and select Start.

Auto Iris

When the amount of light in the scene varies (for example when shooting outdoors) the Auto Iris function can be switched on to automatically and continuously measure light levels and adjust Iris for optimal exposure.

When your lens has an Auto Iris switch, make sure it is set to the on position.


To switch Auto Iris on, go to the **Production Setup > Exposure > Iris > Auto Iris** menu and set the **Auto IRIS** function to On.

The default settings for Auto Iris are suitable for most situations but some situations may require different settings.

Setting the Auto Iris measurement area


The user level must be set to Service to access this function.

Select the Auto Iris measurement area using the **Area** function in the **Auto IRIS** menu. The following areas can be selected:

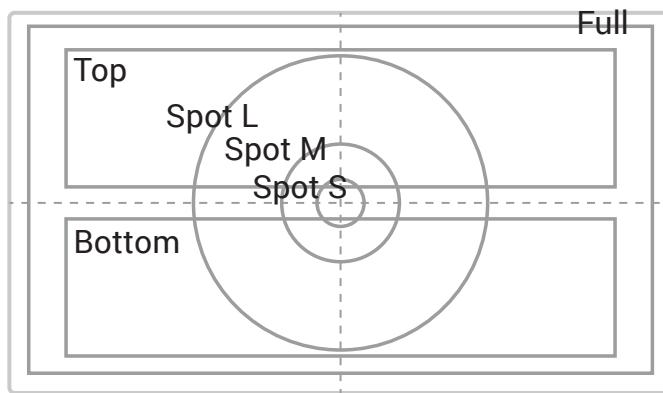

- **Top**—covers the top half of the screen, or 50% of the total surface. This is the default setting.
- **Spot S**—small center spot, covers 5%.
- **Spot M**—medium center spot covers 10%.
- **Spot L**—large center spot, covers 25%.
- **Full**—full screen measurement, covers 100%.
- **Bottom**—covers the lower half of the screen, or 50% of the total surface.
- **Custom**—a customer defined measurement area.

When **Area** is set to Custom, a customer defined area can be defined under the **Custom Area** sub menu by entering top, bottom, left and right parameters for two separate measurement areas: one for Peak and one for Average values. Auto Iris combines the readings from these two areas and uses the outcome to control the Iris opening.

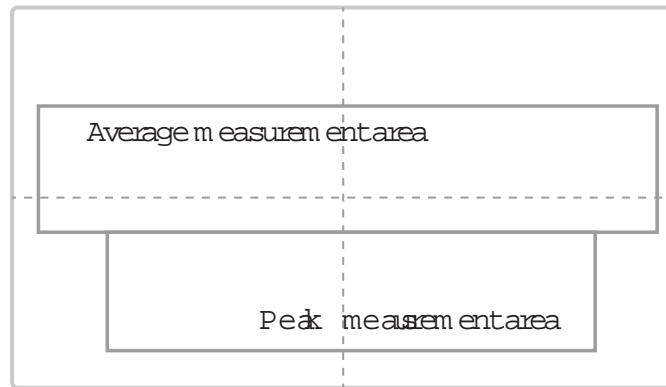

Changing Auto Iris advanced settings



Note

The user level must be set to 3 to access this function.

- **Peak/Average**—the Auto Iris function measures both the average light level and the peak light level of the image and combines these two readings to control Iris. Use the Peak/Average function to shift between more Peak mode (lower values) or more Average mode (higher values). The default value is 64 which is slightly more Average than Peak measurement.
- **Auto Iris Setpoint**—sets the target exposure level for Auto Iris. The default value is 35—higher levels give higher Iris value and thus a brighter picture.
- **Momentary Iris Setpoint**—sets the target exposure level for Momentary Iris (not a relevant setting for Auto Iris)
- **Auto Iris Gain**—sets the speed at which the Auto Iris reacts to changing lighting conditions. 5 = slow (default), 10 = fast.

Extended Iris

The Extended Iris function automatically adjusts the video signal level by adjusting the iris opening, the gain level and the exposure time to suit the ambient lighting conditions.



Note

Make sure that the SW2 button is assigned to Eliris (Extended Iris) in the **Operator Toolbox** > **User Buttons** > **SW2** menu.

To switch on the Extended Iris function use the assignable button SW2 at the left-front side of the camera. When this button is pressed once, the current value of the Extended Iris function is displayed. Press the button twice in quick succession to toggle between on and off.

When Extended Iris is on, the non-standard indicator in the viewfinder lights, and gain and exposure controls are blocked. Settings for the Extended Iris function can be changed in the **Production Setup > Exposure > Extended Iris** menu.



Tip

You can use Extended Iris to maintain a constant depth of field while shooting.

Precision focus

The camera supports the precision focus feature which is offered by some advanced (digital) lenses. This system automatically focuses the image within a user defined focus frame on the screen. When precision focus is enabled on the lens, the focus frame is superimposed on the viewfinder image. The frame can be moved and resized by the controls on the lens or on the focus handle.



An indicator in the bottom left corner of the viewfinder screen shows the current focus information:

Indication	Focus information
--	focus is behind
-	focus is behind
0	area is in focus
+	focus is in front
++	focus is in front

Refer to the documentation of the lens manufacturer for more information about the precision focus feature.

Lens indicators in the viewfinder

The RE indicator in the viewfinder lights when a lens range extender is selected.

The Iris indicator in the viewfinder shows the value of the iris opening (when enabled in the camera menu).

The zoom indicator in the viewfinder shows the percentage to which the lens has been zoomed out or in, ranging from 0 (wide angle) to 99 (telezoom). It shows 50 if the lens does not support this feature.

The focus indicator shows the percentage of the focus distance range from 0 (close-up) to 99 (infinity). This feature is only available when a digital lens is used.

Connecting audio

Analog audio

Set the gain levels (-22 dB to -64 dB for mic input level or +4 dBu to -10 dBu for line level) for the analog audio channels in the **Audio** section of the **Configuration** menu.

Both a high pass filter (HPF) and auto level control (ALC) are available for each channel and can also be switched on in this menu. Also a delay up to 170 ms can be set.


The channel 1 input socket selection switch selects either:

- the Mic connector at the front-right (Front) of the camera, or
- the Audio 1 connector at the rear of the camera (Rear)
- as the input for audio channel 1.



Note

A phantom power (+48 VDC) for the front mic socket can be set with the **Configuration > Audio > Front Mic > FrontMic Source** function.

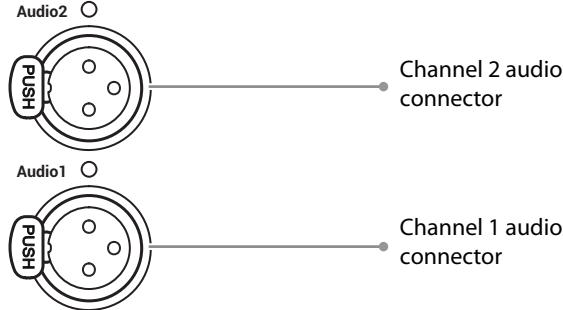

The audio channel 1 and 2 level switches select either a line level input (Line), a microphone level input (Mic) or a microphone level input with phantom power (+48 VDC) for channel 1 and 2 rear connectors (Audio 1 and Audio 2).

The (analog) audio channels are available:

- as audio channels 1 and 2 embedded in the HD-SDI video signal
- on the XCU at the XLR 3 audio output connectors
- on the XCU as converted digital signal at the Digital Audio OUT 1+2 connector

Digital audio

Two digital audio channels are available as AES signal. Set the An VF Out/AES in switch to AES in and connect an AES digital audio source to the An VF Out/AES in connector (top left BNC connector).


Digital audio channels 3 and 4 are available on the digital audio output (3+4) connector on the XCU and as embedded audio channels 3 and 4 in the HD-SDI video signal.

Using intercom

Three intercom channels – production (Prod), program (Prog) and engineering (Eng) – are sent from the XCU to the camera headset. The headset microphone signal is sent back to the XCU. Intercom signals are available at the XCU's intercom connector on the back panel.

To use the intercom system, connect a headset to the XLR5 connector on the back panel of the camera. An additional Tracker headset can be connected to the auxiliary connector.

Selection buttons and volume controls for the intercom channels can be found on the front and the back of the camera.

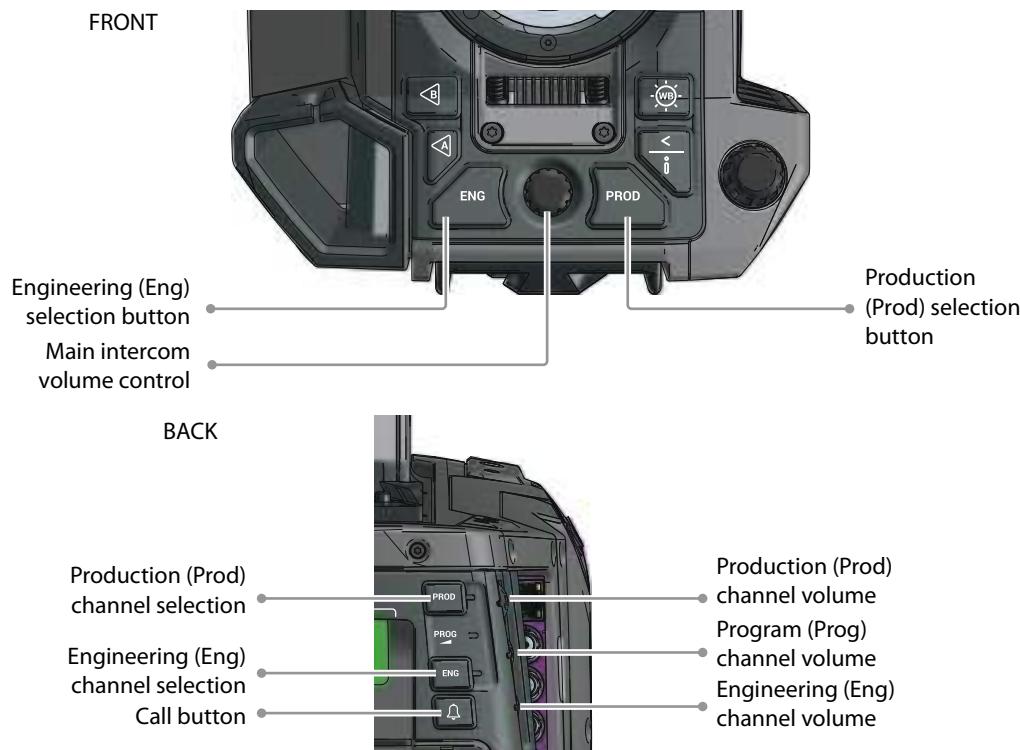

Selecting intercom channels

Push the engineering (Eng) channel selection button to talk to the engineering intercom channel. Push again to switch off the engineering channel.



Note

Go to the **Operator Toolbox > User buttons** menu and select the **Eng Mode** function to change the switching mode (momentary or alternating) of the Eng button.

Hold the production (Prod) channel selection button to talk to the production channel. Release to switch off the production channel.

Adjusting intercom volume

Use the rotary controls at the back panel of the camera to adjust the audio volume of the three intercom channels:

Prod—adjusts the volume of the production channel intercom signal.

Prog—adjusts the volume of the program intercom channel signal.

Eng—adjusts the volume of the engineering intercom channel signal.

To adjust the audio volume of the signal from the Tracker headset microphone go to the **Configuration > Intercom** menu and change the **Cam Tracker lvl** item.

Routing signals

By default, all three intercom channels are audible on both muffs (left and right) of the camera headset. The routing of the intercom channels can be changed to personal preference. Go to the **Configuration > Intercom** menu to set up the routing:

- Cam Prod—selects to which ear muff(s) of the camera headset the production intercom channel is routed.
- Cam Eng—selects to which ear muff(s) of the camera headset the engineering intercom channel is routed.
- Cam Prog—selects to which ear muff(s) of the camera headset the program intercom channel is routed.
- Cam Tracker—selects to which ear muff(s) of the camera headset the Tracker's microphone signal is routed (when a Tracker headset is connected).

Intercom microphone gain, 12V bias tee power supply and microphone on/off switches are also available in this menu.

Adjusting sidetone volume

Sidetone levels (this is audio feedback from microphone to ear muffs) for camera and Tracker headsets can be adjusted in the **Operator Toolbox > Intercom** menu:

- Cam Sidetone—adjusts the sidetone level of the camera operator's headset from 0 (muted) to 99 (loudest).
- Tracker Sidetone—adjusts the sidetone level of the Tracker's headset from 0 (muted) to 99 (loudest).

**Note**

Only the sidetone levels for the right side ear muff can be adjusted. The left ear muff always has a fixed sidetone level.

Assigning buttons

The user buttons at the left side panel of the camera (SW1 and SW2), the user button under the handgrip and the VTR button on the lens can also be used to send the intercom signal from the headset to Production or Engineering.

Go to the **Operator Toolbox > User buttons > Buttons** menu to assign user buttons to intercom functions:

- SW1—assigns a function to user button SW1: Call, Ext1, Ext2, Prod, Eng, Select.
- SW2—assigns a function to user button SW2: Eliris, Zoom, FocAst, Ext1, Ext2, Prod, Eng.
- VTR Lens—assigns a function to the VTR Lens button: Prod, Eng, Zoom, Ext1, Ext2.
- Handgrip Left—assigns a function to the left side button underneath the camera handgrip: Prod, Eng.
- Eng Mode—selects switching mode for the engineering channel selection button at the back panel of the camera: momentary (push) or alternating (toggle).

Setting up the Tracker headset

Go to the **Configuration > Intercom > Tracker** menu to change settings for the Tracker headset.

Function	Values	Default	Description
Tracker Mic To	Off, Cam, Eng, Prod, All	Off	Selects the Tracker microphone routing.
Tracker Mic Gain	0 dB, 12 dB, 24 dB, 40 dB	40 dB	Selects gain of camera Tracker's intercom microphone.
Tracker Mic Pwr	Off, On	Off	Switches bias tee power (12 VDC) to the Tracker's microphone on or off.
Tracker Mic Src	Eng, Side	Side	Selects Engineering channel or Tracker's microphone sidetone for tracker's headphone.

Call button

Press the Call button on the back panel to send a signal to the camera control panels in the production control room calling for attention.

The indicator in the button lights when a Call signal is sent or received. The Call indicator in the viewfinder also lights.

Communication

Return video channels



Return A and B buttons can be assigned to one of the three available External video channels or the teleprompter channel in the camera menu. Press and hold to view the assigned video channel in the viewfinder.



Tip

The Return A and B buttons can be programmed as momentary (default) or alternating switches in the **Operator Toolbox > Buttons** menu.

The indicators in the Return A and B buttons light when the video channel the respective button is assigned to, is switched on.

PickMe button

Press the yellow PickMe button on the left side of the camera or on the back panel to send an attention signal directly to the program director. This function can be used when the

camera operator is shooting critical or high priority footage that needs immediate action by the director.

Typically, a Connect Gateway server can be set up to route this signal to the production control room, for example to switch the camera's main video directly to the program channel (On Air).

Other communication

Private data (RS-232 connection)

The 6-pin RS-232 connector on the back panel of the camera allows for a serial two-way private data channel (a 115 kbit/s serial connection) between camera and XCU (only in XCU mode)

Tracker Tally signal

The 20-pin auxiliary connector on the back panel of the camera provides, as well as providing full intercom facilities (Tracker intercom) for the dolly or crane driver, also carries the tally signal and a +12 VDC power supply. This allows an external On Air lamp to be used. For more detail and an application schematic, refer to [Auxiliary connector](#), on page 150.

Managing files

You have access to many different files. The **Configuration > Files** menu is used to recall and store these files. There are four types of files:

- Scene files
- Operator files
- Lens files
- Media files

A scene file contains values related to the picture performance. The operator file contains values related to the setup of the camera (viewfinder and configuration parameters). Lens files contain lens related settings. Media Files contain values related to the IP Media Network such as IP addresses and settings.

The tables in Appendix A indicate the functions that are stored in the scene file, functions that are stored in an operator file and those that are stored in a lens file.

Scene files

Four scene files are stored in the camera itself (SCAM1, SCAM2, SCAM3 and SCAM4) while more scene files can be stored on a USB flash drive. A Standard scene file (preselected as either factory or customer defined) is stored in the camera.



Note

The standard Customer Scene file is stored via the **Security** menu, not the **Files** menu. The decision to use the factory defined file or the customer defined file as the standard file is also made in this menu.

The **Files** menu enables the scene files to be stored and recalled using the store and recall entries of the menu system. If the message **NOK** ('Not OK') is displayed, the old values are restored.



Note

If the camera is on air and a scene file is recalled, the recalled values do not become active until the camera goes off air.

Operator files

Four operator files are stored in the camera itself (OCAM1, OCAM2, OCAM3 and OCAM4) while more operator files can be stored on aMedia USB flash drive. These files contain information for setting up the non-video configuration of the camera. A Standard operator file (factory or customer defined) is stored in the camera.



Note

The standard Customer operator file is stored via the **Security** menu, not the **Files** menu. The decision to use the factory defined file or the customer defined file as the standard file is also made in this menu.

Lens files

Lens files contain settings related to the lens configuration (e.g. white shading). Up to four lens files (LCam1 to LCam4) can be stored in the camera.

Media files

Media files

Standard files

By default, the green Std File button on the left-front side of the camera recalls the standard Scene file. This file contains default parameters for picture performance. A standard Operator file can be recalled via the **Files** menu. This file contains parameters for the set-up of the camera.

Customer standard files

You can define a customer standard file for the standard Scene file and for the standard Operator file. The contents of the customer files for both these standard files is stored via the **Configuration > Security** menu.

The selection of a factory defined or a customer defined file for use as a standard file is also made in this menu. You can only access the functions of the **Security** menu with the PIN code of the camera.

6

Video setup

Video settings

Standard settings

To make sure that (some of) the camera functions are not set to unusual values, a standard file has been defined that contains the default values for most video functions. The [Reference tables](#), on page 91 list the (default) values that are set when the standard file is recalled.

To recall the standard values for the various video functions, press the STD button on the left side of the camera and hold it for two seconds. The standard values only take effect when the camera is not On Air.

The standard file can be selected as either a factory or a customer standard file. Changing the standard file can only be done in the **Security** menu if a PIN code is used.

Non-standard indicator

The non-standard indicator in the ocular viewfinder lights when one of the following conditions occur (refer to the user's guide of the viewfinder for more details):

- Black Stretch is switched on
- Extended Auto Iris is switched on
- AWC or FL50/FL60 color temperature is selected

Video mode

CGA In the Main video menu, go to **Setup > Video**. Tap the **VideoMode** item to select the video mode you wish to use for your production.

CAM In the camera menu, go to the **Production Setup > Video Mode** item and select the video mode.

Sensitivity mode

To obtain the best results under different lighting conditions, the camera's sensitivity mode can be selected.¹⁾

CGA In the Main video menu, go to **Setup > Video**. Tap the **Sensitivity Mode** item and select the sensitivity mode.

CAM In the camera menu, go to the **Production Setup > Sensitivity** item and select the sensitivity mode.

The following sensitivity modes are available:

- **High Quality mode** — for studio locations and other environments with very good lighting conditions. This mode provides superior quality pictures with very low noise.
- **Nominal mode** — for general purpose situations with variable lighting conditions. This mode provides very good pictures with low noise.
- **High Sensitivity mode** — for situations with poor lighting conditions. This mode results in acceptable quality pictures.

The following settings and ranges are in use with the different sensitivity modes:

	High Quality mode	Nominal mode	High Sensitivity mode
Basic sensitivity (@2000 lux): ²⁾	typ. F8	typ. F12	max. F17
Video gain range:	-3 .. +12 dB	-3 .. +12 dB	-3 .. +18 dB
Texture representation:	Excellent	Very good	Fair
PowerCurves exposure input range :	up to 300%	up to 800%	up to 800%
Exposure time range:	down to 1/1000 s	down to 1/1000 s	100 Hz/120 Hz to Nom.

¹⁾ Sensitivity mode is not available when a high speed video mode is selected.

²⁾ Actual basic sensitivity depends on selected video mode/frame rate.

Color bar

The color bar is the standard test signal that is used to set up and check the camera before shooting. When the color bar is selected the following functions are temporarily switched off: Black Stretch, White Limiter, Zebra and the Safe Area and cadre indicators. The lens iris closes automatically when the color bar is switched on.

CGP Press the TEST button on the left side of the panel to switch on the color bar. Initially, the standard color bar is switched on and the button lights. Press it again to switch on the sawtooth signal. The button lights orange. Press again to switch off all test signals.

CAM Press the BARS button on the left side panel (middle button) to switch on the standard color bar:



Gain

Depending on the available light level it may be necessary to adjust the video gain settings of the camera.

CGP

Turn the upper ring on the stick to vary Gain in steps of 0.1 dB.

CAM

On the camera, Gain is selected via the GAIN switch on the left side panel of the camera:



- When the switch (plus or minus) is pressed initially, the current Gain value is displayed in the viewfinder.
- Holding the plus or minus position for a short moment selects one of the five preset Gain settings: -, 0, +, ++ and +++.

The actual value of the Gain in dB is assigned to these presets in the **Production Setup > Levels > Gain > Gain Presets** menu.

Gain Preset	Gain (in HiQ and Nom mode)	Gain (in HiSens mode)
-	is always -3 dB	is always -3 dB
0	is always 0 dB	is always 0 dB
+	can be set to +3 or +6 dB	can be set to +3, +6, +9 or +12 dB
++	can be set to +6 or +9 dB	can be set to +6, +9, +12 or +15 dB
+++	can be set to +9 or +12 dB	can be set to +9, +12, +15 or +18 dB
-	is always -3 dB	is always -3 dB



Note

When Gain is set to negative values, or values higher than 3 dB, the Gain indicator in the viewfinder lights (only for ocular viewfinder).

The Gain switch can also be used to vary the Gain continuously between its minimum and maximum value.

- Hold the plus or minus position continuously until you see the value in the viewfinder change in steps of 0.1 dB.
- Release the switch when you reached the value you want. This exits the value selection mode.
- Using the switch momentarily again sets the Gain to the nearest preset value.




Note

Selecting high Gain levels may introduce noise into the image.

Gamma (NOT valid for HDR)

Gamma correction

To compensate for the non-linear response of display devices, a gamma correction is applied to the video signal. The gamma correction adjusts the tonal response of the standard transfer curve.

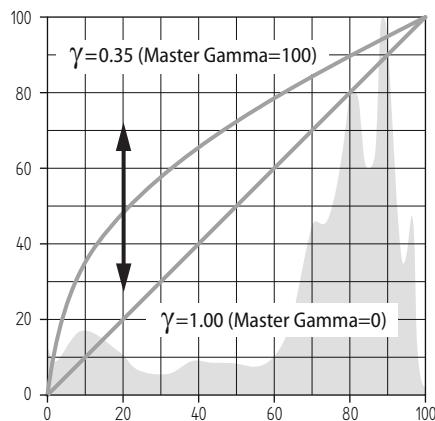

Gamma curve

The gamma curve defines the distribution of tonal values. The following standard gamma curves are available: ITU709 (default), BBC04, BBC05 and BBC06, ARD, Gamma-J and Gamma-S.



In the camera menu, navigate to the **Production Setup > Levels > Gamma > Curve** item and select the Gamma curve you want to use.

Gamma presets

The Gamma preset selection determines how mid-range tonal values are reproduced. Available gamma presets are:

- Nom (nominal) setting: Master Gamma = 76 (slope = 0.45)
- Lin (linear) setting: Master Gamma = 0 (slope = 1.00)
- Var (variable) setting: Master Gamma is adjustable between 0 (slope = 1.00) and 99 (slope = 0.35).



In the camera menu, navigate to the **Production Setup > Levels > Gamma > Preset** function and select the Gamma preset from the list.




Note

It is also possible to change Gamma for each channel (R,G,B). Changing the slopes of the individual color gamma changes the representation of white in the mid-range tonal values.

Contrast

Contrast adjustment

To create more or less contrast in the picture, luminance levels can be adjusted independently for three tonal ranges: shadows, midtones and highlights.

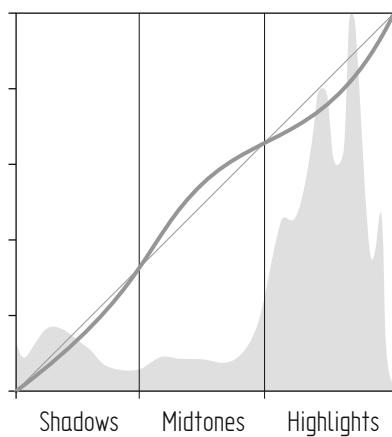

In the camera menu, navigate to the **Creative Control > Levels > Contrast** menu and switch **Contrast** on. Use the **Shadows**, **Midtones** or **Highlights** items to adjust the luminance level for each tonal range between 0 and 99.

Values below 50 decrease luminance levels while values above 50 increase levels.




Note

Contrast adjustment is always applied after Gamma.

Black Stretch

The Black Stretch function changes the level of tones in the shadow areas of the picture without affecting the rest of the picture.

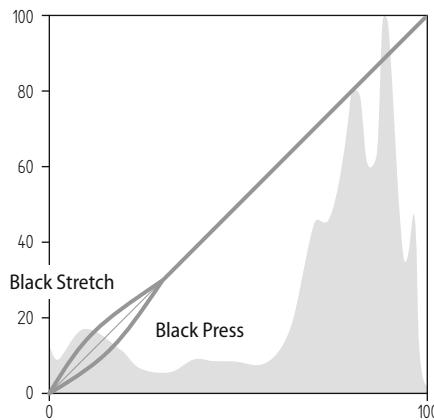

CAM In the camera menu, navigate to the **Production Setup > Levels > Black** menu and switch on the **Black** item. Adjust the Black Stretch level from 0 to 99 using the **Black Str Level** function.

Values below 50 are Black Press, values higher than 50 are Black Stretch.



Note


Black Stretch is applied independently from Gamma.

When Black Stretch is switched on the non-standard indicator in the viewfinder lights (only for ocular viewfinder).

Knee (not valid for HDR)

Knee is a function that compresses the wide dynamic range of the video signal coming from the imager into the more limited video output range.

Knee (in PowerCurves mode)

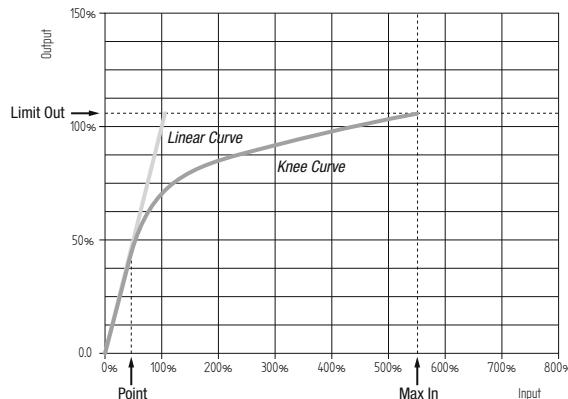

Knee can be set up as an automatic or variable function. It can also be switched off, which is the default setting.

CAM In the camera menu, navigate to the **Creative Control > Levels > Knee > Knee** item and select Auto, Var or Off.

Auto Knee

In Auto Knee, the Knee Point is fixed to 50% and Max In is set to 400%. The Limit Out can still be adjusted between 100% and 118%. The camera automatically fades between the fixed Knee curve and the linear curve.

Variable Knee

The following parameters in the Knee menu can be used to set up variable Knee in PowerCurves mode:

- Kn Point/Point (0% to 90%): this is the video input level from which Knee starts compressing.
- Kn OutLim/Limit Out (100% to 118%): the highest video level that is produced at the video output.
- Kn Max In/Max In (100% to 800%): the maximum allowed video input level.




Note

Use the **Kn Fade/Fade Level** item in the Knee menu to fade between the set up Knee curve (fade level = 0) and the linear curve (fade level = 99).

To match Knee with cameras without PowerCurves Knee, you can switch the Knee function to compatibility mode. Follow the steps below and refer to the next chapter for more information about compatibility mode:

CAM In the camera menu, enter Service user level and navigate to the **Creative Control > Levels > Knee > Advanced Knee Mode** and select PwrCurves or Compat.

Knee (in compatibility mode)

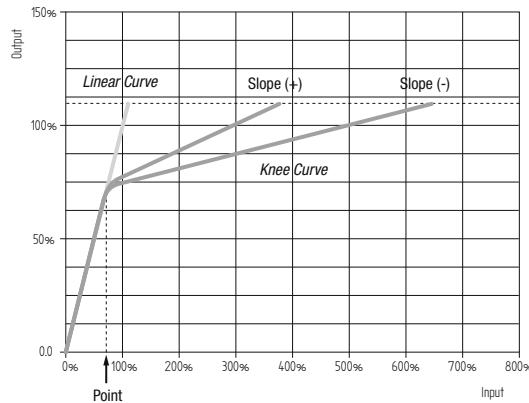

Knee can be set up as an automatic or variable function. It can also be switched off, which is the default setting.

CAM In the camera menu, navigate to the **Creative Control > Levels > Knee > Knee** item and select Auto, Var or Off.

Auto Knee

In Auto Knee, the Knee Point is fixed while slope automatically adjusted achieve the best possible Knee compression.

Variable Knee

The following parameters in the Knee menu can be used to set up variable Knee in compatibility mode:

- Kn Point/Point M (0 to 99): this is the video input level from which Knee starts compressing.
- Kn Slope/Slope M (0 to 99): determines how much compression is applied above the Knee point.
- Knee Limit (0 to 99): the maximum allowed video input level.

Optical filters

Both a Neutral Density filter (ND) and a Special Effects filter (FX) can be placed in the path of the optical signal to modify the incoming light. These filters can be used, for example, to control depth of field or exposure levels.

Press the FILTER button and select the filter type you want to change: ND or FX. Use the navigation buttons to step through the ND and FX filters.

CAM On the camera, press the FILTER button on the left side panel of the camera. The Filters menu is shown in the viewfinder. Use the front menu rotary to navigate to the filter type (ND or FX) and select the filter from the list.

Five Neutral Density (ND) filter positions are available:

- Clear - no filter is placed in the optical path
- ND1/4 - 2 stops light reduction neutral density filter
- ND1/16 - 4 stops light reduction neutral density filter
- ND1/64 - 6 stops light reduction neutral density filter
- Capped



Note

When a Neutral Density filter is selected, the ND indicator in the viewfinder lights (only for ocular viewfinders).

Three Effects (FX) filter positions are available:

- Clear - no filter is placed in the optical path
- Star 4P - 4 Point Star filter

- Sft Fcs - Soft focus filter



Note

The camera does not need color optical filters to be able to white balance correctly. The range of the auto-white balance is so wide (from 2500 K to 20000 K) that there is never any need to use color filters to obtain the correct white balance.

Exposure

Exposure time



Note

Exposure times other than nominal is not available in high speed video modes.

The exposure time values of 1/200, 1/500 and 1/1000 of a second are used to capture fast moving objects so that these can be played back sharply in slow motion. The value selected depends on the speed of the moving object.



On the camera, exposure time is selected by the exposure time switch on the left side panel of the camera:



The exposure time switch gives a choice of exposure time settings. If an exposure time other than nominal is selected, the non-standard indicator in the (ocular) viewfinder lights.



Note

Decreasing the exposure time lowers the camera's sensitivity proportionally.

- Nom — nominal setting
- Var — enable the exposure time to be varied
- 1/200 — for fast moving objects
- 1/500 — for fast moving objects
- 1/1000 — for fast moving objects
- 50 Hz — shooting under 50 Hz lighting (adjustable with lighting correction)
- 60 Hz — shooting under 60 Hz lighting (adjustable with lighting correction)

Lighting correction

The exposure selection also includes lighting control positions which can be used when shooting with lighting that is operating at a different frequency to the camera. There are two positions: 50 Hz and 60 Hz. Each of these positions can be varied further in a range from -10 to +10 Hz. To reduce flicker select the frequency closest to the frequency of the lights and then vary the lighting control in the **Production Setup > Exposure > Lighting** menu to obtain the best result.

V-Shift (vertical acquisition shift)

When shooting monitors with (almost) the same display frequency as the camera's, for example TV sets, a horizontal black bar can be seen in the viewfinder. This phenomenon occurs because the camera is blanking while the monitor is not. The V-shift function shifts the camera blanking to synchronize it with the blanking of the monitor.

CAM

In the camera menu, navigate to the **Production Setup > Exposure > Acq Timing** menu and switch on the **V-Shift** item. Use the **V-Shift time** item to change the time shift until the horizontal bar disappears.



Tip

V-Shift can also be used to remove color shifts that may occur when shooting DLP-type projectors.

LED Wall Filter

When shooting against LED Wall backgrounds that contain high frequencies, interference may occur, resulting in unwanted moire patterns. A special electronic filter is available that can be used to reduce these effects:

CAM

In the camera menu, navigate to the **Production Setup > Exposure** item and switch **Led Wall Filter** on.

Color

Color Temperature

For true color reproduction the ambient lighting conditions must be compensated for by selecting a value for the color temperature. The standard file setting is 3200 K (normally used for tungsten and indoor lighting). Two other reference color temperatures are available: 5600 K (for outdoors, clouded conditions) and 7500 K (for outdoors, clear blue skies).

The memory positions (FL50, FL60, AW1 and AW2) are available to store the results of the auto-white measurement process. The memory positions store measured values using the automatic white balance switch at the front. The FL positions are recommended for shooting with fluorescent light.

A continuous automatic white balance position (AWC) is also available. This function continuously measures the white balance and adjusts it accordingly. It can be used when a constant color balance is required under changing lighting temperatures (sunsets, indoors/outdoors use).

Color Tint

In some cases, color temperature alone is not enough to fully compensate for color cast so an additional tint adjustment is needed. Similar to how color temperature specifies the relative warmth or coolness of an image, tint generally specifies the balance between magenta and green color casts. When combined, color temperature and tint can therefore control and effectively remove virtually any color cast.

Color Filter

In the auto-white positions (FL50, FL60, AW1 and AW2) a color filter can be set up in the **production Setup > Color > Color Temp > Color Filter** menu. This varies the color balance to obtain warmer or colder color effects.



Note

The automatic white balance process is performed independent of the color filter. The color filter is not disabled when AWC is on.

Selecting color temperature



On the camera, color temperature selected by the color temperature switch on the left side panel of the camera:



Three preset color temperatures are available:

- 3200 K - for indoor lighting conditions
- 5600 K - for outdoors, clouded conditions
- 7500 K - for outdoors, clear blue skies

and four memory positions:

- FL50 - memory position for 50 Hz fluorescent light (matrix is set to CoolFL and exposure to 50 Hz)
- FL60 - memory position for 60 Hz fluorescent light (matrix is set to CoolFL and exposure to 60 Hz)

- AW1 - Auto White memory position 1
- AW2 - Auto White memory position 2

and one automatic continuous white position:

- AWC - Auto White Continuous measurement (from 2500 K to 20000 K)



Note

If AWC is selected, the non-standard indicator in the viewfinder lights (only for ocular viewfinders).

When the switch is first pressed, the viewfinder displays the current value. Select a new value by scrolling up or down through the available values.

The viewfinder also displays the measured color temperature. The range of the auto-white balance is from 2500 K to 20000 K.


Variable color temperature

The color temperature switch on the left-front side of the camera can also be used to vary the color temperature continuously between its minimum and maximum value (2500 K to 20000 K).


- 1 Press and hold the plus or minus position until you see the value in the viewfinder change.
- 2 Release the switch when you reach the value you want. This exits the value selection mode.
- 3 Pressing the plus or minus position again sets the color temperature to the nearest standard value.

Auto White Balance

If the reference color temperatures does not match your lighting conditions carry out the Auto White Balance procedure as follows:

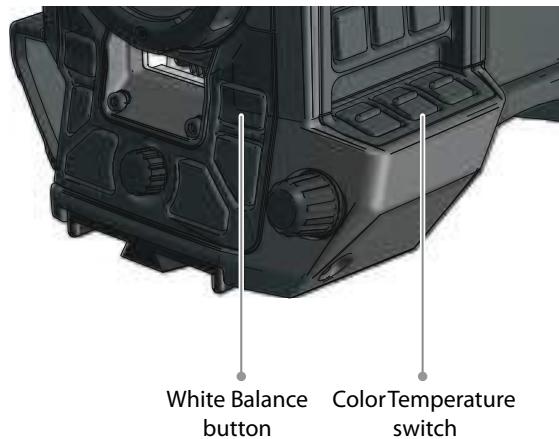


- 1 On the CGA, go to the **Color menu > Color Temperature** and select one of the memory positions (FL50, FL60, AW1 or AW2) in which to store the measured color temperature value.
On the camera use the color temperature switch to select one of the memory positions (FL50, FL60, AW1 or AW2) in which to store the measured color temperature value.
- 2 In the Color Temperature menu on the CGA, tap the AUTO WHITE button to start the Auto White balance procedure.
On the camera, press and hold (2 sec) the WHITE BALANCE button on the front panel to start the Auto White Balance procedure.
- 3 The following appears in the viewfinder:

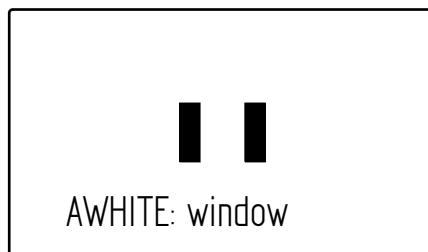

Note

If you did not select one of the memory positions FL50, FL60, AW1 or AW2, a message ("Set Color Temp") appears in the viewfinder.


- 4 Point the camera so that the reference white surface is between the two small black boxes.
- 5 On the CGA, tap the WHITE BALANCE button again.
On the camera, press the WHITE BALANCE button on the front panel again to start the measurement procedure.
- 6 A message indicating that the process is running appears:

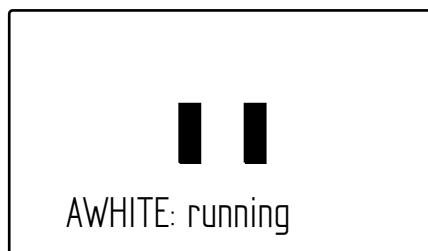

Note

If there is insufficient light, the "light level too low" message appears in the viewfinder.

- When the process is completed (within a few seconds) the OK message and the measured color temperature appears in the viewfinder:

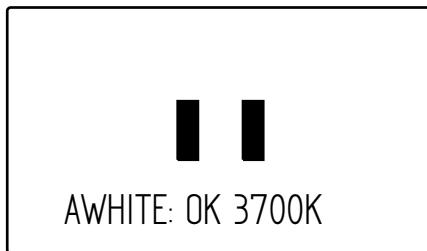

- The measured color temperature is now stored in the selected memory position and can be recalled as required.
- If the auto-white measurement has been unsuccessful, an error appears in the WHITE BALANCE button on the CGA.



Note

During the auto-white measurement process the iris is set to Auto and 90% and knee is switched off.

Black balance is not necessary because black level is automatically adjusted by the camera's internal video circuits.

Saturation

Adjust the saturation level to increase or decrease color of the picture. Saturation values below 100% decrease colors while values higher than 100% increase colors.

CAM

In the camera menu, navigate to the **production Setup > Color > Saturation** item and adjust the level.

Color Gamut

The camera can operate using two different color gamuts:

CAM

In the camera menu, navigate to the **Production Setup > Color > Color Gamut** item and select REC709 (for default HDTV color gamut) or REC2020 (for extended color gamut).

Color Protect

When very bright and saturated colored lights are used, predominant colors may clip. This results in fully saturated areas with no detail. This phenomenon occurs especially in blue and magenta color ranges.


The Color Protect function restores luminance levels without affecting color oversaturation. It prevents non-dominant colors from decreasing below black level so much of

the details in the picture are still maintained. If a dominant color saturates, Color Protect gradually decreases its influence in the picture.

CAM In the camera menu, navigate to the **Production Setup > Color > Color Adjustment > Col Protect** menu and switch on the item **Col Protect**.

Secondary color correction

Secondary color correction is used to adjust hue, saturation and luminance of partial areas of the color spectrum of the image. Typical applications include live sports or news productions. Up to six color areas can be set up and corrected at the same time.

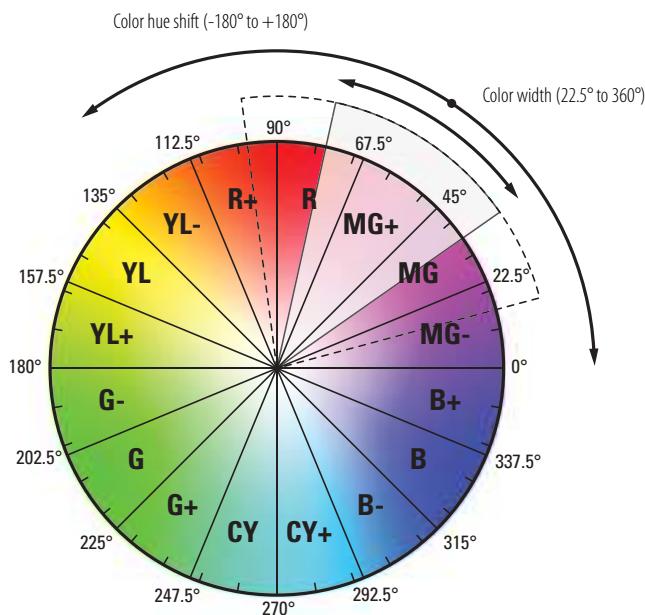

CAM

Setup using the camera menu

Carry out the following steps to set up the color corrector in the camera menu:

- 1 In the **Creative Control > Color Adjustment > Col Corr** menu, switch the item **Col Corr** on.
- 2 Go to the item **Set** and select a color correction set.
- 3 Switch on the item **Set On/Off** to activate the selected set.
- 4 Select a color area by changing the **Color** and **Width** functions. The color can be selected in steps of 22.5° on the color wheel. The color area width can be enlarged by setting the **Width** value. The color width can be varied between 22.5° and 360°.
- 5 There are two ways of viewing the selected color area: in the main video signal or in the viewfinder. Switch on the item **Vf View** to view the area in the viewfinder. To view the area in the main signal switch on the item **Col Corr View**. Make sure to switch it off before going on air.

6 Now make adjustments of the selected color area by changing the **Hue** (color hue), **Sat** (color saturation) and **Lum** (color luminance) functions.

The transition between the corrected and uncorrected color area can be set to **sharp**, **medium** or **smooth** using the **Smoothing** function.



Note

You can reset the color corrector by activating the **Reset CC** item. All color correction sets are reset to their nominal values.

Sharpness

Detail

Detail is an image enhancement used to improve picture sharpness perception. The detail function raises the contrast at the dark-to-light and light-to-dark transitions, thus making edges of objects appear sharper. This process is applied in video post processing within the camera by overshooting the signal at the edges. Detail is applied to both vertical and horizontal picture edges. Detail level refers to the amount of image enhancement, or in other words, the amount of sharpness added to the picture.



In the camera menu, navigate to the **Creative Control > Sharpness > Detail** menu and use **Detail Level** to adjust the amount of detail added to the picture.

Texture

Texture adds subtle sharpness to very fine textures (e.g. fabrics, leaves and stone surfaces) in the image.



In the camera menu, navigate to the **Creative Control > Sharpness > Detail** menu and use **Texture** to adjust the amount of Texture detail added to the picture.



Note

Texture can be disabled in the **advanced** submenu of the **Detail** menu.

Advanced options

There are a number of advanced Detail options in the menu that can be used to fine tune the detail function:

- Vertical Detail Level (0 to 99)
- Coarse/Fine adjustment (0 to 99)
- Level Dependency (0 to 99)
- Noise Slicer (0 to 99)

Lens related functions

Detail follows Gain

By nature, high video gain levels introduce more noise which have a negative effect on Detail processing. When switched on, the Detail follows Gain function decreases Detail for higher gain values.

Detail follows Zoom

Typically, close up shots contain larger and fewer image elements than wide angle shots. Detail enhancement generally produces better results with larger structures so when this function is switched on, the camera lowers the influence of Detail depending on the zoom factor.

Aperture Correction follows Iris

The internal Aperture Correction circuit compensates for optical aberration caused by smaller lens apertures. When switched on, the Aperture Correction takes the actual Iris opening into account to achieve better Aperture Correction.

CAM In the camera menu, go to the **Creative Control > Sharpness > Detail > Advanced** menu to find the lens related detail functions.

Detail Equalizer

The detail equalizer allows to set the detail levels for shadows, midtones and highlights individually. In general, shadow areas need less detail enhancement as it increases noise levels.

CAM In the camera menu, navigate to the **Creative Control > Sharpness > Detail Equalizer** menu and switch on the **Detail Equalizer** item. Use the **Shadows, Midtones** or **Highlights** items to adjust the detail level for each tonal range between 0 and 99.

Values below 50 decrease detail while values above 50 increase detail.

Skin Detail

Skin Detail is set up to select a particular color range. The Detail level within this color range can then be set independently of the rest of the picture.


Skin detail is mainly used to reduce the level of Detail in a person's skin tone to produce a more attractive picture. Decreasing the Detail level of a person's skin softens the skin tones only. But the Skin Detail function is not limited to a particular color and so can also be used to achieve various effects in selected color areas. For example, decrease the detail level of a soccer field to accentuate the players or increase the Skin Detail level to accentuate a rough surface.

The color range to which the Skin Detail level is applied can be selected automatically or manually. Three skin detail ranges (called Skin Gates or Sets) can be independently defined; they can be used at the same time.

Auto Skin Detail

Carry out the Auto Skin Detail procedure as follows:

- 1 In the camera menu, navigate to the **Creative Control > Sharpness > Skin Detail** and use the Skin Gate item to select 1, 2 or 3. Do not select any of the combined options.
- 2 Place the cursor in front of the **Auto Skin Dtl** function.
- 3 Press the select button on the front of the camera. The following appears in the viewfinder:

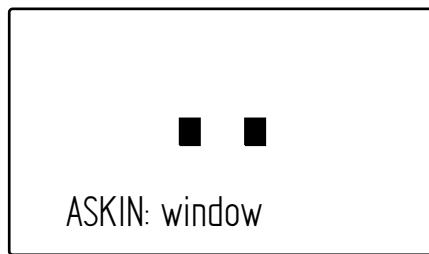

- 4 Now point the two small black boxes at the intended surface (generally a face).
- 5 Press the select button again to start the measurement procedure (the iris is automatically set to auto by the camera). The process running message appears:



- 6 When the process is completed (within a few seconds) the OK message appears in the viewfinder:



- 7 Now adjust the Skin Detail level with the Skin Level item. Decrease the value below 50 to soften the selected area. Increase the value above 50 to add extra detail.



Note

In XS (6X)1080p video modes, the view and the color view do not show the selected color in the B/W picture of the monitoring output.

Image control

Freeze Frame



Note

Freeze Frame is not available in high speed video modes.

When switched on, the freeze frame function freezes the current video frame so that many video functions can be set up off line. The following functions are NOT available in freeze frame mode:

- Iris settings
- V-shift
- Variable exposure



Note

Changing the video mode and running Auto White Balance is prohibited in Freeze Frame mode.



In the camera menu, navigate to the **Production Setup > Image Control > Freeze frame** menu to switch Freeze Frame on or off.

Reverse Scan



Note

Reverse Scan is not available in high speed video modes.

When the camera is used at a rotated angle use the reverse scan function to rotate the camera's image to compensate.



In the camera menu, navigate to the **Production Setup > Image Control > Reverse Scan** menu to switch reverse scan on or off and to select the scan mode (horizontal, vertical or both).

Video setup

Reverse Scan

Menu references

Reference tables

All camera functions are grouped into 7 main menus:

- Installation menu—contains camera connection methods and system setup items.
- Operator Toolbox menu—contains the functions that help the operator while shooting such as screen indicators, user buttons assignments and various shooting tools.
- Production Setup menu—contains the functions needed to set up the camera for a production, including scene related video settings.
- Creative Control menu—contains the functions to control the creative aspects of the video signal such as contrast, sharpness and color correction.
- Configuration menu—contains the functions that are used to set up the general configuration of the camera such as intercom, lens settings and interfaces.
- Diagnostics menu—provides information on the current status and of the camera.
- Service menu—contains service items for advanced camera configuration.

The columns in the tables provide reference information about the functions in the camera menu:

- Menu item: camera function, menu or submenu.
- Values: possible values or value range for the listed function (the factory default value for the listed function is indicated in **bold**.)
- Level: the access level from which the function or menu is available. User 0 is the most restricted level while User 3 is the least restrictive. Service (S) is the access level for advanced functions.
- Description: a short description of the function and its values.

Installation menu

Function:	Values:	U:	F:	Description:
Camera Mode	IP , XCU	0	-	Main video camera operation mode. IP = NativeIP mode, XCU = XCU mode
IP Mode	10G, 25G, 100G	0	-	Ethernet speed for the IP Media network
FEC Mode	Off, RS	0	-	Forward Error Correction method: off or RS (= Reed-Solomon)
PTP				
PTP Profile	SMPTE2059 , AES67, AES-SMPTE, User	0	-	PTP Profile (when Mode = PTP): SMPTE2059: Profile used for synchronization of broadcast media systems AES67: media profile of AES67 AES67-SMPTE: combination of SMPTE2059 +AES67 User: User defined. Enter PTP Profile settings in the PTP Settings submenu (below)
PTP Settings (available when PTP profile = User)				
GM Select	Auto , GM 1, GM 2	0	-	PTP Grandmaster selection
Domain Nr	0.255 (0)	0	-	PTP Domain Number (refer to IEEE 1588 for more information)
DelayReqInterval	-4..1 (-3)	0	-	PTP DelayRequestInterval (refer to IEEE 1588 for more information)
ReceiptTimeout	2..10 (2)	0	-	PTP DelayRequestInterval (refer to IEEE 1588 for more information)
Timing				
Main Video	-5000us..5000us (0 us)	0	-	
SFP Modules				
Port QSFP				
Mode	DHCP, Manual	0	-	Management protocol for QSFP port
IP	[IP addr] (10.11.5.2)	0	-	IP address for QSFP port
NM	0..31 (16)	0	-	Subnet Mask for QSFP port
GW	[IP addr] (10.11.5.1)	0	-	Default Gateway for QSFP port
Port SFP1				
Mode	DHCP, Manual	0	-	Management protocol for SFP1 port
IP	[IP addr] (10.11.6.2)	0	-	IP address for SFP1 port
NM	0..31 (16)	0	-	Subnet Mask for SFP1 port
GW	[IP addr] (10.11.6.1)	0	-	Default Gateway for SFP1 port
Port SFP2				
Mode	DHCP, Manual	0	-	Management protocol for SFP2 port
IP	[IP addr] (10.11.7.2)	0	-	IP address for SFP2 port

Function:	Values:	U:	F:	Description:
NM	0.31 (16)	0	-	Subnet Mask for SFP2 port
GW	[IP addr] (10.11.7.1)	0	-	Default Gateway for SFP2 port
Media Interface				
Network Setup				
VLAN				
C2IP	Off , On	0	M	Enable/disable VLAN tagging for C2IP
C2IP Tag	2..4095 (2)	0	M	Assigns a tag to the C2IP (control network) VLAN (when VLAN tagging = On)
Trunk	Off , On	0	M	Enable/disable VLAN tagging for IP Trunk
Trunk Tag	2..4095 (3)	0	M	Assigns a tag to the IP Trunk VLAN (when VLAN tagging = On)
PrivData	Off , On	0	M	Enable/disable VLAN tagging for Private Data
PrivData Tag	2..4095 (4)	0	M	Assigns a tag to the Private Data VLAN (when VLAN tagging = On)
NMOS Control				
Type	Off , Static, DNS-SD, mDNS	0	M	NMOS service type (or switches off NMOS control)
Interface	C2IP , Media	0	M	NMOS over C2IP connector or via the IP Media Network
NMOS server				
IP	[IP addr] (192.168.1.2)	0	M	IP address for NMOS server
Port	[Port No] (6000)	0	M	IP port number for NMOS server
IS04 ver	v1.0 , v1.1, v1.2, v1.3	0	M	NMOS IS-04 protocol version for NMOS server
ARPreq to DefGw	Off , On	0	M	Switches ARPreq to DefGw on or off. The Address Resolution Protocol (ARP) is used for mapping a network address to a physical Ethernet address
IGMP Version	v2 , v3	0	M	Internet Group Management Protocol (IGMP) is used for Multicast IP applications: v2: use the standard version for the IGMP protocol v3: allows for source specific multicast
Private Data				
Enabled	No , Yes	0	M	Enable/disable Private Date
Dst IP	[IP addr] (10.11.10.1)	0	M	Destination IP address for Private Data
Dst Port	[Port No] (20015)	0	M	Destination IP port number for Private Data
Src Port	[Port No] (20016)	0	M	Source IP port number for Private Data
Outgoing Streams				
Main Video				
Enabled	No , Yes	0	M	Enable/disable Main Video
IP	[IP addr] (224.11.5.9)	0	M	IP address for Main Video
Port	[Port No] (20009)	0	M	IP port number for Main Video

Function:	Values:	U:	F:	Description:
Protocol	ST2022-6, ST2110-20	0	-	IP Transport Protocol for Main Video: ST2022-6: Packetized SDI over IP ST2110-20: Video Essence over IP
Payload ID	96..127 (96)	0	M	(SDI) payload ID for Main Video
Live Video				
Enabled	No, Yes	0	M	Enable/disable Live Video
IP	[IP addr] (224.11.5.10)	0	M	IP address for Live Video
Port	[Port No] (20010)	0	M	IP port number for Live Video
Protocol	ST2022-6, ST2110-20	0	M	IP Transport Protocol for Live Video
Payload ID	96..127 (96)	0	M	(SDI) payload ID for Live Video
HighSpeed Video (only in high speed video modes)				
Enabled	No, Yes	0	M	Enable/disable High Speed Video
Phase 1				
IP	[IP addr] (224.11.5.3)	0	M	IP address for High Speed Video phase 1
Port	[Port No] (20003)	0	M	IP port number for High Speed Video phase 1
Enabled	No , Yes	0	-	Enable/disable High Speed Video phase 1
Phase 2				
IP	[IP addr] (224.11.5.4)	0	M	IP address for High Speed Video phase 2
Port	[Port No] (20004)	0	M	IP port number for High Speed Video phase 2
Enabled	No , Yes	0	-	Enable/disable High Speed Video phase 2
Phase 3				
IP	[IP addr] (224.11.5.5)	0	M	IP address for High Speed Video phase 3
Port	[Port No] (20005)	0	M	IP port number for High Speed Video phase 3
Enabled	No , Yes	0	M	Enable/disable High Speed Video phase 3
Protocol	ST2022-6, ST2110-20	0	-	IP Transport Protocol for High Speed Video
Payload ID	96..127 (96)	0	M	(SDI) payload ID for High Speed Video
Audio				
Enabled	No, Yes	0	M	Enable/disable Audio
IP	[IP addr] (224.11.5.17)	0	M	IP address for Audio
Port	[Port No] (5001)	0	M	IP port number for Audio
Codec	L16, L24	S	M	Linear 16 or 24 bits PCM audio codec for Audio
Packet Time	0.125 ms , 0.250 ms, 1 ms	0	M	Packet Time
PayloadID	96..127 (97)	0	M	Payload ID for Audio
Number of Ch	2, 4, 8 , 16	0	M	Number of audio channels for Audio
Intercom				
Enabled	No, Yes	0	M	Enable/disable Intercom

Function:		Values:	U:	F:	Description:
	IP	<IP address>	0	M	IP address for Intercom
	Port	[Port No] (5002)	0	M	IP port number for Intercom
	Codec	L16, L24	S	M	Linear 16 or 24 bits PCM audio codec for Intercom
	Packet Time	0.125 ms, 0.250 ms, 1 ms	0	M	Packet Time for Intercom
	PayloadID	96..127 (97)	0	M	Payload ID for Intercom
	Number of Ch	2, 4, 8, 16	0	M	Number of audio channels for Intercom
Incoming Streams					
Video RX 1					
	Enabled	No, Yes	0	M	Enable/disable Video RX 1
	Multicast	No, Yes	0	M	Enable/disable Multicast for Video RX 1
	IP	[IP addr] (224.11.5.12)	0	M	IP address for Video RX 1
	Port	[Port No] (20012)	0	M	IP port number for Video RX 1
	PayloadID	96..127 (96)	0	M	Payload ID for Video RX 1
	Protocol	2022-6, 2110-20	0	M	IP Transport Protocol for Video RX 1
	Src IP	[IP addr] (10.11.8.1)	0	M	Source IP address for Video RX 1
Video RX 2					
	Enabled	No, Yes	0	M	Enable/disable Video RX 2
	Multicast	No, Yes	0	M	Enable/disable Multicast for Video RX 2
	IP	[IP addr] (224.11.5.13)	0	M	IP address for Video RX 2
	Port	[Port No] (20013)	0	M	IP port number for Video RX 2
	PayloadID	96..127 (96)	0	M	Payload ID for Video RX 2
	Protocol	2022-6, 2110-20	0	M	IP Transport Protocol for Video RX 2
	Src IP	[IP addr] (10.11.8.2)	0	M	Source IP address for Video RX 2
Video RX 3					
	Enabled	No, Yes	0	M	Enable/disable Video RX 3
	Active	No, Yes	0	M	Enable/disable Multicast for Video RX 3
	IP	[IP addr] (224.11.5.14)	0	M	IP address for Video RX 3
	Port	[Port No] (20014)	0	M	IP port number for Video RX 3
	PayloadID	96..127 (96)	0	M	Payload ID for Video RX 3
	Protocol	2022-6, 2110-20	0	M	IP Transport Protocol for Video RX 3
	Src IP	[IP addr] (10.11.8.3)	0	M	Source IP address for Video RX 3
Audio					
	Enabled	No, Yes	0	M	Enable/disable Audio
	Multicast	No, Yes	0	M	Enable/disable Multicast for Audio
	IP	[IP addr] (224.11.5.19)	0	M	IP address for Audio
	Port	[Port No] (5003)	0	M	IP port number for Audio

Function:	Values:	U:	F:	Description:
Codec	L16, L24	S	M	Linear 16 or 24 bits PCM audio codec for Audio
Packet Time	0.125 ms , 0.250 ms, 1 ms	0	M	Packet Time for Audio
Buffer Size	1,2,4, 8 ,16, 32 ms	0	M	Buffer size for Audio
PayloadID	96..127 (97)	0	M	Payload ID for Audio
Number of Ch	1, 2, 4 , 8, 16	0	M	Number of audio channels for Audio
Src IP	[IP addr] (10.11.8.4)	0	M	Source IP address for Audio
Intercom				
Enabled	No , Yes	0	M	Enable/disable Intercom
Multicast	No , Yes	0	M	Enable/disable Multicast for Intercom
IP	[IP addr] (224.11.5.20)	0	M	IP address for Intercom
Port	[Port No] (5004)	0	M	IP port number for Intercom
Codec	L16, L24	S	M	Linear 16 or 24 bits PCM audio codec for Intercom
Packet Time	0.125 ms , 0.250 ms, 1 ms	0	M	Packet Time for Intercom
Buffer Size	1,2, 4 ,8,16, 32 ms	0	M	Buffer size for Intercom
PayloadID	96..127 (97)	0	M	Payload ID for Intercom
Number of Ch	2, 4 , 8 , 16	0	M	Number of audio channels for Intercom
Src IP	[IP addr] (10.11.8.5)	0	M	Source IP address for Intercom
Redundancy				
Outgoing streams				
Main IP	[IP addr] (224.11.6.9)	0	M	IP address for Main IP
Port	[Port No] (20009)	0	M	IP port number for Main IP
Ena	No , Yes	0	M	Enable/disable Main IP
Live IP	[IP addr] (224.11.6.10)	0	M	IP address for Live Video
Port	[Port No] (20010)	0	M	IP port number for Live Video
Ena	No , Yes	0	M	Enable/disable Live Video
Ph 1 IP	[IP addr] (224.11.6.3)	0	M	IP address for High Speed Video phase 1
Port	[Port No] (20003)	0	M	IP port number for High Speed Video phase 1
Ena	No , Yes	0	-	Enable/disable High Speed Video phase 1
Ph 2 IP	[IP addr] (224.11.6.4)	0	M	IP address for High Speed Video phase 2
Port	[Port No] (20004)	0	M	IP port number for High Speed Video phase 2
Ena	No , Yes	0	-	Enable/disable High Speed Video phase 2
Ph 3 IP	[IP addr] (224.11.6.5)	0	M	IP address for High Speed Video phase 3
Port	[Port No] (20005)	0	M	IP port number for High Speed Video phase 3
Ena	No , Yes	0	-	Enable/disable High Speed Video phase 3
Audio IP	[IP addr] (224.11.6.17)	0	M	IP address for Audio

Function:		Values:	U:	F:	Description:
	Port	[Port No] (5001)	0	M	IP port number for Audio
	Ena	No, Yes	0	M	Enable/disable Audio
	Icom IP	[IP addr] (224.11.6.18)	0	M	IP address for Intercom
	Port	[Port No] (5002)	0	M	IP port number for Intercom
	Ena	No, Yes	0	M	Enable/disable Intercom
Incoming Streams					
	RX1 IP	[IP addr] (224.11.6.12)	0	M	IP address for Video RX 1
	Port	[Port No] (20012)	0	M	IP port number for Video RX 1
	Ena	No, Yes	0	M	Enable/disable Video RX 1
	Mcast	Yes, No	0	M	Enable/disable Multicast for Video RX 1
	Src	[IP addr] (10.11.9.1)	0	M	Source IP address for Video RX 1
	RX2 IP	[IP addr] (224.11.6.12)	0	M	IP address for Video RX 2
	Port	[Port No] (20012)	0	M	IP port number for Video RX 2
	Ena	No, Yes	0	M	Enable/disable Video RX 2
	Mcast	Yes, No	0	M	Enable/disable Multicast for Video RX 2
	Src	[IP addr] (10.11.9.1)	0	M	Source IP address for Video RX 2
	RX3 IP	[IP addr] (224.11.6.12)	0	M	IP address for Video RX 3
	Port	[Port No] (20012)	0	M	IP port number for Video RX 3
	Ena	No, Yes	0	M	Enable/disable Video RX 3
	Mcast	Yes, No	0	M	Enable/disable Multicast for Video RX 3
	Src	[IP addr] (10.11.9.1)	0	M	Source IP address for Video RX 3
	Audio IP	[IP addr] (224.11.6.12)	0	M	IP address for Audio
	Port	[Port No] (20012)	0	M	IP port number for Audio
	Ena	No, Yes	0	M	Enable/disable Audio
	Mcast	Yes, No	0	M	Enable/disable Multicast for Audio
	Icom IP	[IP addr] (224.11.6.12)	0	M	IP address for Intercom
	Port	[Port No] (20012)	0	M	IP port number for Intercom
	Ena	No, Yes	0	M	Enable/disable Intercom
	Mcast	Yes, No	0	M	Enable/disable Multicast for Intercom

Operator Toolbox menu

Function:	Values:	U:	F:	Description:
Indicators				
Zoom Indicator	Off , On	0	-	Switch Zoom indicator on or off
Iris Indicator	Off , On	0	-	Switch Iris indicator on or off
Focus Indicator	Off , On	0	-	Switch Focus indicator on or off
Filter Indicator	Off , On	0	O	Switch Optical Filter indicator on or off
DOF Indicator	Off , On	0	O	Switch Depth of Field (DOF) indicator on or off
Center Cross	Off , On	0	O	Switch Center Cross on or off
Safe Area				
Safe Area	Off , On	0	O	Switch Safe Area on or off
Safe Area Type	16:9 , 15:9, 14:9, 4:3	0	O	Aspect ratio of the Safe Area
Marker				
Marker	Off , On	0	O	Switch Marker on or off
Marker Type	15:9, 14:9, 4:3	0	O	Aspect ratio of Marker
Marker Style	Dot , Shad, Both	0	O	Marker style: Dot = dotted lines; Shad = shaded areas; Both = dotted lines and shaded areas
Marker Shading	Shad , Black	0	O	Marker Shading (when marker style = Shad or Both): Shad = transparent area, Black = black area
Box				
Box 1				
Box	Off , On	0	O	Switch Box 1 on or off
Type	Box , Line, Full	0	O	Box type
Color	White , Red, Green, Blue, Yellow, Magenta, Cyan, Purple	0	O	Box color
Top	0.99 (25)	0	O	Top position of the Box
Bottom	0.99 (75)	0	O	Bottom position of the Box
Left	0.99 (25)	0	O	Left position of the Box
Right	0.99 (75)	0	O	Right position of the Box
Box 2				
Box	Off , On	0	O	Switch Box 2 on or off
Type	Box , Line, Full	0	O	Box type
Color	White , Red, Green, Blue, Yellow, Magenta, Cyan, Purple	0	O	Box color
Top	0.99 (33)	0	O	Top position of the Box
Bottom	0.99 (66)	0	O	Bottom position of the Box

Function:	Values:	U:	F:	Description:
Left	0.99 (33)	0	O	Left position of the Box
Right	0.99 (66)	0	O	Right position of the Box
Zebra				
Zebra	Off , On	0	O	Switch Zebra indication on or off. Zebra is a diagonal line pattern that indicates that the area affected has risen above a preset level of the full scale video exposure value
Zebra Mode	Level , Band	3	O	Zebra mode: Level: Zebra indication appears in areas are brighter than the set level Band: Zebra indication appears in a 2.5% band around the set level
Zebra Level	0%..117% (90%)	3	O	Exposure level at which Zebra pattern is shown. When level is higher than 100% the zebra indicates overexposed areas
Zebra Contrast	0.99 (15)	3	O	Zebra Contrast
Ind White Lvl	0.99 (70)	2	O	White level (= brightness) of the indicators: 0 = very dark; 99 = very bright
Viewfinder				
OnScreen Tally	Off , Top, Bottom	2	O	On Screen Tally (signalling) indicators to be displayed at the top or at the bottom of the viewfinder screen. Select Off to turn the indicators off
Assignments	Show , Hide	2	O	
Button Leds	Off, Low , Medium, High	2	O	Brightness level of the viewfinder menu buttons
Backpanel				
Info Leds	Low , High	2	-	Brightness level of the IP diagnose indicators on the back panel
Button Illum	0.99 (75)	2	-	Brightness level of button illumination
Outside Illum	On , Off	2	-	Switches outside Illumination on or off.
Level	0.99 (75)	2	-	Outside illumination brightness level (when outside illumination is switched on)
Autolris Area	Off , On	3	O	Switches Autolris Area indication on or off
VF Monitoring	YCrCb , Y, R, G, B, -G, R-G, B-G	2	O	Type of signal to view in viewfinder
VF HDR Knee				
HDR Kn Max In	100..10000% (2000%)	2	O	
HDR Kn Point	20%..100% (70%)	2	O	
VF Peaking				
Peaking Lvl	0.99 (20)	0	O	Peaking level applied to the viewfinder signal (same control as peaking level rotary on the viewfinder)

Function:	Values:	U:	F:	Description:
Peaking (Return)	0.99 (0)	0	O	Peaking level applied to the Return video signal in the viewfinder (when enabled)
Fine Lvl	-20..50 (0)	0	O	Fine Peaking level
Color	White , Red, Green, Blue, Yellow, Magenta, Cyan, Purple	0	O	Viewfinder Peaking color
VF Detail				
VF Detail	Off, On , Boost	0	O	Enable/disable VF Detail, or adds extra Detail to the viewfinder signal (Boost)
Super Coarse	Off , On	0	O	Enable/disable Super Coarse VF Detail
Detail Level	0.99 (50)	0	O	Detail level for viewfinder signal
Slicer	0.99 (10)	0	O	Noise Slicer level for VF Detail
Vert Detail Lvl	0.99 (50)	3	O	Vertical component of VF Detail level
Coarse/Fine	0.99 (90)	3	O	Detail balance between coarse and fine structures (0 = coarse, 99 = fine)
Level Dep	0.99 (30)	3	O	Level at which VF Detail starts to work
Soft Detail	Off, On	3	O	Enable/disable Soft Detail: this reduces the amount of detail added for large transitions
Soft Detail Lvl	0.99 (50)	3	O	Upper limit level for Soft Detail
Focus Assist				
Focus Assist	Off , On	0	O	Enable/disable Focus Assist: adds crawling effect to the focused areas in the viewfinder to help focussing
Effect	Fine, Medium , Coarse	0	O	Focus Assist crawling effect
Gain	Low, Medium, High	0	O	Focus Assist gain factor
Zoom Follow	Off , On	0	O	Enable/disable Focus Assist to follow zoom: Focus Assist is adapted based on the zoom factor of the lens
VF Zoom				
PIP	Off , On	3	O	Enable/disable Picture in Picture in the viewfinder
PIP Line Color	White , Red, Green, Blue, Yellow, Magenta, Cyan, Purple	3	O	Color of Picture in Picture image box

Function:	Values:	U:	F:	Description:
VF Mode	Combined , 1 Phase, 2 Phases, 3 Phases	2	-	(only for high speed video modes) Method of combining high speed phases for the viewfinder output: Combined: all phases are combined to obtain the highest signal level for live viewing. Some blurring may occur when panning or tilting. 1 Phase: only 1 phase is used to obtain highest sharpness but lower video levels. 2 Phases: same as above but with 2 phases. 3 Phases: same as above but with 3 phases. Note: try the setting that suits your situation best.

Menu Settings

Rotary Speed	1..10 (5)	2	O	Reaction speed of the front rotary button
Menu Display	On, Time	2	O	Camera menu always on or disappear after a set time
Menu Time	3..30 (10)	2	O	Time (in seconds) the menu is shown when Menu Display is set to Time.
Menu White Lvl	0.99 (70)	2	O	White level (brightness) of the characters of the menu

Info Settings

Info Start Page	1,2,3,4	2	-	First page shown when info button is initially pressed
Info Display	On, Off	2	-	Time (in seconds) the info page is shown when Info Display is Off.
Info Time	3..30 (10)	2	-	Sets the time (in seconds) the info page is shown.

Intercom

Prod Vol Ctrl	Prod , Master	3	O	Selects if the Prod volume control (upper rotary on the back panel) controls Prod channel volume only (Prod) or overall (Master) intercom volume.
Cam Sidetone	0.99 (75)	3	O	Sets the sidetone level (audio feedback from mic to headset) in the camera operator's headset.
Tracker Sidetone	0.99 (75)	3	O	Sets the sidetone level (audio feedback from mic to headset) in the tracker's headset.

User Buttons

Ret A Preset	Off, Ext1 , Ext2, Ext3, TP	0	O	Selects which signal is shown in the viewfinder when the Ret A button at the front panel is pressed
Ret B Preset	Off, Ext1, Ext2 , Ext3, TP	0	O	Selects which signal is shown in the viewfinder when the Ret B button at the front panel is pressed

Front Panel

Eng Mode	Mom , Alt	0	O	Switching mode for the Eng button at the front panel of the camera: momentary (push) or alternating (toggle)
Ret A Mode	Mom , Alt	0	O	Switching mode for the Ret A button at the front panel of the camera: momentary (push) or alternating (toggle)

Function:	Values:	U:	F:	Description:
Ret B Mode	Mom , Alt	0	O	Switching mode for the Ret B button at the front panel of the camera: momentary (push) or alternating (toggle).
Back Panel				
Eng Mode	M om , Alt	0	O	Switching mode for the Eng button at the back panel of the camera: momentary (push) or alternating (toggle).
Ret A Mode	M om , Alt	0	O	Switching mode for the Ret A button at the back panel of the camera: momentary (push) or alternating (toggle).
Ret B Mode	M om , Alt	0	O	Switching mode for the Ret B button at the back panel of the camera: momentary (push) or alternating (toggle).
Side Panel				
SW1	Call, RetA , RetB, Prod, Eng, Select, ND +, Awhite, Elris, FocAst, Back	0	O	Assigns a function to user button SW1
SW1 Mode	Mom , Alt	0	O	Switching mode for SW1: momentary (push) or alternating (toggle)
SW2	Elris, Zoom, FocAst, RetA, RetB , Prod, Eng, ND -, Call, Back, Select	0	O	Assigns a function to user button SW2
SW2 Mode	Mom , Alt	0	O	Switching mode for SW2: momentary (push) or alternating (toggle)
PickMe Mode	Mom , Alt	1	O	Switching mode for PickMe: momentary (push) or alternating (toggle)
Handgrip				
Handgrip Right	RetA , RetB, Zoom, FocAst	1	O	Assigns a function to the right handgrip button.
Handgrip Left	Prod , Eng	1	O	Assigns a function to the left handgrip button.
Lens				
VTR Lens	Prod , Eng , Zoom, RetA, RetB, VTR, Info	1	O	Assigns a function to the VTR Lens button.
VTR Lens Mode	Mom , Alt	1	O	Switching mode for the VTR Lens button: momentary (push) or alternating (toggle).
RET Lens	RetA , RetB, Zoom, FocAst	1	O	Assigns a function to the RET Lens button.
RET Lens Mode	Mom , Alt	1	O	Switching mode for the RET Lens button: momentary (push) or alternating (toggle).
RET1	RetA , RetB	1	O	Assigns a function to the RET 1 Lens button.
RET2	Zoom, RetB	1	O	Assigns a function to the RET 2 Lens button.

Function:	Values:	U:	F:	Description:
RET2 Mode	Mom , Alt	1	O	Switching mode for the RET 2 Lens button: momentary (push) or alternating (toggle).
Viewfinder				
Btn 1	None, Call, Box1 , Box2, Mono, Ret A, Ret B, Zoom, Text, Tally	1	O	Assigns a function to button 1 of the VF 7-100 viewfinder.
Btn 1 Mode	Mom , Alt	1	O	Switching mode for button 1: momentary (push) or alternating (toggle)
Btn 2	None, Call, Box1, Box2, Mono, Ret A, Ret B, Zoom, Text, Tally	1	O	Assigns a function to button 2 of the VF 7-100 viewfinder.
Btn 2 Mode	Mom , Alt	1	O	Switching mode for button 2: momentary (push) or alternating (toggle)
Btn 3	None, Call, Box1, Box2, Mono, Ret A, Ret B, Zoom, Text, Tally	1	O	Assigns a function to button 3 of the VF 7-100 viewfinder.
Btn 3 Mode	Mom , Alt	1	O	Switching mode for button3: momentary (push) or alternating (toggle)
Btn A	None, Call, Box1 , Box2, Mono, Ret A, Ret B, Zoom, Text, Tally	1	O	Assigns a function to button 1 of the EC 2-100 viewfinder.
Btn A Mode	Mom , Alt	1	O	Switching mode for button A: momentary (push) or alternating (toggle)
Btn B	None, Call, Box1, Box2, Mono, Ret A, Ret B, Zoom, Text, Tally	1	O	Assigns a function to button 1 of the EC 2-100 viewfinder.
Btn B Mode	Mom , Alt	1	O	Switching mode for button B: momentary (push) or alternating (toggle).
Switch C	None, UnderScan	1	O	Set to Underscan to view a scaled down (approx. 85% of the area) picture in the EC 2-100 viewfinder.
SuperXpander				
SXP F1	None , ND, FX, Bars, Prog, Back, Info, Pick Me	1	O	Assigns a function to the F1 user button on the SuperXpander, when present.
SXP F2	None , ND, FX, Bars, Prog, Back, Info, Pick Me	1	O	Assigns a function to the F2 user button on the SuperXpander, when present.
SXP F3	None , ND, FX, Bars, Prog, Back, Info, Pick Me	1	O	Assigns a function to the F3 user button on the SuperXpander, when present.
PickMe Mode	Mom , Alt	1	O	Selects switching mode for the PickMe buttons: momentary (push) or alternating (toggle).
Zoom Settings				
Handgrip Zoom	Off, On	0	O	Enable/disable Zoom control (on top of camera handgrip)

Function:	Values:	U:	F:	Description:
Zoom Speed	1..10 (5)	3	O	Zoom control speed
Zoom Curve	0..3 (3)	3	O	Zoom control response curve: 0 = linear curve 1 = low curve 2 = medium curve 3 = steep curve
Zoom/Focus	Local, Remote	0	-	Local or remote control of the Zoom/ Focus function. Only available when a SuperXpander is present.
Operator Active	Yes, No	S	-	

Production Setup

Function:	Values:	U:	F:	Description:
Levels				
Gain				
HDR Gain	-18 dB..18 dB (0 dB)	2	S	HDR Gain (in 0.1 dB steps.)
HDR Out Lvl	50% .. 87% (57% for SMPTE2084) 50% .. 87% (73% for HLG)	2	-	HDR Output Level: this is the HDR video level that corresponds with 100% video level in SDR. Note: default values depend on the selected HDR Standard.
Gain Presets				
Gain -	-18 dB..30 dB (-3 dB)	2	O	Gain value for - preset Note: Available preset values depend on the selected sensitivity mode
Gain +	-18 dB..30 dB (3 dB)	2	O	Gain value for + preset. Note: Available preset values depend on the selected sensitivity mode
Gain ++	-18 dB..30 dB (6 dB)	2	O	Gain value for ++ preset Note: Available preset values depend on the selected sensitivity mode
Gain +++	-18 dB..30 dB (-12 dB)	2	O	Gain value for +++ preset Note: Available preset values depend on the selected sensitivity mode
Black				
Black Stretch	Off , On	3	S	Enable/disable Black Stretch
Black Str Level	0..99 (50)	3	S	Black Stretch Level: 0 = few shades of grey; 99 = more shades of grey. Note: values below 50 are Black Press, values higher than 50 are Black Stretch.
Black Str Type	Press, Stretch	3	S	Black Stretch type. Black Stretch increases the tonal scale in shadow areas and Black Press decreases the tonal scale.
Full Black	Off , On	3	-	Select to run Full Black calibration. Note: this takes up to 15 seconds to complete
Master Black	0..99 (50)	2	S	Master Black level: this is the video level that is considered as pure black
Advanced				
Master Black	0..99 (50)	3	S	Master Black level: this is the video level that is considered as pure black.
Black R	0..99 (50)	3	S	Black level for Red
Black G	0..99 (50)	3	S	Black level for Green
Black B	0..99 (50)	3	S	Black level for Blue

Function:	Values:	U:	F:	Description:
HDR				
HDR Standard	SMPTE2084 , HLG, SLOG3, Lin	3	S	HDR Standard: SMPTE 2084 (or PQ, Perceptual Quantization) or HLG (= Hybrid Log-Gamma), S-Log3 or Lin (Linear)
HDR Range	Narrow , Full	3	-	If HDR Standard = SMPTE2084: - Full: the HDR signal is mapped into the full 10-bit range of the digital signal (3 .. 1021) - Narrow:
Gamma Low	0.8..3.5 (1.2)	3	-	Low Gamma
Gamma High	0.4..2 (1.0)	3	-	High Gamma
Gamma BrkPnt Low	5% .. 500% (50%)	3	S	
Gamma BrkPnt High	20% .. 1000% (100%)	3	S	
HDR Cliplevel	500 N..10000 N (10000 N)	3	S	
HDR to SDR				
Map Mode	SceneRef , DisplayRef, AdaptSlope, AdaptPoint, AdaptFull	3	S	
HDR Max Lvl	1000%..10000% (10000%)	3	-	
HDR Clip Lvl		3	-	
HDR St Pnt A		3	-	
HDR St Pnt B		3	-	
HDR St Pnt B'		3	-	
HDR Dy Min Pnt A		3	-	
HDR Dy Min Pnt B		3	-	
SDR Color Gamut	REC709, REC2020	3	S	
SDR OETF	BT1886, REC709, SQRT709	3	S	
SDR Sat Lvl		3	-	
SDR Bl Lvl		3	-	
SDR Bl Clip Lvl		3	-	
SDR Wh Clip Lvl		3	-	
SDR Sc Bright		3	-	
SDR Preserve		3	-	
Gamma				
Curve	BBC04, BBC05, BBC06, ARD, ITU709 , RAI, Gamma-J, Gamma-S	3	S	Standard curve for Gamma correction

Function:	Values:	U:	F:	Description:
Preset	Nom, Lin, Var	2	S	Gamma curve preset: Nom = Nominal curve; Lin = Linearised curve Var = variable (adjustable with Master Gamma setting)
Master Gamma	0.99 (76)	3	S	Master Gamma Level
Gamma R	0.99 (76)	3	S	Gamma level for the Red channel
Gamma G	0.99 (76)	3	S	Gamma level for the Green channel
Gamma B	0.99 (76)	3	S	Gamma level for the Blue channel
White Limiter				
White Limiter	Off, On	S	S	Enable/disable White Limiter: used to limit highlight levels in the video signal
Master	87.7%..109.1% (105%)	S	S	Master White Limiter level. This is the luminance level at which clipping occurs
Exposure				
Iris				
Auto Iris				
Auto Iris	Off, On	0	-	Enable/disable Auto Iris
Area	Top, Spot S, Spot M, Spot L, Full, Bottom, Custom	3	-	Measurement area for Auto Iris
Area Indicator	Off, On	3	O	Enable/disable Area Indicator
Custom Area				
Peak				
Top	0.99 (57)	3	-	
Bottom	0.99 (86)	3	-	Custom measurement area for Auto Iris Peak measurement, when Area = Custom
Left	0.99 (24)	3	-	
Right	0.99 (76)	3	-	
Average				
Top	0.99 (27)	3	-	
Bottom	0.99 (57)	3	-	Sets a custom measurement area for Auto Iris Average measurement, when Area = Custom
Left	0.99 (5)	3	-	
Right	0.99 (95)	3	-	
Peak/Average	0.99 (64)	3	S	Sets the Auto Iris measurement balance between peak and average video level.
Auto Iris SP	0.99 (35)	3	S	Sets Auto Iris Setpoint.
Mom Iris SP	0.99 (50)	3	-	Sets Momentary Iris Setpoint.
Auto Iris Gain	5..10 (5)	3	-	Sets Auto Iris Gain.
Extended Iris				

Function:	Values:	U:	F:	Description:
Extended Iris	Off , On	0	-	Switches Extended Iris on or off.
Area	Top , Spot S, Spot M, Spot L, Full, Bottom, Custom	S	-	Selects measurement area for Extended Iris.
Custom Area				
Peak				
Top	0..99 (57)	S	-	Sets a custom measurement area for Extended Iris Peak measurement, when Area = Custom
Bottom	0..99 (86)	S	-	
Left	0..99 (24)	S	-	
Right	0..99 (76)	S	-	
Average				
Top	0..99 (27)	S	-	Sets a custom measurement area for Extended Iris Average measurement, when Area = Custom
Bottom	0..99 (57)	S	-	
Left	0..99 (5)	S	-	
Right	0..99 (95)	S	-	
Lighting				
Lighting	Off , On	1	S	Switches Lighting function on or off.
Correction	-10 .. 0 .. +10	1	S	Sets the correction to fine-adjust for ambient lighting frequency when exposure time is set to 50 Hz or 60 Hz.
Acq Timing				
V-Shift	Off , On	1	S	Switches V-Shift (acquisition timing shift) on or off.
V-Shift Time	0..99 (0)	1	S	Selects V-Shift (acquisition timing shift) time.
Exp Time (not available for high speed video modes)				
Exp Time Sel	1/200, 1/500, 1/1000, 50%, 50 Hz, 60 Hz, Nom , Var	1	-	Selects camera exposure time.
Var Exp Time	0..65535 (0)	1	-	Sets variable exposure time when Exp Time Sel = Var in Hz or ms (see below)
Units	Hz , ms	1	-	Selects units to use for variable exposure time
LED Wall filter	Off , On	2	S	Switches LED Wall Filter on or off.
Color				
Color temp				
Color Filter	-100..100 (0)	2		Varies the color balance to obtain warmer or cooler effects. Negative values give cooler effects while positive values give warmer effects.
Color Presets	3200K , 5600K, 7500K, FL50, FL60, AW1, AW2, AWC, VAR	2		Selects the color preset.
Color Temp	2000 K..21000 K (3200 K)	2		Sets the color temperature when Color Preset = VAR

Function:	Values:	U:	F:	Description:
Tint	-150..150 (0)	2		Adjusts the color balance along the magenta/green axis. Negative values add more magenta while positive values add more green.
Advanced				
Gain R	0..99 (50)	2		Sets Gain Red level.
Gain G	0..99 (50)	2		Sets Gain Green level.
Gain B	0..99 (50)	2		Sets Gain Blue level.
Range	3dB , 6dB	2		Selects Gain control ('Painting') range.
x	0.2..0.55 (0.423)	3		Displays the chromacity x-value. Note: this is only an approximation.
y	0.2..0.55 (0.399)	3		Displays the chromacity y-value. Note: this is only an approximation.
Saturation				
Saturation	0%..200% (100%)	2		Sets color saturation level. 0% = fully desaturated (black/white), 100% = normal saturation, 200% = maximum saturation.
HDR Saturation	0%..200% (100%)	2		Sets HDR color saturation level. 0% = fully desaturated (black/white), 100% = normal saturation, 200% = maximum saturation.
Color gamut				
SDR Color Gamut	REC709 , REC2020	2		Selects SDR Color Gamut to be used: REC709 = default color gamut REC2020 = extended color gamut
HDR ColorGamut	REC709, REC2020 , LMS, SGAMUT	2		Selects Color Gamut to be used in HDR mode: REC709 = default color gamut REC2020 = extended color gamut LMS = LMS color space (LMS = Long, Medium and Short wavelengths) SGAMUT = ???
Matrix				
Matrix	EBU, Skin, B/W, RAI, BBC, 1:1, CoolFL, XGL , Var1, Var2	3		Selects a preset for the color matrix: EBU = color matrix according to EBU; Skin = EBU optimised for skin tones; B/W: monochrome picture; RAI: RAI TV optimisation; BBC = BBC optimisation; 1:1 = matrix is switched off; CoolFL= optimised for mixed fluorescent and incandescent lighting; XGL = for vivid color reproduction (advised to combine with M/G setting);

Function:	Values:	U:	F:	Description:
Mat/Gam Seq	G/M, M/G	S		Selects the order of the matrix and gamma: G/M = gamma before matrix; M/G = matrix before gamma (advised to use when matching with cameras of other manufacturers)
HDR Mat/Gam Seq	G/M, M/G	S		Selects the order of the HDR matrix and gamma in HDR mode.
Advanced				
G->R	0.99 (50)	S		Sets Green into Red coefficient (when Matrix is set to variable).
B->R	0.99 (50)	S		Sets Blue into Red coefficient (when Matrix is set to variable).
R->G	0.99 (50)	S		Sets Red into Green coefficient (when Matrix is set to variable).
B->G	0.99 (50)	S		Sets Blue into Green coefficient (when Matrix is set to variable).
R->B	0.99 (50)	S		Sets Red into Blue coefficient (when Matrix is set to variable).
G->B	0.99 (50)	S		Sets Green into Blue coefficient (when Matrix is set to variable).
Image Control				
Freeze	Off , On	2		Switches image freeze on or off. Use to assist off line setup and configuration.
Reverse Scan				
Reverse Scan	Off , On	0		Switches Reverse Scan on or off.
Mode	Horiz , Vert, Both	0		Selects Reverse Scan mode: Horiz = the image is flipped horizontally; Vert = the image is flipped vertically; Both = the image is flipped both horizontally and vertically.
Image Shift				
Horizontal	-20..20 (0)	0		Shifts the image in horizontal direction (in pixels)
Vertical	-4..4 (0)	0		Shifts the image in vertical direction (in lines)
Video Mode	<list of video modes>	3		Current video mode. Available video modes depend on camera model, configuration and installed license.
Sensitivity	Nom , HiQ, HiSens	3		Sensitivity mode: HiQ = High quality Nom = Nominal HiSens = High sensitivity Note: Sensitivity mode is not available for high speed video modes.
Output Mode	YCrCb 422 , YCrCb 444, RGB 444	3		

Creative Control

Function:	Values:	U:	F:	Description:
Levels				
Filters				
ND Filter	Clear, ND 1/4 , ND 1/16, ND 1/64, Cap	2		Selects optical Neutral Density (ND) filter: Clear = No filter; ND 1/4 = 2 stops; ND 1/16 = 4 stops; ND 1/64 = 6 stops neutral; Cap = Lens capped.
FX Filter	Clear, Star 4P, Sft Fcs, OLP 1, OLP 2	2		Selects optical Effects (FX) filter: Clear = No filter; Star 4P = 4 Point Star; Sft Fcs = Soft Focus; OLP 1 = Optical Low-Pass filter 1; OLP 2 = Optical Low-Pass filter 2.
Contrast				
Contrast	Off, On	3		Switches Contrast adjustment on or off.
Shadows	0.99 (50)	3		Sets contrast level for the shadows area.
Midtones	0.99 (50)	3		Sets contrast level for the midtones area.
Highlights	0.99 (50)	3		Sets contrast level for the highlights area.
Knee (in PowerCurves mode) (only available for SDR)				
Knee	Off, Var, Auto	2		Selects Knee: Auto = automatic ; Var = variable; Off = Knee is switched off.
Knee Type	Y, NAM	3		Selects source signal on which Knee acts: Y = luminance; NAM = Non Additive Mix: level of the highest RGB component.
Point	0%..90% (35%)	3		Knee point: this is the video output level at which compression begins.
Fade Level	0.99 (0)	3		Fades between a linear (99) and a Knee (0) compression curve (when Knee = Var).
Limit Out	100%..109% (100%)	3		Sets maximum output video level after compression.
Max In	150%..800% (200%)	3		Sets maximum input video level.
Saturation	Off, On	3		Switches color saturation above Knee on or off.
Saturation Lvl	0.99 (50)	3		Sets color saturation level above Knee.
Advanced				
Knee Mode	Compat, PwrCurves	S		Selects Knee Mode: Compatibility or PowerCurves.
Auto Ref	0.99 (30)	S		Sets the reference level for Knee (when Knee = Auto)
Knee (in Compatibility Mode) (only available for SDR)				
Knee	Off, Var, Auto	2		Selects Knee: Auto = automatic ; Var = variable; Off = Knee is switched off.
Knee Type	Y, NAM	3		Selects source signal on which Knee acts: Y = luminance; NAM = Non Additive Mix: level of the highest RGB component.
Slope M	0.99 (50)	3		Sets the Knee slope (when Knee = Var).
Point M	0.99 (60)	3		Sets the Knee point (when Knee = Var).

Function:	Values:	U:	F:	Description:
Advanced				
Knee Mode	Compat, PwrCurves	S		Selects Knee: Auto = automatic ; Var = variable; Off = Knee is switched off.
Knee Limit	0..99 (99)	S		Selects the level above which the Knee Limiter is active (when Knee = Var).
Desat	Off , On	3		Switches Desaturation on or off. This desaturates color above Knee to cancel out unwanted color casts.
Desat Level	0.99 (50)	3		Sets Desaturation level (0=no desaturation, 99 = maximum desaturation)
Auto Point	0.99 (30)	S		Sets the point where compression starts (when Knee = Auto)
Auto Ref	0.99 (30)	S		Sets the reference level for Knee (when Knee = Auto)
Flare				
Flare	Off , On	S		Switches flare correction on or off.
Red	0.99 (6)	S		Sets flare correction level for Red.
Green	0.99 (9)	S		Sets flare correction level for Green.
Blue	0.99 (11)	S		Sets flare correction level for Blue.
Color				
Color Adjustment				
Color Corr				
Col Corr	Off , On	3		Switches color corrector on or off. All active sets are used when color corrector is on.
Col Corr View	Off , On	3		Switch on to view the selected color area in the main signal.
VF View	Off , On	3		Switch on to view the selected color area in the viewfinder.
Set	1,2,3,4,5,6	3		Selects a color correction set.
Set On/Off	Off , On	3		Switches the selected color corrector set on or off. Note: when off, settings can not be changed.
Color	0..359.99 (0)	3		Sets the color area by hue (in steps of 22.5 degrees)
Width	22.5..360 (0)	3		Sets the color area hue width (in degrees).
Hue	-180..180 (0)	3		Sets the hue (in degrees) for the selected area.
Sat	0.99 (0)	3		Sets the saturation level for the selected area.
Luminance	0.99 (0)	3		Sets the luminance level for the selected area.
Color Name	B+, MG- , MG, MG+, R, R+, YL-, YL, YL+, G-, G, G+, CY, CY+, B-, B	3		Shows color area name: B: Blue; MG: Magenta; R: Red; YL: Yellow; G: Green; CY: Cyan
Smoothing	Sharp, Medium , Smooth	3		Selects method for smoothing transitions between affected and nonaffected areas.

Function:	Values:	U:	F:	Description:
Reset	Exec, ...	3		Resets the color corrector to its default values. All sets are reset.
Col Protect				
Col Protect	Off, On	3		Switches Color Protect on or off.
Col Prot Lvl	0%..150% (75%)	3		Sets Colors Protect level.
Sharpness				
Detail				
Detail	Off, On	3		Switches Detail on or off.
Detail Level	0.99 (50)	2		Sets Detail level: the amount of Detail added to the video signal.
Detail Source	R+G, R, G, Y	3		Selects the video component that is used to generate Detail signal.
Texture	0.99 (50)	3		Sets Texture Level: adds sharpness to texture surfaces in the image.
Soft Detail	Off, On	3		Switches Soft Detail on or off.
Soft Detail Lvl	0.99 (50)	2		Sets the level of Soft Detail added to the video signal.
Advanced				
Vert Detail Lvl	0.99 (25)	3		Sets the level of the vertical component in the Detail signal.
Coarse/Fine	0.99 (90)	3		Sets detail balance between coarse and fine structures in the image (0 = coarse structures are sharpened, 99 = fine structures are sharpened).
Detail Level	0.99 (50)	3		Sets (overall) Detail level: the amount of Detail added to the video signal. Note: this is the same function as <Detail Level> above.
Level Dep	0.99 (30)	3		Sets the detail reduction level for shadow areas.
Noise Slicer	0.99 (10)	3		Sets the level of the noise slicer for Detail.
Texture	Enabled, Disabled	3		Enables or disables Texture function.
Dtl Flw Gain	Off, On	3		When switched on, Detail level follows Gain level.
Dtl Flw Zoom	Off, On	3		When switched on, Detail level follows Zoom factor.
HDR Detail				
Detail	Off, On	3		Switches HDR Detail on or off.
Detail Level	0.99 (50)	2		Sets the level of detail added to the video signal.
Detail Source	R+G, R, G, Y	3		Selects the video component that is used to generate HDR Detail signal.
Advanced				
Coarse/Fine	0.99 (50)	3		Sets HDR Detail balance between coarse and fine structures in the image(0 = coarse structures are sharpened, 99 = fine structures are sharpened).

Function:	Values:	U:	F:	Description:
Detail Level	0.99 (50)	3		Sets (overall) HDR Detail level: the amount of detail added to the video signal. Note: this is the same function as <Detail Level> above.
Level Dep	0.99 (15)	3		Sets the detail reduction level for shadow areas.
4K Detail				
Detail	Off, On	3		Switches 4K Detail on or off.
Detail Level	0.99 (50)	2		Sets the level of detail added to the video signal.
Detail Source	R+G, R, G, Y	3		Selects the video component that is used to generate 4K Detail signal.
Soft Detail	Off, On	3		Switches Soft Detail on or off.
Soft Detail Lvl	0.99 (50)	2		Sets the level of Soft Detail added to the video signal.
Advanced				
Vert Detail Lvl	0.99 (50)	3		Sets the level of the vertical component in the Detail signal.
Coarse/Fine	0.99 (90)	3		Sets detail balance between coarse and fine structures in the image (0 = coarse structures are sharpened, 99 = fine structures are sharpened).
Detail Level	0.99 (50)	3		Sets (overall) detail level: the amount of Detail added to the video signal. Note: this is the same function as <Detail Level> above.
Level Dep	0.99 (50)	3		Sets the detail reduction level for shadow areas.
Noise Slicer	0.99 (10)	3		Sets the level of the noise slicer for Detail.
HD Detail				
HD Follow 4K	Off, On	3		When switched on, HD Detail copies all settings from the 4K Detail section.
Detail	Off, On	3		Switches HD Detail on or off.
Detail Level	0.99 (35)	2		Sets the level of detail added to the video signal.
Detail Source	R+G, R, G, Y	3		Selects the video component that is used to generate HD Detail signal.
Soft Detail	Off, On	3		Switches Soft Detail on or off.
Soft Detail Lvl	0.99 (50)	2		Sets the level of Soft Detail added to the video signal.
Advanced				
Vert Detail Lvl	0.99 (25)	3		Sets the level of the vertical component in the Detail signal.
Coarse/Fine	0.99 (90)	3		Sets detail balance between coarse and fine structures in the image (0 = coarse structures are sharpened, 99 = fine structures are sharpened).
Detail Level	0.99 (35)	3		Sets (overall) detail level: the amount of Detail added to the video signal. Note: this is the same function as <Detail Level> above.

Function:	Values:	U:	F:	Description:
Level Dep	0.99 (30)	3		Sets the detail reduction level for shadow areas.
Noise Slicer	0.99 (10)	3		Sets the level of the noise slicer for Detail.
Detail Equalizer				
Detail Equalizer	Off, On	3		Switches the Detail Equalizer on or off.
Shadows	0.99 (50)	3		Sets level of Detail for the shadows area of the image.
Midtones	0.99 (50)	3		Sets level of Detail for the Midtones area of the image.
Highlights	0.99 (50)	3		Sets level of Detail for the Highlights area of the image.
Knee Detail	1,2,3,4	3		Selects level of detail for the compressed signal above the knee point.
Keying Assist (only available when RGB 444 license is installed)				
Backing	Off, Green, Blue	3		Selects the backing color to use for your virtual studio. The backing color can be further adjusted with the Keying selection settings. Note: When Backing is switched on, Skin Gate 3 is unavailable (see below).
Transition Lvl	-100..100 (-50)	3		This is the sharpness (or detail level) of the transition from foreground to background.
Keying Selection				
Width Red	0.99 (0)	S		Sets color range for the Red keying color.
Width Blue	0.99 (0)	S		Sets color range for the Blue keying color.
Color Red	0.99 (0)	S		Sets color hue for the Red keying color.
Color Blue	0.99 (0)	S		Sets color hue for the Blue keying color.
Skin Detail				
Skin Gate	Off, 1, 2, 3, 1+2, 1+3, 2+3, 1+2+3	3		Switches Skin Detail off or on and selects a Skin Gate. Use Skin Detail to change the detail level within a selected color range.
Auto Skin Dtl	Off, On	2		Switches Auto Skin Detail mode on or off.
VF View	Off, On	2		Switch on to view the selected Skin Detail area in the viewfinder.
Skin1 Level	-100..100 (0)	2		Sets detail level for Skin Gate 1
Skin2 Level	-100..100 (0)	2		Sets detail level for Skin Gate 2
Skin3 Level	-100..100 (0)	2		Sets detail level for Skin Gate 3
Follow Zoom	Off, On	3		Switches Skin Detail Follows zoom factor on or off
Color Selection				
Width Red	0.99 (29)	3		Sets width level (Red) for Skin Gate 1.
Width1 Blue	0.99 (40)	3		Sets width level (Blue) for Skin Gate 1.
Color1 Red	0.99 (37)	3		Sets color level (Red) for Skin Gate 1.
Color1 Blue	0.99 (6)	3		Sets color level (Blue) for Skin Gate 1.
Width2 Red	0.99 (29)	3		Sets width level (Red) for Skin Gate 2.

Function:	Values:	U:	F:	Description:
Width2 Blue	0.99 (40)	3		Sets width level (Blue) for Skin Gate 2.
Color2 Red	0.99 (37)	3		Sets color level (Red) for Skin Gate 2
Color2 Blue	0.99 (6)	3		Sets color level (Blue) for Skin Gate 2.
Width3 Red	0.99 (29)	3		Sets width level (Red) for Skin Gate 3.
Width3 Blue	0.99 (40)	3		Sets width level (Blue) for Skin Gate 3.
Color3 Red	0.99 (37)	3		Sets color level (Red) for Skin Gate 3.
Color3 Blue	0.99 (6)	3		Sets color level (Blue) for Skin Gate 3.

Configuration menu

Function:	Values:	U:	F:	Description:
Security				
Installed level	User0 , User1, User2, User3	S	-	User access level. Note: switch the camera off and on to take the changes into effect
PIN Code	<nnnn>	S	-	Enter PIN code to access Service level (S).
Customer Files				
Store Cust Scene	Exec, ...	S	-	Stores the current Scene settings to the Customer Scene File.
Cust Scene Attr	R/W, R	S	-	Selects the read/write attribute for the selected Customer Scene File: R/W = Read and Write; R = Read only.
Store Cust Oper	Exec, ...	S	-	Stores the current Operator settings to the Customer Operator file.
Green button				
Std Scene File	Fact , Cust	S	-	Selects the Scene file to be recalled when the STD File/Green button is pressed: Fact = Factory (default) Scene file Cust = Customer Scene file
Std Oper File	Fact , Cust	S	-	Selects the Operator file to be recalled when the STD File/Green button is pressed: Fact = Factory (default) Operator file Cust = Customer Operator file
Scene File	Yes , No	S	-	Determines if the Scene file should be recalled when the STD File/Green button is pressed.
Oper File	Yes , No	S	-	Determines if the Operator file should be recalled when the STD File/Green button is pressed.
DeviceID Reset		S	-	Resets DeviceID to factory value.
Factory Reset		S	-	Resets ALL camera settings to their factory defaults.
Clear NVRAM Boot		S	-	Clears the Non Volatile RAM
Files				
Scene Files				
Store				
File Select	Standard, SCam1, SCam2, SCam3, SCam4	2	-	Selects a Scene File for storing.
Store	Exec, ...	2	-	Stores the Scene settings in the selected Scene file.
Recall				
File Select	Standard, SCam1, SCam2, SCam3, SCam4	1	-	Selects a Scene File for recall.

Function:	Values:	U:	F:	Description:
Recall	Exec, ...	1	-	Recalls the selected Scene file to the camera. This overwrites current Scene settings.
Lens Files				
Store				
File Select	LCam1, LCam2, LCam3, LCam4	2	-	Selects a Lens File for storing.
Store	Exec, ...	2	-	Stores the Lens settings in the selected Scene file.
Recall				
File Select	LCam1, LCam2, LCam3, LCam4	1	-	Selects a Lens File for recall.
Recall	Exec, ...	1	-	Recalls the selected Lens file to the camera. This overwrites current Lens settings.
Media Files				
Store				
File Select	MCam1, MCam2, MCam3, MCam4	S	-	Selects a Media File for storing.
Store	Exec, ...	S	-	Stores the Media settings in the selected Scene file.
Recall				
File Select	MCam1, MCam2, MCam3, MCam4	S	-	Selects a Media File for recall.
Recall	Exec, ...	S	-	Recalls the selected Media file to the camera. This overwrites current Media settings.
Operator Files				
Store				
File Select	Standard, OCam1, OCam2, OCam3, OCam4	2	-	Selects a Operator File for storing.
Store	Exec, ...	2	-	Stores the Operator settings in the selected Scene file.
Recall				
File Select	Standard, OCam1, OCam2, OCam3, OCam4	1	-	Selects a Operator File for recall.
Recall	Exec, ...	1	-	Recalls the Operator file to the camera. This overwrites current Operator settings.
File Attributes				
File Select	None, SCustStd, OCustStd, SCam1, SCam2, SCam3, SCam4, OCam1, OCam2, OCam3, OCam4, LCam1, LCam2, LCam3, LCam4, MCam1, MCam2, MCam3, MCam4	3	-	Selects a file to change its attributes.

Function:	Values:	U:	F:	Description:
Filename	<file name>	2	—	Displays the selected file name.
Attribute	R/W, R	2	—	Selects the attribute for the selected file: R/W = Read and Write; R = Read only.
USB				
Name	<text>	—	—	Displays USB device name.
Free Space	0 MB..65535 MB (0 MB)	—	—	Displays free space left on USB in Mb.
No of Files	0.255 (0)	—	—	Displays number of files stored on USB.
USB Files				
File Select	Scene 0	—	—	Selects a file on the USB device.
Delete	Exec, ...	—	—	Deletes the selected file.
Filename	<text>	—	—	Changes name of the selected file.
Attribute	R/W, R	—	—	Selects the attribute for the selected file: R/W = Read and Write; R = Read only.
Reference	SDI Input, PTP , TriLvl, Composite, FreeRun	0	—	
XCU Conn (only when camera is in XCU mode)				
ConnectType	Cable , DirectIP, DirectIP+	2	—	Select Connect Type: Cable (=XCU mode), DirectIP or DirectIP+ Note: the DirectIP/DirectIP+ license must be installed (???)
XCU Name	<name>	2	—	In XCU mode, enter the name of the XCU that connects with the camera. Note: the DirectIP/DirectIP+ license must be installed (???)
Disable Camera	Off , On	0	—	Locks all camera buttons to prevent
Lens				
Z/F Settings		0	—	???
Lens Settings				
Lens Connector	SXP , Camera	0	—	Selects the lens connector to be used. Select Camera when a normal lens is used with the SuperXpander (Only when a SuperXpander is present).
Lens IF Type	Analog, Digital	0	—	Selects a digital or analog lens interface.
Lens IF Status	OK, Not OK	0	—	Shows the status of the lens interface (when a digital lens interface is used).
RE Iris Comp	Off , On	0	—	Switches Iris compensation on or off. Use this setting to compensate for Iris level when a range extender (RE) is used.
Lens Corrections				
CLASS				

Function:		Values:	U:	F:	Description:
	CLASS	Auto , Off	0	-	Selects CLASS mode: Auto = Automatic correction; Off = no correction.
	Reset	Exec , busy	0	-	Select to reset lens aberration data
	Status	Active, Init, Waiting, Reading, No Info, Unsup, I/F NOK , Off, InitNOK, Error	0	-	Active: CLASS is active; Init: initialization process is started; Waiting: camera waits for manual turning of lens rings; Reading: camera is reading lens abberation data from lens; No Info: lens does not support ; Unsup: CLASS cannot be activated; I/F NOK: Lens interface not OK - no lens found; connected or analog lens interface in use; Off: CLASS is switched off.
	Progress	0%..100% (0%)	0	—	Shows progress of the lens CLASS data reading process.
Shading					
	Shading	Off , On	S	—	Switches lens shading compensation on or off.
	R Saw H	0.99 (50)	S	—	Sawtooth (Horizontal) for Red channel.
	R Par H	0.99 (50)	S	—	Parabola (Horizontal) for Red channel.
	R Saw V	0.99 (50)	S	—	Sawtooth (Vertical) for Red channel.
	R Par V	0.99 (50)	S	—	Parabola (Vertical) for Red channel.
	G Saw H	0.99 (50)	S	—	Sawtooth (Horizontal) for Green channel.
	G Par H	0.99 (50)	S	—	Parabola (Horizontal) for Green channel.
	G Saw V	0.99 (50)	S	—	Sawtooth (Vertical) for Green channel.
	G Par V	0.99 (50)	S	—	Parabola (Vertical) for Green channel.
	B Saw H	0.99 (50)	S	—	Sawtooth (Horizontal) for Blue channel.
	B Par H	0.99 (50)	S	—	Parabola (Horizontal) for Blue channel.
	B Saw V	0.99 (50)	S	—	Sawtooth (Vertical) for Blue channel.
	B Par V	0.99 (50)	S	—	Parabola (Vertical) for Blue channel.
Pixel Alignment					
	Hor Red	-8..8 (0)	S	—	(Advanced setttings)
	Hor Blue	-8..8 (0)	S	—	(Advanced setttings)
	Vert Red	-8..8 (0)	S	—	(Advanced setttings)
	Vert Blue	-8..8 (0)	S	—	(Advanced setttings)
	Apt Flw Iris	Off , On	3	—	(Advanced setttings)
Remote BackFocus					
	Control	Off , On	0	—	
	Position	0.99 (???)	0	—	
Intercom					

Function:	Values:	U:	F:	Description:
Source Selection				
Intercom	Ext1, AES67		—	Selects source for intercom: Ext1 is audio from the External 1 video signal
Ext1	SDI, IP		—	
Prog Icom AES67	Icom, Audio		—	
Prog Ext	Ext1, AES67		—	
Prog Mon	Ext1, AES67		—	
Cam Mic	Off, Switch , Track, Prod	1	—	Selects the camera operator's microphone routing: Off = no routing; Switch = Track = route signal to Tracker channel; Prod = route signal to Production channel.
Cam Mic Level	-22dB, -28dB, -34dB, -40dB, -46dB, -52dB, -58dB, -64dB	1	—	Selects Mic level of camera operator's intercom microphone.
Cam Mic Power	Off, On	1	—	Switches bias tee power (12 VDC) to camera operator's intercom microphone on or off.
Cam Prod	Off, Left, Right, Both	1	—	Selects to which ear muff(s) of the camera headset the production intercom channel is routed.
Cam Eng	Off, Left, Right, Both	1	—	Selects to which ear muff(s) of the camera headset the engineering intercom channel is routed.
Cam Prog	Off, Left, Right, Both	1	—	Selects to which ear muff(s) of the camera headset the program intercom channel is routed.
Cam ProgExt	Off, Left, Right, Both	1	—	???
Cam ProgExt Lvl	0.99 (50)	1	—	???
Cam ProgMon	Off, On	1	—	???
Cam ProgMon Lvl	0.99 (50)	1	—	???
Cam Tracker	Off, Left, Right, Both	1	—	Selects to which ear muff(s) of the camera headset the Tracker's microphone signal is routed.
Cam Tracker Lvl	0.99 (50)	1	—	Sets Tracker signal level in the camera operator's headset.
Cam Boost	Off , On	1	—	???
Tracker				
Tracker Mic To	Off , Cam, Eng, Prod, All	1	—	Selects the Tracker's headset microphone routing.
Tracker Mic Lvl	-22dB, -28dB, -34dB, -40dB, -46dB, -52dB, -58dB, -64dB	1	—	Selects Mic level of Tracker's headset microphone.
Tracker Mic Pwr	Off , On	1	—	Switches bias tee power (12 VDC) to Tracker's microphone on or off.
Tracker Prod	Off, Left, Right, Both	1	—	Selects to which ear muff(s) of the Tracker headset the production intercom is routed.

Function:	Values:	U:	F:	Description:
Tracker Eng	Off, Left, Right, Both	1	—	Selects to which ear muff(s) of the Tracker headset the engineering intercom is routed.
Tracker Prog	Off, Left, Right, Both	1	—	Selects to which ear muff(s) of the Tracker headset the program intercom is routed.
Tracker ProgExt	Off, Left, Right, Both	1	—	???
Tracker Cam	Off, Left, Right, Both	1	—	Selects to which ear muff(s) of the Tracker headset the camera headset microphone signal is routed.
Tracker Lvl	0.99 (75)	1	—	Sets Tracker headset level.
Tracker Boost	Off , On	1	—	???
Audio				
Audio Gain Mode	Local, Extern	1	—	Loc (= local): audio gain level is controlled by the settings in this menu Extern (= external): audio gain level is (for both channels) controlled by the XCU when the camera mode is XCU.
Audio Delay	0 ms..170 ms (0 ms)	1	—	Sets an audio delay
Front Mic				
FrontMic Source	Line, Mic , Mic48V	1	—	Selects source input sensitivity for the Front Mic: either Line or Mic level or Mic level with phantom power.
FrontMic Level	-22dB, -28dB, -34dB, -40dB, -46dB, -52dB, -58dB, -64dB	1	—	Selects input gain level for Front Mic (when Audio Gain Mode is set to Local).
FrontMic HPF	Off , On	1	—	Switches High Pass Filter for Front Mic input on or off. Use to reduce 50 Hz and 60 Hz hum or low frequency noise.
FrontMic ALC	Off , On	1	—	Switches Auto Level Control for Front Mic on or off.
Audio 1				
Audio 1 Input	Front , Rear	1	—	Selects which connector to use as the input source for Audio channel 1: Front (of camera) or Rear (back panel)
Audio 1 Source	Line, Mic , Mic48V	1	—	Selects source input sensitivity for the Audio 1, either Line or Mic level or Mic level with phantom power.
Audio 1 Level	-22dB, -28dB, -34dB, -40dB, -46dB, -52dB, -58dB, -64dB	1	—	Selects input gain level for Audio channel 1 (when Audio Gain Mode is set to Local). Note: when Audio Gain Mode is set to Extern(al), Audio 1 Level is set by the XCU.
Audio 1 HPF	Off , On	1	—	Switches High Pass Filter for Audio channel 1 on or off. Use to reduce 50 Hz and 60 Hz hum or low frequency noise.
Audio 1 ALC	Off , On	1	—	Switches Auto Level Control for Audio channel 1 on or off.
Audio 2				

Function:	Values:	U:	F:	Description:
Audio 2 Source	Line, Mic , Mic48V	1	—	Selects source input sensitivity for the Audio 2, either Line or Mic level or Mic level with phantom power.
Audio 2 Level	-22dB, -28dB, -34dB, -40dB, -46dB, -52dB, -58dB, -64dB	1	—	Selects input gain level for Audio channel 2 (when Audio Gain Mode is set to Local). Note: when Audio Gain Mode is set to Extern(al), Audio 2 Level is set by the XCU.
Audio 2 HPF	Off , On	1	—	Switches High Pass Filter for Audio channel 2 on or off. Use to reduce 50 Hz and 60 Hz hum or low frequency noise.
Audio 2 ALC	Off, On	1	—	Switches Auto Level Control for Audio channel 2 on or off.
HDMI Audio	Off, Audio1+2 , Audio3+4, Cam E&P, Prog 1+2	1	—	Selects which audio channels are assigned to the HDMI audio channels.
TestTone MPB	Off , ProgInt, ProgExt, PrgMon1, PrgMon2, Eng, Prod, Ch7, Ch8, Mon1Sdi, Mon2Sdi, Mon1Aes, Mon2Aes, Ch13, Ch14, Ch15, TstTrns, All	S	—	???
TestTone Out	Off , Audio 1, Audio 2, Audio 3, Audio 4, EngCam, ProdCam, USB1, USB2, Audio 5, Audio 6, MicCam, MicTrck, AudioX, AudioY, PrgMon1, PrgMon2, All	S	—	???

Tally

Source	XCU, Ethernet , IS-07, Serial	0	O	???
On Air Lamp	Enable , Disable	0	O	Select Enable when the On Air Lamp/Tally light at the front of a large viewfinder should follow the tally signal or select Disable if you never want it to light.
On Air Lamp Lvl	0.99 (99)	0)	Sets brightness level of the On Air Lamp/Tally light at the front of a large viewfinder.
On Air Handgrip	Switch , Input, Off	0	—	???
Aux out	Off, On	0	—	???
Lock	Off, On	3	—	Switches the Tally Lock function on or off. When Tally Lock is on, some camera controls are locked when the camera is On Air.
SDI embedding	Off , On	3	—	???

CAWB Settings

Function:	Values:	U:	F:	Description:
CAWB Speed	1..40 (4)	S	—	Sets the speed for the Auto White Balance procedure.
CAWB Gain	1..40 (10)	S	—	Sets the gain value for the Auto White Balance procedure.
Network				
Camera Number	1..99 (1)	0	—	Selects logical camera number.
IP Settings				
IP Mode	DHCP, Auto , Manual	0	—	Selects automatic, manual or DHCP IP mode for C2IP network.
Subnet Mask	0..31 (0)	0	—	Selects the subnet mask (when IP mode is set to manual).
IP	<IP address>	0	—	Sets camera IP address in the C2IP network (when IP mode is set to manual).
Def GW	<GW address>	0	—	Selects camera head default gateway IP address in the C2IP network (when IP mode is set to manual).
Apply Settings	Exec,	0	—	Select Exec to apply the new IP settings.
Nameserver 1				
Use Server	No , Yes	0	—	Select Yes to enable use of the C2IP Name Server 1 Note: Nameserver license must be installed on the Camera Connect.
Status	Off , Unknown, Active, Unavail	0	—	Shows current status of Name Server 1
IP	<IP address>	0	—	Selects Name Server 1 IP address.
Apply Settings	Exec, ...	0	—	Select Exec to apply the new IP settings
Nameserver 2				
Use Server	No , Yes	0	—	Select Yes to enable use of the C2IP Name Server 2 Note: Nameserver license must be installed on the Camera Connect.
Status	Off , Unknown, Active, Unavail	0	—	Status of Nameserver 2
IP	<IP address>	0	—	IP address for Nameserver 2
Apply Settings	Exec, ...	0	—	Select Exec to apply the IP settings
PCI ID	0..8 (1)	S	—	ID for external PC operation
Signals				
Live2K				
Mode	1080p , 1080i	3	—	Selects Video mode for Live2K signal
Source	HDR , SDR	3	—	Selects Dynamic range for Live2K signal
BNC Ref/AES	Ref In , Aes In, TriLvl, Composite	0	—	Selects signal/function of the REF/AES BNC connector

Function:	Values:	U:	F:	Description:
BNC Outputs	Default , Phases	0	-	In HiSpeed video modes, this selects the BNC Outputs 'profile' for the signals on BNC-A to BNC-D: default = Live, Live2K are output, Ext and SDI phases = Live Combined plus Phases are output
BNC-C Preset	Off, Ext1, Ext2 , Ext3, TP	0	-	Selects External video or TP signal to output on BNC-C
BNC-D Preset	Off, Ext1, Ext2, Ext3, TP	0	-	Selects External video or TP signal to output on BNC-D
HDMI Select	Off, Main, Live, VF , Ext1, Ext2, Ext3, Ext1sc, Ext2sc, Ext3sc, BNC-D	0	-	Selects video signal to output on HDMI connector

Licenses menu

Function:	Values:	Usr:	Description:
Active Licenses			
RGB 444	Unknown , Not Applicable, Not Present, Temporary, Perpetual, Trial, Clock Error, Disabled, ..., ...	2	Shows status of the RGB 444 license (if installed)
Time Left	0 sec..65535 sec (0 sec)	2	Shows time left in seconds for RGB 444 license (if installed)
UHD 1X			
	Unknown , Not Applicable, Not Present, Temporary, Perpetual, Trial, Clock Error, Disabled, ..., ...	2	Shows status of the UHD 1X license (if installed)
Time Left	0 sec..65535 sec (0 sec)	2	Shows time left in seconds for the UHD license (if installed)
UHD 3X			
	Unknown , Not Applicable, Not Present, Temporary, Perpetual, Trial, Clock Error, Disabled, ..., ...	2	Shows status of the UHD 3X license (if installed)
Time Left	0 sec..65535 sec (0 sec)	2	Shows time left in seconds for the UHD 3X license (if installed)
Direct IP+			
	Unknown , Not Applicable, Not Present, Temporary, Perpetual, Trial, Clock Error, Disabled, ..., ...	2	Shows status of the Direct IP+ license (if installed)
Time Left	0 sec..65535 sec (0 sec)	2	Shows time left in seconds for the Direct IP+ license (if installed.)
GPS			
	Unknown , Not Applicable, Not Present, Temporary, Perpetual, Trial, Clock Error, Disabled, ..., ...	2	Shows status of the GPS license (if installed)
Time Left	0 sec..65535 sec (0 sec)	2	Shows time left in seconds for the GPS license (if installed)
LaterPay			
	Unknown , Not Applicable, Not Present, Temporary, Perpetual, Trial, Clock Error, Disabled, ..., ...	2	Shows status of the LaterPay license (if installed)

Function:	Values:	Usr:	Description:
Time Left	0 sec..65535 sec (0 sec)	2	Shows time left in seconds for the LaterPay license (if installed)
Planned Licenses (this section is repeated for each license)			
License Count	0.65535 (0)	2	Number of licenses currently installed on the camera
Start Date	<date>	2	Start date of each planned license.
Start Time	<time>	2	Start time of each planned license.
Type	None , RGB444, GPS, NativeIP, UHD, UHD_3X, DirectIP+, LaterPay, PayDone	2	Shows planned license type.
Duration	0..65535 day (0 day)	2	Duration in days of each planned license
New Licenses			
Time		2	
Date		2	
Change time			
Hours (24h)	0.23 (0)	2	
Minutes	0.59 (0)	2	
Time Zone	UTC-12:00 .. UTC+11:00 (UTC+01:00)	2	
Apply Time	Exec ,	2	
Change date			
Days	1..31 (1)	2	
Month	1..12 (1)	2	
Year	2013..2199 (2013)	2	
Apply Date	Exec ,	2	
Time&Date OK?	..., No, Yes	2	
Find licenses			
Search Next	Exec ,	2	
Add License	Exec ,	2	
Type	None , RGB444, GPS, NativeIP, UHD, UHD_3X, DirectIP+, LaterPay, PayDone	2	
Start		2	
Time Zone	UTC-12:00 .. UTC+11:00 (UTC+01:00)	2	
Duration	0..65535 day (0 day)	2	
Trial license			

Function:	Values:	Usr:	Description:
Select Type	None , RGB444, GPS, NativeIP, UHD, UHD_3X, DirectIP+, LaterPay, PayDone	2	
Activate	Exec, ...	2	
Time left	0 sec..65535 sec (0)	2	

Diagnostics menu

Function:	Values:	Usr:	Description:
C2IP Network			
Communication			
XCU Connected	Yes, No	2	Indicates whether an XCU is connected to the camera.
C2IP Panels	0.99 (0)	2	Shows number of C2IP control panels connected to the camera.
Camera Connects	0.99 (0)	2	Shows number of Camera Connects connected to the camera.
DHCP			
Server	<IP address>	2	???
DNS	<IP address>	2	???
Domain	<IP address>	2	???
Hostname	<name>	2	???
Ethernet			
MAC-Address	<00:00:00:FF:FF:FF>	2	Shows hardware MAC address of the camera.
Link State	Connected, Disconnect	2	Shows link status of the Ethernet connection.
Link type	Unknown , 10Mb/Half, 10Mb/Full, 100Mb/Half, 100Mb/Full, Negotiate	2	Show link type (speed) of the Ethernet connection.
Loopback test			
Loopback test	Off , On	S	
Data count	<nnnn>	S	
Date errors	<nnnn>	S	
Data loss	<nnnn>	S	
Ser Stats (DTCP)			
Packets Recv	<nnnn>	S	
Packets Sent	<nnnn>	S	
Frame Errors	<nnnn>	S	
Checksum Errors	<nnnn>	S	
Ser Stats (PCI)			
Packets Recv	<nnnn>	S	
Panel Sent	<nnnn>	S	
Packets Sent	<nnnn>	S	
Panel Recv	<nnnn>	S	
SPI Stats			
Msg Recv	<nnnn>	S	
HWOvr	<nnnn>	S	

Function:	Values:	Usr:	Description:
SWOvr	<nnnn>	S	
QueueOvr	<nnnn>	S	
QueueSize	<nnnn>	S	
Refresh	Exec,	S	

SFP Modules

QSFP present	Yes, No	1	
Type	Unavail , Unknown, 100G, 10G, 40G, Act_40G	1	
Los	Ok, NotOk	1	
Link	Yes, No	1	
TX Mb/s	<nnnn>	1	
RX Mb/s	<nnnn>	1	
RX Error	<nnnn>	1	
RX Error/sec	<nnnn>	1	
FEC Corrected	<nnnn>	1	
FEC Ok	<nnnn>	1	
SFP1 present	Yes, No	1	
Type	Unavail , Unknown, 100G, 10G, 40G, Act_40G	1	
Los	Ok, NotOk	1	
Link	Yes, No	1	
Speed	Unsup, 10G, 25G	1	
TX Mb/s	<nnnn>	1	
RX Mb/s	<nnnn>	1	
RX Error	<nnnn>	1	
RX Error/sec	<nnnn>	1	
FEC Corrected	<nnnn>	1	
FEC Ok	<nnnn>	1	
SFP2 present	Yes, No	1	
Type	Unavail , Unknown, 100G, 10G, 40G, Act_40G	1	
Los	Ok, NotOk	1	
Link	Yes, No	1	
Speed	Unsup, 10G, 25G	1	
TX Mb/s	<nnnn>	1	

Function:	Values:	Usr:	Description:
RX Mb/s	<nnnn>	1	
RX Error	<nnnn>	1	
RX Error/sec	<nnnn>	1	
FEC Corrected	<nnnn>	1	
FEC Ok	<nnnn>	1	
Details			
Module	SFP 1, SFP 2, QSFP	1	
Link	Yes, No	1	
Temp	-128 C..127 C (0 C)	1	
Voltage	0 mV..5000 mV (0 mV)	1	
Link	RX1, RX2, RX3, RX4	1	
TxPower	-100dBm..100dBm (0 dBm)	1	
RxPower	-100dBm..100dBm (0 dBm)	1	
Los Lock	Yes, No	1	
Rx Cdr Lock	Yes, No	1	
Tx Cdr Lock	Yes, No	1	
Media Network			
Vlan			
C2IP Packets Rx	<nnnn>	0	
C2IP Packets Tx	<nnnn>	0	
Trunk Packets Rx	<nnnn>	0	
Trunk Packets Tx	<nnnn>	0	
Outgoing Streams			
Main video		0	
Live Video		0	
Audio		0	
Intercom		0	
Incoming Streams			
Video RX 1			
Stream Active	Yes, No	1	
Pkts in Buffer	<nnn>	1	