

Table of Contents


Table of Contents	1
1 Outlook Description	2
2 Turn on/off the device	3
3 The charging and power supply of the device	3
4 Touch-Screen Navigation.....	3
5 Wi-Fi network settings	4
6 Application Management	6
7 USB Storage	7
8 HDMI.....	10
9 Bluetooth	11
10 Music	12
11 Video	14
12 Accounts	16
13 Settings	17

1 Outlook Description


Positive

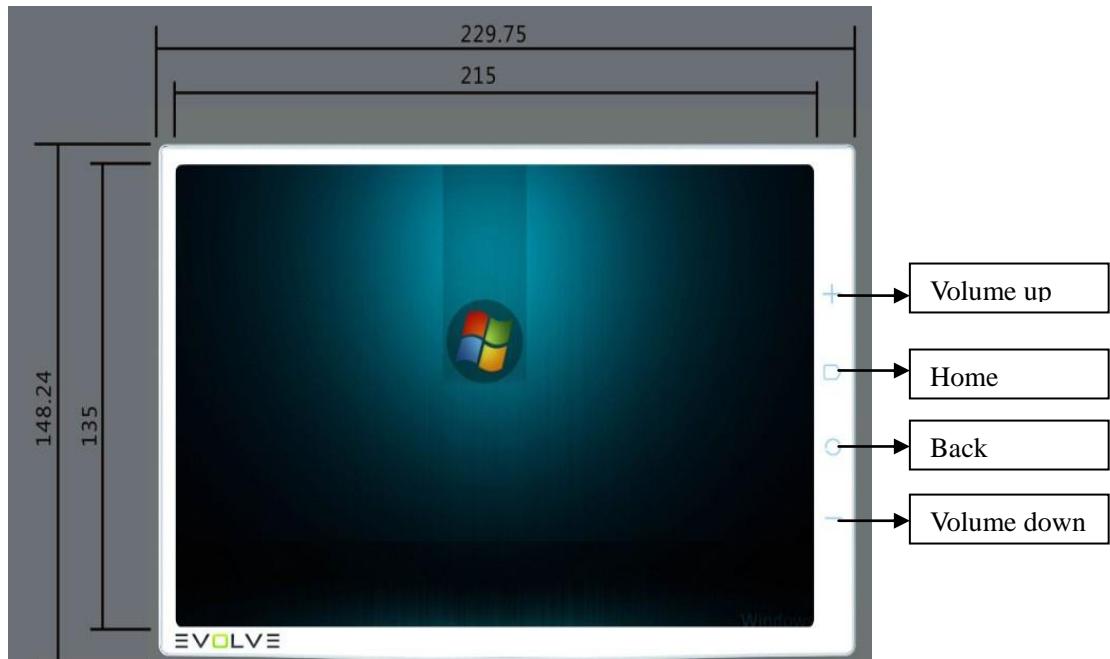

Left side

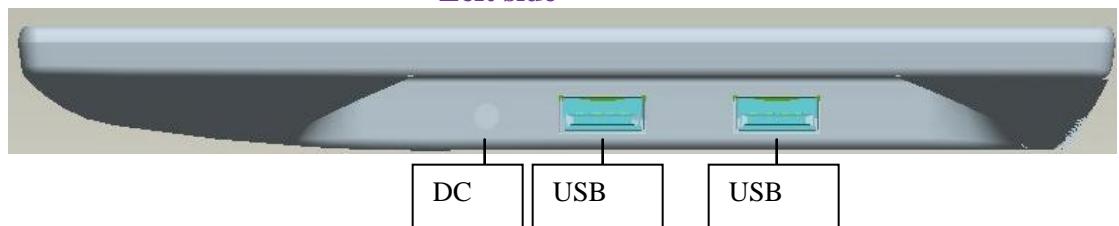

Right side

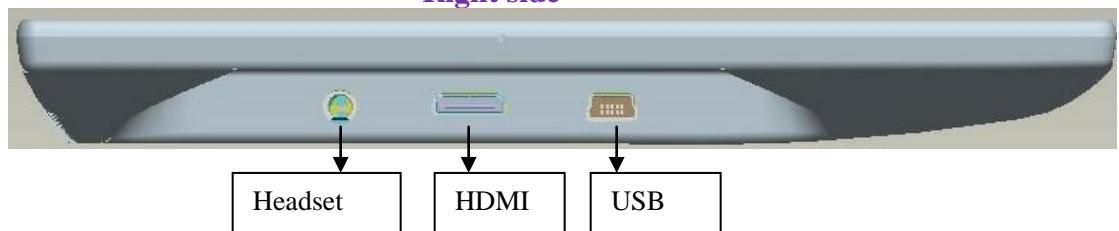

2 Turn on/off the device

Turn On: Plug in the power adapter, turn on the machine automatically

Turn Off: When the battery don't have enough power, the device will automatically shut down

3 The charging and power supply of the device

Charge the device

- Plug the power adapter into an electrical wall outlet named DC, and then connect to the device to fully charge the battery before use (approx. 4hours).
- While charging, the battery indicator light is red.
 - ★ *The light indicator is covered by the back shell, user can't see its change state. User can see equipment's charge and discharge status by the battery option in Settings.*

Power supply of the device

Connect one of the two big USB ports on the left side of the device and the device which is to be charged by a piece of USB cable, you can supply power to the external device directly

When charging the device , it can also supply power to the external device by one of the big USB port on the base

★*You cannot charge the battery using the USB cable.*

★*You can use the device while the battery is charging.*

★*If you want supply power to the external device by one of the big USB port on the base, you must plug in the power adapter*

4 Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation for all applications.

Throughout the User Guide, you are instructed to use the following tap or touch navigation

methods:

Tap: quick tap & release on an item on the screen.

Finger slide: touch & slide your finger across the screen and then release.

Touch & hold: touch and hold in place approx 2 seconds, and then release to display an options window.

Note:

To avoid scratching or crushing, do not place objects on the touch screen surface.

5 Wi-Fi network settings

Connecting to Wi-Fi networks

1. Press **Settings -> Wi-Fi**
2. Check **Wi-Fi** item on the top of the screen to turn it on
3. Touch a network to connect to it

Note:

- *If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.*
- *If the network is secured , you're prompted to enter a password or other credentials. (Ask your network administrator for details.)*
- *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap "+" on the top of the screen and follow the prompts to add your network*

Add a Wi-Fi network

1. Turn on Wi-Fi, if it's not already on.
If you're adding a Wi-Fi network when first setting up your device, Wi-Fi is turned on automatically.
2. In the Wi-Fi settings screen, touch **Add network** (at the top of your screen).
3. Enter the SSID (name) of the network. If the network is secured, touch the Security menu and then touch the type of security deployed on the network.

4. Enter any required security credentials.
5. Touch **Save**.

The device connects to the wireless network. Any credentials that you entered are saved, so you are connected automatically the next time you come within range of this network.

Forget a Wi-Fi network

You can make the device forget about the details of a Wi-Fi network that you added—for example, if you don't want the device to connect to it automatically or if it is a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, touch & hold the name of the network.
3. Touch **Forget** in the dialog that opens.

Wi-Fi Settings screen

In addition to the settings described in this section, you can press **Menu** and Advanced Wi-Fi settings as described in “**Advanced Wi-Fi**”

- **Wi-Fi**

Check to turn on Wi-Fi so you can connect to Wi-Fi networks. When connected to a network, displays the network's name.

- **Wi-Fi networks**

Displays a list of Wi-Fi networks you've previously configured and those detected when the device last scanned for Wi-Fi networks.

- **Add Wi-Fi network**

Opens a dialog where you can add a Wi-Fi network by entering its SSID (the name it broadcasts) and security type.

Advanced Wi-Fi settings screen

- **Network notification**

Check to receive a notification when an open Wi-Fi network becomes available.

- **Keep Wi-Fi on during sleep**

Opens a dialog where you can set whether and when the Wi-Fi radio disconnects. Disabling sleep uses more battery power.

- **MAC address**

The Media Access Control (MAC) address of your device when connecting to Wi-Fi networks.

- **IP address**

The Internet Protocol (IP) address assigned to the device by the Wi-Fi network you are connected to (unless you used the IP settings to assign it a static IP address).

6 Application Management

Install Android Applications

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on your Tablet using the  **Apk Installer** application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device, → insert or connect to your Device.
2. Tap the  **ApkInstaller** application icon.
3. Tap **Install** and locate the folder (**Internal Memory** or **TF Card**) in which the **.apk** application files were saved.
4. Tap on a **.apk** file → **Install**.
The application is installed and the application icon is added to the **Applications** screen.
5. Tap **Open** to launch the application now, or tap **Done** to return to the **ApkInstaller** screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.

1. Tap the  **Browser** application icon to launch the internet browser.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is complete, touch & hold on the download file (in the **Download history** screen), → tap **Open** → **Install**.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Press **Settings** → **Applications**
2. Tap the application you want to uninstall, → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.


You can also use **ApkInstaller** to uninstall the Android applications

1. Tap the  **ApkInstaller** application icon.
2. Tap **Manage**
3. Tap one **.apk** from the application list and tap **Uninstall**
4. Tap **OK** to confirm to uninstall the **.apk**

7 USB Storage

USB mass storage

Connect your PDA and your computer with a piece of USB cable, and click on the USB icon on the status bar, then the following window will pop up:

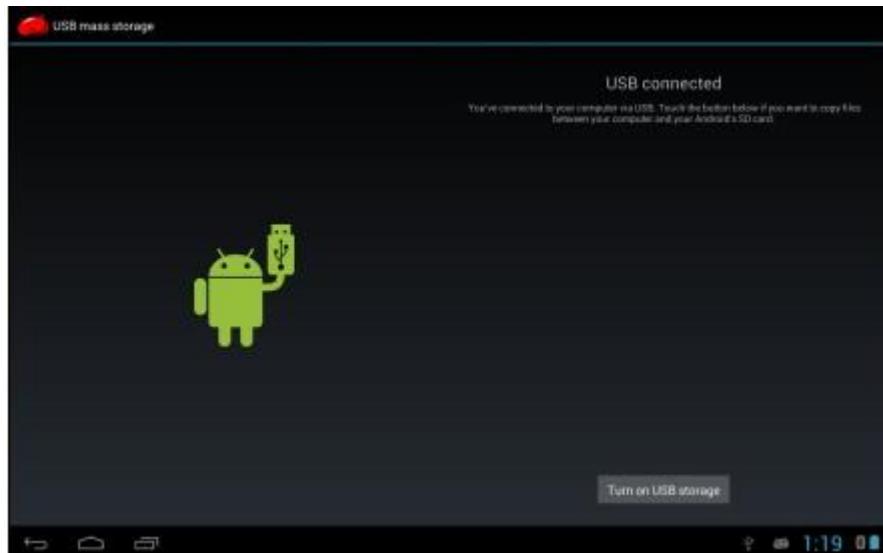


Click on **Turn on USB storage** button, the mass Storage disk will be on the list of **Removable storage devices** of your computer. You can **add ,delete or modify** file on the mass Storage disk.

USB disk

Connect the USB disk and your PDA with a piece of OTG, then open **Explorer** →**USB**, you can read the information in your USB disk . You can also do other operation according to the following tips

Tap the **Explorer** application icon to view the files on all storage devices (*Internal memory, SD card, USB*), and to quickly & easily install Android application on your Tablet.

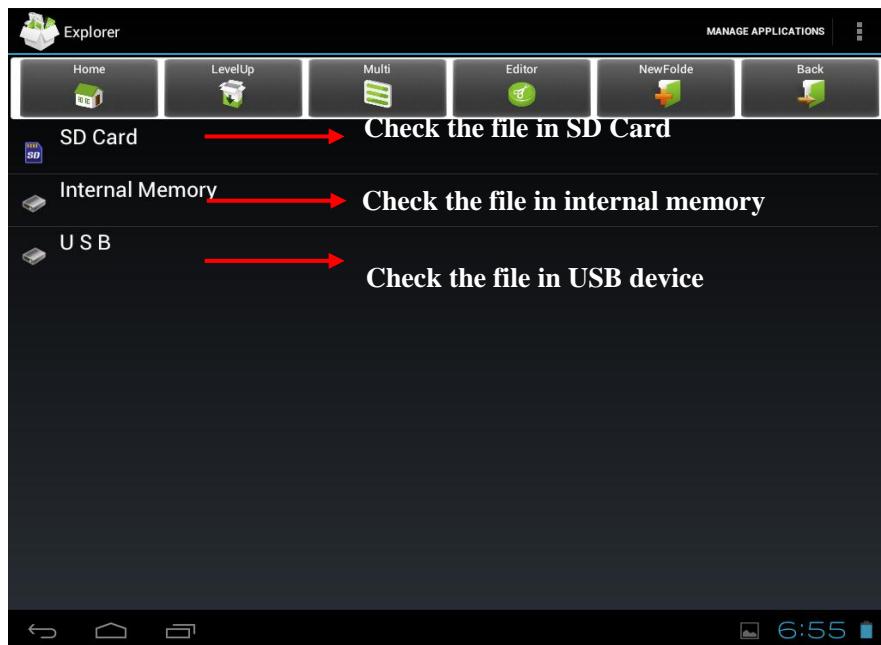

Functions of icons introduction

Home



Display the root directory of Explorer

LevelUp



Go the parent directory of the current folder

Multi



Tap it once, you can multi select the items displayed

Editor



Tap it to do some operation for the selected item, such as copy, delete, move, paste, rename.



Tap it to build a new folder

Tap it to go to the previous page

Tap it to go to the next page

Delete files

Tap and hold on the folder/file you want to delete, → tap **Delete**

Install android application

Use **Explorer** to install android application. Before doing this please copy the **.apk** files into SD card or your internal memory.

1. Tap the  **File Browser** application icon to view the files
2. Tap one **.apk** that you want to install on your devices

8 HDMI

Turn on HDMI

Before using the HDMI ,please make sure you have turned on your HDMI button: **Settings->HDMI -> Turn on HDMI**.

HDMI connecting

Connect your PDA and multimedia TV with a piece of suitable HDMI cable, then the information on your PDA will display on the TV. All operation you do on the PDA will display on TV Synchronously, the voice output from the TV.

Settings

HDMI resolution Choose the correct resolution according to your situation .

Screen Zoom Drag the progress bar to adjust the screen zoom.

Screen Timeout Choose 10s, 20s, 30s or never sleep as your screen timeout according to your demand. If you set 10s as timeout ,your device will go to sleep 10 seconds after your last operation.

9 Bluetooth

Turn on/off Bluetooth

Settings ->Bluetooth->on/off

Search for Bluetooth device

When you turn on Bluetooth, it will search for nearby Bluetooth automatically. The searching result will be on the list of **AVAILABLE DEVICES**. If the Bluetooth you want to search for is not on the list. You can click on the **SEARCH FOR DEVICE** icon to search for it

*☆Your Bluetooth default status is not visible to other Bluetooth devices. You need tap the status to change it to **visible to all nearby Bluetooth devices** first, so that it can be searched by other devices.*

Pairing

Click on the device you want to pair on the list of **AVAILABLE DEVICES**, a **Bluetooth pairing request** window will pop up. Click on the pair button, maybe you are asked to input matching keys (usually 4 number) ,then tap **OK** to pair with other device. The another device also need to input the same matching keys. After the success of the match, the Bluetooth device will appear in the **paired device** list.

Operation for the paired device

- **Listen to music** After the success of the match with the Bluetooth headset , you can listen to music with Bluetooth headset.
- **Send or receive file** Open the gallery, choose a piece of picture, click on the left icon on the right top of the window and choose Bluetooth on the drop-down menu, a window named **Bluetooth device chooser** will pop up. Choose the Bluetooth which you want send pictures to , then click on the **Send** button.


If you want to send files in other format (such as mp3,mp4),you can install a APK

named **Super Bluetooth share** or other APK like this.

- **Rename** In the list of **PAIRED DEVICES**, you can choose the device that you want to rename and click on the  at the right side of the device to open a menu , choose Rename and input the new name and click on OK to save it
- **Unpair** In the list of PAIRED DEVICES, you can choose the device that you want to rename and click on the  at the right side of the device to open a menu , choose Unpair.

Advanced settings

Click on the icon  on the top of the window, you can do more option: **Rename tablet** , **Visibility timeout**, **Show received files**, **Help**.

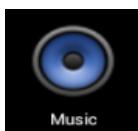

10 Music

Get music

● Transfer music using USB


Transfer music files from a computer to your memory card.

1. With a memory card inserted, and your tablet showing the home screen, connect a USB data cable from you tablet micro USB port to a USB port on your computer. Your tablet should show  in the status bar.
2. Tap  then your tablet shows a **USB connected** message above the status bar, touch the message to open the storage dialog. You can't use the files on your memory card while it is connected.
3. Touch **Turn on USB storage**.
4. Tap “OK” to confirm the dialog.
5. Drag and drop you music to a folder on the memory card.
6. When you're done, select the “**Turn off USB storage**”.


Play Music

1. Tap the  Music application icon.
2. Tap any audio file from Albums/Artists/Songs/Playlists/ to play it.
3. To stop the music, tap the **Pause**  icon.
4. To leave the music playing and return to previous screens, press Back key to return to the **Home** screen.

At this interface, you can do: **view the lyrics, play / pause, switch to the previous / next song, loop play, random play** etc.

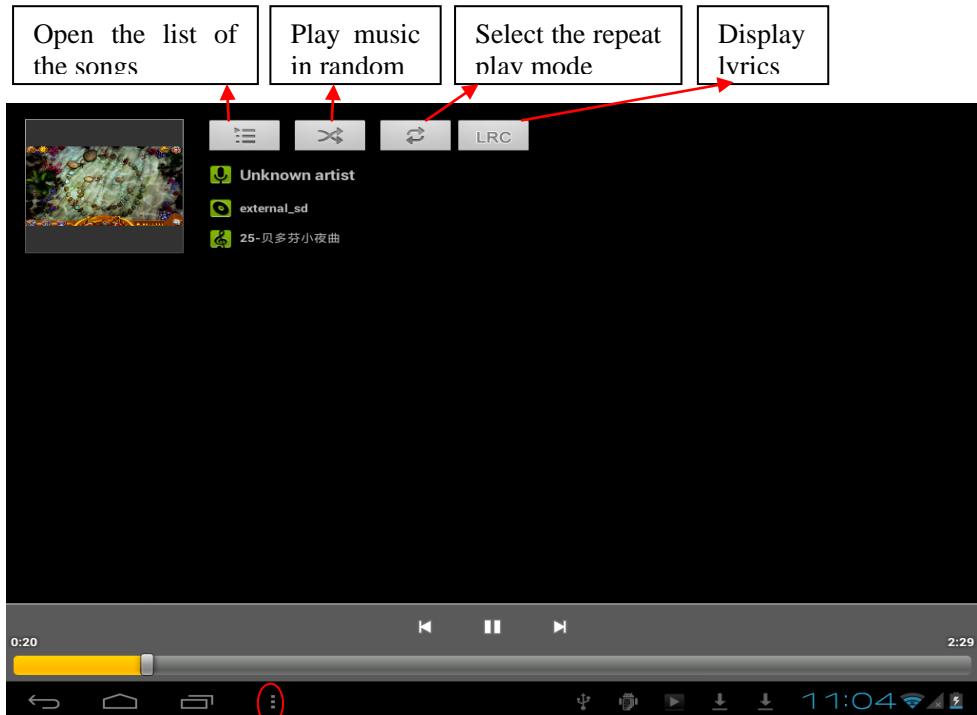

 
Touch here you can make more settings, as follows:



11 Video

Play Video

1. Tap the  **My Video** application icon.
2. Touch any video from the video list.
3. Tap on the playing video screen, the options displayed on the screen below.

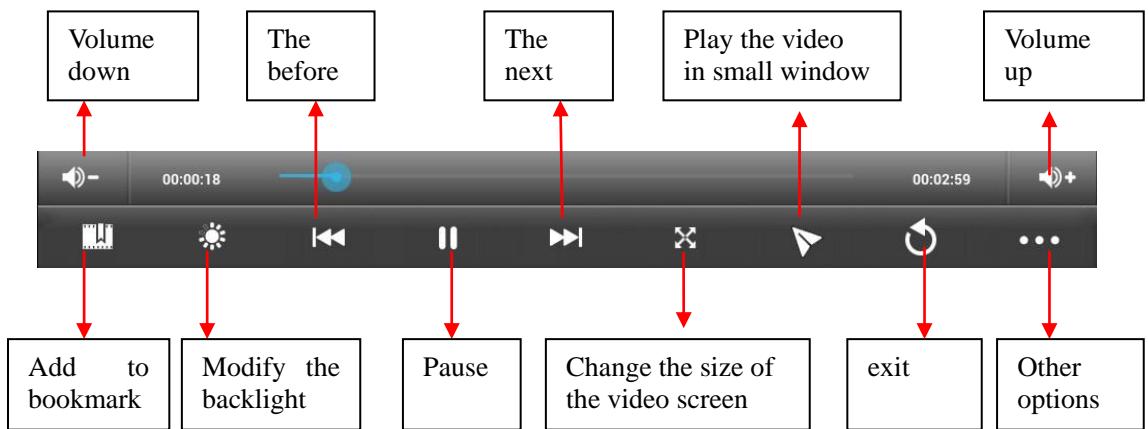

Add to bookmark

Touch to record the current play course during a video is playing. Next time you open this video, you can choose to play from the bookmark or from the very beginning.

Play the video in small window

Tap the button to enter small window mode, see as the following picture,



To close the window, you can tap and hold the window until there is a "X" in the middle of the window, then tap the "X" to close the window.

Other options

- **Delete Book Mark And Play from beginning**

During playing a video which has been added a bookmark touch it and the video will play from the beginning.

- **Delete bookmark**

During playing a video which has been added a bookmark touch it and the bookmark added to it will be deleted.

- **Play mode**

During playing a video, touch **play mode** you can choose:

Single After the current video is over, the playing is stopped.

Repeat one The current video will be played in repetition.

Repeat all All the videos will be played in repetition.

- **Help** Show some help information about the video player

- **Return** Back to the playing video view

12 Accounts

Adding and removing accounts

 
- **Add an account**
 1. Open the Accounts & Sync Settings screen:
Press **Settings -> Accounts**
 2. Touch + Add account .
 3. Touch the kind of account you want to add
 4. Follow the steps displayed on the screen to enter the required and optional information about the account.
- **Remove an account**
 1. Open the Accounts & Sync Settings screen:
Press **Settings -> Accounts**
 2. Touch the account to delete
 3. Touch **Settings** on the top of the screen and then touch **Remove account** on the dropdown menu.
 4. Confirm that you want to remove the account

Configuring account sync and display options

- **Sync information manually**
 1. Open the Accounts Settings screen:
Press **Settings -> Accounts**
 2. Touch the account whose data you want to sync.
 3. Touch **Menu** on the top of the screen and touch **Sync now** on the dropdown menu.
- **Change an account's sync settings**

1. Open the Accounts Settings screen:
Press **Settings -> Accounts**
2. Touch the account whose sync settings you want to change
3. Check or uncheck the kinds of information you want to sync to the device.

13 Settings

Wireless & networks	Wi-Fi	Turn on Wi-Fi.
	Bluetooth	Turn on/off Bluetooth and manage it.
	Data usage	Turn on Mobile data to check the data usage
	More	Touch to set VPN ,portable hotspot ,Wi-Fi direct and Mobile network
Sound	volumes	. To adjust the Media volume, Alarm volume and Notification volume. Tap & slide  and then tap OK .
	Default notification	Select desired ringtone sound.
	Touch sounds	Selected to make touch sound
	Screen lock sound	Selected to make screen lock sound.
Display	Brightness	Tap & slide  to adjust the screen brightness as desired, and then tap OK .
	Wallpaper	Touch to set the wall paper
	Font size	Choose the appropriate font size
Location Service	Google's location service	Choose to get your current location by Google while network is available
	Location & Google search	Choose to let Google use your location to improve search results and other services
Apps	Downloaded	Program downloaded from your tablet.
	On SD card	Manage and remove installed applications from your SD card
	Running	View and control currently running services.
	All	Manage all the programs in your tablet
Backup & reset	Factory data reset	Tap to reset the device to its initial factory state, erasing all data and downloaded applications. Tap

		<p>Reset Tablet to proceed with reset, or press Back key to cancel and return to previous screen.</p> <p>WARNING! The following will be erased during the factory reset:</p> <ul style="list-style-type: none"> ~ Google account ~ System and application data and settings ~ Downloaded applications <p>The factory reset will NOT erased:</p> <ul style="list-style-type: none"> ~ Current system software and bundled applications ~ SD card files, such as music or photos
	Factory Mode	Input the password to start texting
Security	Owner info	You can choose a appropriate mode to unlock your screen and you can choose to show your owner info on lock screen or not
	Make passwords visible	You can choose to make passwords visible
	Device administrators	Add or delete device administrators
	Unknown sources	Choose to allow installation of non-Market apps
	Trusted credentials	A list of trust credentials
	Install from SD card	Include trusted credentials and Install from SD card
Language & input	language	Select the language and region according to your location.
	Personal dictionary	You can add words to a personal dictionary, words that may not be included in the default dictionary.
	Keyboard &input methods	Choose a appropriate input from the list
Date & time	Automatic date &time	Use network-provided values
	Set date	Set the date manually when Automatic is not checked
	Select time zone	Select the time zone when Automatic is not checked
	Set time	Set the time when Automatic is not checked
	Use 24-hour format	You can choose to use 24-hour format or 12-hour format.
	Select date format	You can select the date format.
About tablet		View updates Status (Battery, Wi-Fi, etc), Legal information, Model number, Android version, Kernel version and Build number.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory, should be avoided.

The USB cable with a core (manufacturer: SHENZHEN JINGWEICI ELECTRONICS CO., LTD

; model number: F5B RH 12*20*5.6) should be used with this product always.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 0.578 W/kg.