

# User Manual

**Product Name: FM Transmitter**


**Model No.: W-228**

**FCC ID: Y3LW-228**



## Wireless i-Hat

### Instruction Manual

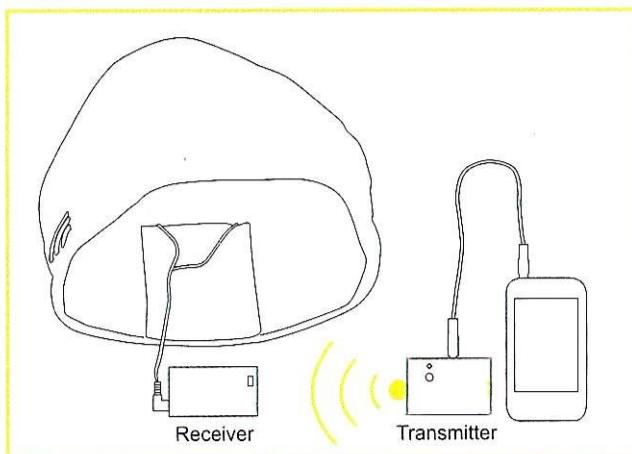

Requires x4 AAA batteries. We strongly recommend the use of high quality alkaline batteries.

Music is transmitted from the media player using FM Frequency 107.9. The range is 10 - 12 metres (subject to local conditions and interference).

1. Remove the Receiver from the pocket inside the i-Hat.
2. Slide battery cover off and insert x2 AAA batteries.
3. Replace the cover and flick the switch to ON.
4. Place the Receiver back inside the pocket in the i-Hat.
5. Take the Transmitter and slide the clip down and unhook it.
6. Slide the battery cover off and insert x2 AAA batteries.
7. Replace the cover and the clip.
8. Connect the Transmitter to your media player using the lead provided.
9. Push the button on the Transmitter, a red light will indicate it is on. The Transmitter and Receiver will auto tune.

Switch off the battery packs when not in use.

### FCC Caution

1, This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation of the device.

2, Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Label

Product Name: FM Transmitter

Model No.: W-228

FCC ID: **Y3LW-228**

Country of Origin: China



**Wireless Frontiers Technologies**

FCC Caution:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Location

**EUT PH**



**FCC ID Label Location**