



QUICKSTART GUIDE

ENGLISH (2 – 4)

MANUAL DE INICIO RÁPIDO

ESPAÑOL (5 – 7)

GUIDE D'UTILISATION SIMPLIFIÉ

FRANÇAIS (8 – 10)

GUIDA RAPIDA

ITALIANO (11 – 13)

KURZANLEITUNG


DEUTSCH (14 – 16)

SNELSTARTGIDS

NEDERLANDS (17 – 19)

QUICKSTART

CONNECTION DIAGRAM

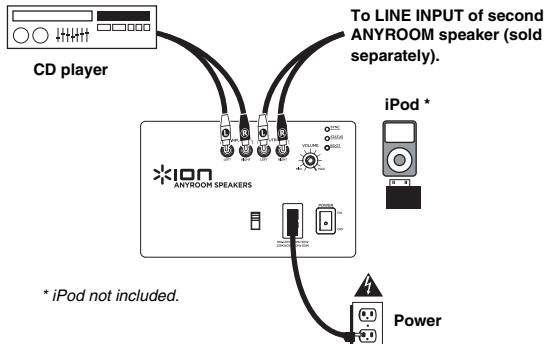

BOX CONTENTS


- ANYROOM
- Wireless dock
- Power cable
- Quickstart Guide
- Safety Instructions & Warranty Information Booklet

FEATURES

1. **POWER IN** – Connect the included power cable to this jack then connect the cable to your power source.
2. **VOLTAGE SELECTOR** – This 2-position switch sets the AC input voltage for the speaker. U.S. users should set this switch to "115V" whereas U.K. and most European users will need to set this to "230V".
3. **POWER ON/OFF SWITCH** – Turns ANYROOM on or off.
4. **LINE INPUT** – This stereo RCA input can be used to connect a CD player, MP3 player, or other audio source. To connect to a portable device with a 1/8" (3.5mm) headphone jack, you will need a standard 1/8"-to-RCA adapter (not included).
5. **LINE OUTPUT** – To play your music out of an additional speaker, connect this stereo RCA output to a second speaker's stereo RCA input so you can play your music out of both. To do this, you will need a standard stereo RCA cable (not included).
6. **MASTER VOLUME** – This knob controls ANYROOM's volume.
7. **SYNC** – This LED blinks occasionally to indicate that ANYROOM is detecting its connection to the wireless dock.
8. **STATUS** – This LED will illuminate solid red when there is a recognized connection between the wireless dock and ANYROOM.
9. **BOOT** – Press this button to reset the connection between the wireless dock and ANYROOM.

Note: Do not remove the speaker grille.

Important: As with all speakers, ANYROOM will perform best after an initial "break-in" period of a few hours of play at a medium volume.

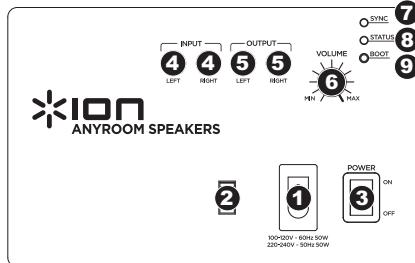

USING ANYROOM

1. Follow the instructions in the CONNECTION DIAGRAM to set up your ANYROOM speaker properly.
2. Be sure the volume levels of ANYROOM and your device(s) are turned to "zero."
3. Connect the device(s) you want to play:
 - a. **iPod***: Gently connect your iPod to the included wireless dock. Be sure the STATUS LED on ANYROOM's rear panel is illuminated solid red to ensure a strong wireless signal. The SYNC LED should also be blinking occasionally.
 - b. **CD player (or other device with an RCA output)**: Use a standard stereo RCA cable (not included) to connect your device to ANYROOM's LINE INPUT. Be sure to match the colors of the cable's plugs to their respective jacks (red to red, white to white).
4. Turn on your iPod and/or other device, then turn on ANYROOM's POWER SWITCH.
5. Play your iPod and/or other device, and turn up its volume.
6. Turn up ANYROOM's MASTER VOLUME.

* iPod is a trademark of Apple, Inc., registered in the U.S.A. and other countries.

You are cautioned that changes or modifications not expressly approved to a part responsible for compliance could void the user's authority to operate the equipment.



THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

www.ionaudio.com