

# Mini **Bluetooth** Speaker

Join the Bluetooth revolution. Power up, pair and play.



MA-889-B

Instruction Manual

Please read all instructions carefully and retain for future reference.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Portable Bluetooth speaker

Aux cable

USB/DC power cable

Instruction manual

## Features

2 speaker channel output to meet high stereo music output

Built-in mic

Removable and rechargeable battery

Wireless music within 10 metres

Aux-in function

Bluetooth enabled and functions to match

Hands free answer and hang up function

## Safety Instructions

When using electrical appliances, basic safety precautions must always be followed.

Keep the appliance away from heat sources, direct sunlight, humidity, water and any other liquid.

Do not operate the appliance if it has been exposed to water, moisture or any other liquid to prevent against electric shock, explosion and/or injury to yourself and damage to the appliance.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk of harm.

Do not use the appliance with wet hands.

Keep the appliance free from dust, lint etc.

Do not use this appliance for anything other than its intended use.

Keep the appliance out of reach of children. This appliance is not a toy.

This appliance contains no user serviceable parts. All repairs should be carried out by a qualified engineer; improper repairs may place the user at serious risk of harm.

Do not use the appliance at excessive audio levels as damage to hearing may occur.

Ensure that the battery compartment is secure.

Only use the batteries recommended.

Batteries are to be inserted with the correct polarity and should not be exposed to excessive heat sources such as fire and direct sunlight.

Remove batteries from the appliance when it is not being used for a long period of time.


Exhausted batteries should be removed from the appliance.

Supervise children with batteries at all times. Do not dispose of batteries in a fire.

Do not dispose of batteries in your household waste.

To dispose of the batteries, take them to your local recycling station. Contact your local government offices for details.

## Description of Parts

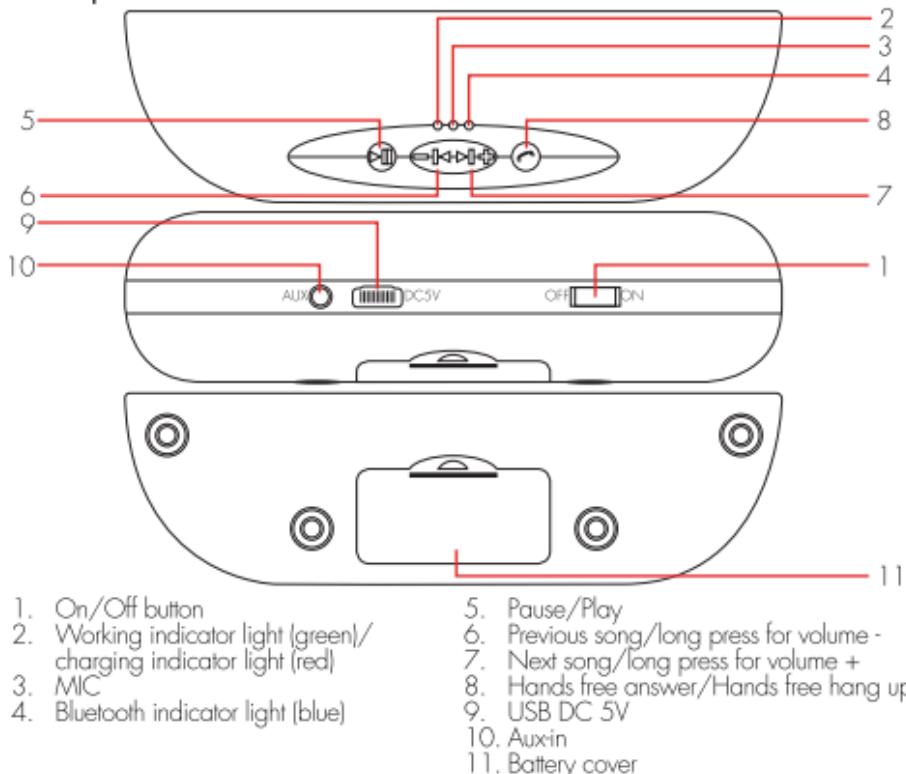

## Instructions for Use

Open the battery compartment and place a rechargeable battery into the base of the speaker, following the polarity markings (+/-). Guide lines for this are marked on the base of the battery compartment.

Press the On/Off switch, the green light will illuminate and the blue light will flash fast, indicating that the Bluetooth function is available.

The Bluetooth user name is 'BT KB102H' and the pairing code is '0000'.

The blue light will flash slower after the speaker has paired with the device. The Bluetooth speaker can only match one signal at a time. The connection cannot be deleted whilst paired and can only be deleted once disconnected.

**Note:** An indicating sound will let you know that the speaker has paired/unpaired.

### Using the Hands Free Function

When a phone call is received, short press the  button to answer.

To end the phone call, short press the  button again.

Long press the  button to reject unwanted calls – this will also disconnect the phone from the Bluetooth speaker.

### Using the Aux-In Function

When using an Aux cable the previous song, volume-, next song, volume+ and the pause/play functions do not work.

### Charging the Bluetooth Speaker

Connect the USB/DC cable to the Bluetooth speaker and then to any USB port; the green power indicator will turn to a red light.

**Note:** It is recommended that the speaker is turned off when charging.

## Care and Maintenance

Wipe clean with a soft, damp, lint-free cloth, ensuring that the speaker is not immersed in water or other liquid.

**Note:** Make sure that the USB/DC charger is not connected.

Do not expose the speaker to liquid, moisture or humidity to avoid the speaker's internal circuit being affected.

Do not use abrasive cleaning solvents to clean the speaker.

Do not expose the speaker to extremely high or low temperature as this will shorten its life, destroy the battery or distort certain plastic parts.

Do not expose the speaker to sharp objects as this will cause scratches and damage.

Do not drop the speaker as the internal circuit may become damaged.

Do not attempt to disassemble the speaker as this may cause damage to the unit.

## Battery Information

Use only the size and type of batteries specified.

When using the batteries, follow the polarity shown in the battery compartment. Incorrect polarity could cause damage to the speaker.

If the speakers are not going to be used for a long period of time, remove batteries to prevent damage due to battery leakage.

Do not expose the batteries to fire as this can cause a leakage and/or an explosion.

Rechargeable batteries are only to be charged under adult supervision.

Only batteries of the same or equivalent types as those recommended should be used with this speaker.

## Troubleshooting

Problem	Possible Reason	Possible Solution
Bluetooth device cannot pair with the speaker.	The speaker's Bluetooth function is not turned on. Incorrect Bluetooth device name selected from available device list. Wrong pass code entered.	Push the switch to Bluetooth position (BT). Make sure to select "BT KB102H". Enter the correct pass code: 0000.
Bluetooth connection distance cannot reach to 10 metres.	Electromagnetic interference. Physical barriers (such as walls and furniture). Low battery.	Avoid operating the Bluetooth speaker in areas of strong electromagnetic interference, such as near induction cookers, large power fans, motors, etc. Move the speaker closer to Bluetooth device. Fully charge the speaker and try again.

No sound from the speaker in the AUX connection status.	The speaker's Aux function is not turned on. Volume is set too low.	Push the switch to the Aux position. Increase the volume from the audio source and set it to the medium level.
Crackling sound from the speakers.	Problem with audio source.	Try another audio source.
Sound is distorted from the speaker.	Volume level on the speaker system is set too high.  Volume level on the audio source is set too high. The audio source is distorted.	Decrease the volume of the speaker. Check the volume or the audio source and decrease if necessary. Mp3 files usually have poorer quality, noise and distortion is easily noticed at a higher volume. Try an alternate audio source.

## Specification

Model Number: EE0748  
 Speaker Output: 2 x 3W  
 Battery Information: 850mAH rechargeable battery 5V 0.5A  
 Operating Range: 10 Meters  
 Bluetooth Specification: Bluetooth V3.0+EDR  
 Frequency 2402MHz ~ 2480MHz ISM Band  
 About 3 Hours of Working Time  
 About 40 to 50 hours of Standby Time  
 3 Hours Charging Time  
 Data transmission rate of 2.1Mbps  
 Input Sensitivity 300MV  
 Signal to Noise Ratio 90dB  
 Frequency Range 80Hz ~ 20KHz

**UP GLOBAL SOURCING,  
Manchester, OL9 0DD.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240\*

\*Telephone lines are open Monday – Friday, 9am – 5pm  
(Closed Bank Holidays)

Email: [customercare@upgs.com](mailto:customercare@upgs.com)  
Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required. If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

**GUARANTEE**

This product is guaranteed for a period of 1 year from the date of purchase against mechanical and electrical defects.

This guarantee is only valid if the appliance is used solely for domestic purposes in accordance with the instructions and provided that it is not connected to an unsuitable electricity supply or dismantled or interfered with in any way or damaged through misuse.

Under this guarantee we undertake to repair or replace free of charge any parts found to be defective.

Reasonable proof of purchase must be provided.

Nothing in this guarantee or in the instructions relating to this products excludes, restricts or otherwise affects your statutory rights.

In line with our policy of continuous development we reserve the right to change this product, packaging and documentation specification without notice. Consumables are not guaranteed i.e. plug and fuse.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.

Distributed by:  
UP Global Sourcing,  
Manchester, OL9 0DD.  
Made in China.



## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body