

中性

# HC-S0362无线蓝牙耳机英文说明书

128G铜板纸 折页 两面印刷

折后尺寸：80X80mm

## HC-S0362 Operation Book

4.1  
Bluetooth®

### TWS EARPHONES USER MANUAL


Please read this manual carefully before use.

#### Box contents

- TWS earphones
- USB charge cable
- S/M/L ear buds
- Carry pouch
- User manual

#### Function

THE ARTWORK NEEDS CHANGING SO YOU  
CAN SEE THE COMPONENT OR BUTTON CORRECTLY

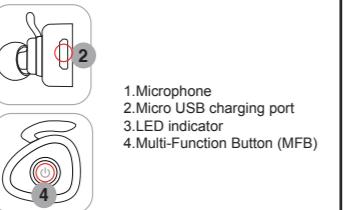

1. Microphone

2. Micro USB charging port

3. LED indicator

4. Multi-Function Button (MFB)

#### Instructions for use

##### Charging the battery

- Connect the micro USB end of the charging cable to the Micro USB charging port (2) and the standard USB end to a PC USB port or USB mains charger
- The LED indicator (3) will be red whilst charging. It will turn blue after around 1 hour. The battery is now fully charged
- If the LED indicator (3) flashes three times every 20 seconds, it means the battery is running low. Once this happens, you have about 5-10 minutes of use before the earphones power off automatically

##### Pairing the left and right channels:

- Start by holding the MFB (4) on both ear units at the same time for up to 10 seconds; you will hear an audible cue saying 'Power On' and both ear units will be flashing red and blue. Release the MFB (4) when this happens.

2. Once connected you will hear a single beep on the left channel and a single beep on the right channel. Another cue will be heard stating 'Connected' and then 'Left Channel' and 'Right Channel' confirmation checks will be performed.

##### Pairing a Bluetooth device:

- Once the ear units have paired, you will hear a single beep in the left channel and an audible cue stating the ear unit is 'pairing'.

2. Only the left unit will be flashing red and blue during this time.

#### Instructions for use

##### Charging the battery

- Activate the Bluetooth feature on your device, and search for Bluetooth devices (check your device's manual if you're unsure how to do this)
- Select 'HC-S0362' from list of found devices
- If asked for a passcode, enter '0000' or '1234' and the earphones will then be connected to your device
- After pairing successfully, the LED indicator (3) will flash blue and you will hear a double beep and 'pairing successful'; you can then answer the phone or listen to your music

7. The next time the earphones are switched on, they will automatically search for and attempt to connect to the last paired device

##### Re-pairing or pairing new devices

- Make sure the Bluetooth is turned off on any previously paired devices

2. Follow the 'Pairing a Bluetooth device' instructions from step 1

##### Call-handling

###### Answer a call

When a call comes through, the earphones will play a voice prompt. Press the MFB (4) to answer

###### End call

During a call, press the MFB (4) to end call

###### Re-dial

Whilst not in a call, press the MFB (4) twice in quick succession to redial the last phone number you called on your device

###### Playing music

Press (don't hold) the MFB (4) to switch between play and pause

#### Care for your Comet

##### Please DON'T:

- Get the Comet wet
- Drop the Comet as this will invalidate your warranty
- Expose the Comet to extreme temperatures or rapid changes of hot to cold or vice versa

##### Please DO:

###### Clean the Comet with a soft dry cloth and no detergents

###### Battery information

- Your device is powered by a rechargeable battery. Unplug the charger from the electrical plug and the device when not in use
- If left unused, a fully charged battery will lose its charge over time. We recommend a full charge twice a month to ensure battery integrity

###### Call-handling

###### Answer a call

When a call comes through, the earphones will play a voice prompt. Press the MFB (4) to answer

###### End call

During a call, press the MFB (4) to end call

###### Re-dial

Whilst not in a call, press the MFB (4) twice in quick succession to redial the last phone number you called on your device

###### Playing music

Press (don't hold) the MFB (4) to switch between play and pause

#### Troubleshooting

##### If the earphones will not switch off, they can be reset back to normal by putting them on charge

—

##### Please DON'T:

- Drop the Comet as this will invalidate your warranty
- Expose the Comet to extreme temperatures or rapid changes of hot to cold or vice versa

##### Please DO:

###### Clean the Comet with a soft dry cloth and no detergents

###### Battery information

- Your device is powered by a rechargeable battery. Unplug the charger from the electrical plug and the device when not in use
- If left unused, a fully charged battery will lose its charge over time. We recommend a full charge twice a month to ensure battery integrity

###### Call-handling

###### Answer a call

When a call comes through, the earphones will play a voice prompt. Press the MFB (4) to answer

###### End call

During a call, press the MFB (4) to end call

###### Re-dial

Whilst not in a call, press the MFB (4) twice in quick succession to redial the last phone number you called on your device

###### Playing music

Press (don't hold) the MFB (4) to switch between play and pause