


User Manual



ETLlearning.com

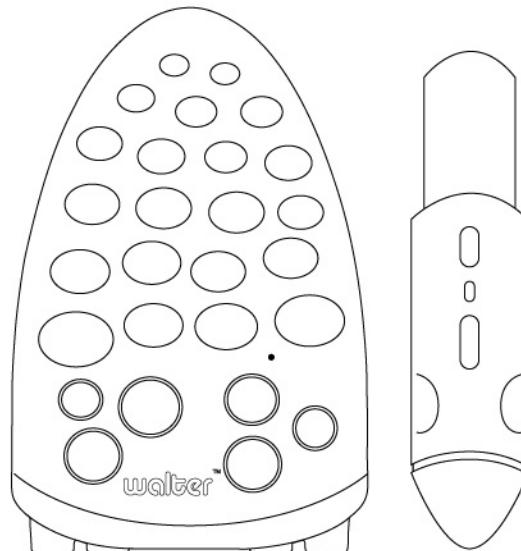

walterTM


Walter™ User Manual

English	2
繁體中文	12
简体中文	22
Bahasa Indonesia	32
ภาษาไทย	42

Walter™ User Manual

Included in the box:


- Walter™ Base Unit
- Walter™ Pen
- Power Supply (country specific)
- Audio Cable
- Walter™ Sounds Card
- ID Label
- User Manual
- Warranty Card
- Batteries: 4 AA and 1 AAA
- Screwdriver
- SD Card

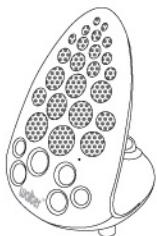

Walter™ Base Unit




Walter™ Pen

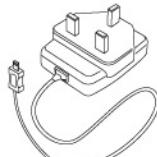

Power Supply
(country specific)



Audio Cable

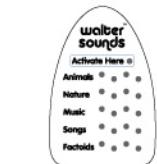

Walter™ Sounds Card



User Manual



Warranty Card



Batteries



Screwdriver





SD Card

How to set up Walter™

Learn how to set up and use Walter™ by watching the Walter™ Tutorial video at www.ETLearning.com/WalterVideo

SD Card


Use the screwdriver provided to gently open the compartment on the underside of the base unit. Do not apply too much pressure to the screw as this may damage it. Remove the SD card from the plastic case and insert into the memory card slot.

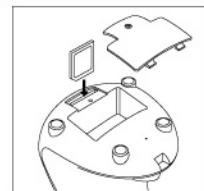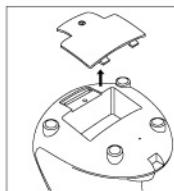

Do not edit or remove any files stored in the SD card, otherwise Walter™ will not function properly.

Power Supply

The type of plug provided for the power supply depends on your country of purchase. We recommend that Walter™ is used with electrical power supply instead of the batteries. This will ensure that Walter™ can be kept in one place in your house, to avoid accidents moving it around, and that it has a steady power supply for continuous use. Remember to unplug the power supply when Walter™ is not in use. Please remember that the AAA battery is still needed for the pen.

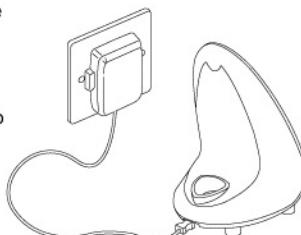

When using the power supply a responsible adult must plug it into the household power. It is not suitable for children under 3 years old to do so themselves.

Batteries:

- The Walter™ base unit battery compartment is located at the base and takes four AA batteries. This will provide around 3 hours of use.
- The Walter™ pen battery compartment is located on the side of the pen and takes one AAA battery. This will provide approximately 4 hours of use.

When the battery power is low, the light will flash red, and the unit will switch off in about 5 minutes. It is therefore recommended that the batteries are changed, or an alternate source of power is used, as soon as the light begins to flash.

Inserting batteries:

- Use the screwdriver provided to open the battery compartment.
- Make sure that the plastic strap is underneath the batteries before you start inserting them. This will make it easier to remove the batteries later.
- Insert batteries, ensuring correct polarity (indicated at the bottom of the compartment).
- Replace the lid of the battery compartment and secure with the screwdriver.


Features and Functions of Walter™

Turning on:

- Press the power switch  on the Walter™ base unit and hold for several seconds. A welcome message will be played and the light will remain blue when Walter™ is ready to be used.
- Press the power switch on the pen and hold for several seconds until the light turns blue.
- The Walter™ base unit and pen are connected using radio frequency. The pen can be used up to a distance of 10m from the base unit.

Turning off:

The base unit and the pen need to be turned off separately. Press the power button  and hold for several seconds. A farewell message is played and then the light will turn off.

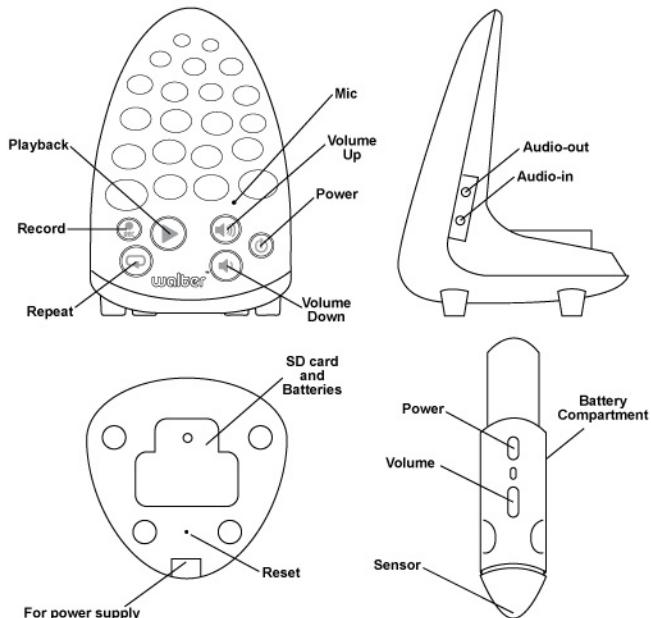

Power-save:

In order to conserve battery power, the base unit and pen will automatically turn off after being inactive for 10 minutes. This will not happen if electrical power supply is being used.

Playing the sounds from the book:

Before using Walter™ with a book, activate it by scanning the icon on the title page, and a welcome message will be played. Activation is required each time a new book is selected. Once activated, use the Walter™ pen to scan the sound icons on the pages of the books.

Repeat sound from the book:

Press the repeat button  to play the last sound from the book again.

Volume control:

- On the base unit, increase  or decrease  the speaker volume as required.
- On the pen, press the volume button  until the required volume is reached (indicated by beeps). Press the volume button and it will decrease until it reaches the lowest level, and then it will incrementally increase until the maximum volume is reached.
- The base unit and pen have 5 volume levels and the default is set to medium (level 3).

To record own voice:

Press the record button  (do not hold down the button) and speak into the speaker (there is an internal microphone). The light will turn red during recording. Press the button again to stop recording. There is a maximum recording time of one minute and every new recording deletes the previous one.

Play recorded sound:

Press play button .

Lights on Walter™ base unit and pen:

• Ready to use: blue light	• Recording: red light
• Low battery: flashing red light	• Power off: no light

Audio-in:


Walter™ can be used as an external speaker for a computer or a CD player. Connect the provided audio cable to the audio-in port of the base unit.

Audio-out:

Walter™ can be connected with standard headphones. The headphones should be connected to the audio-out port on the Walter™ base unit. The headphones are not provided.

Walter™ Sounds Card

This card provides a selection of sounds from the books. Start by scanning the activation icon on top every time you use the card. A bonus Walter™ song is played when the activation icon is scanned.

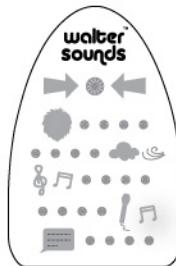

Warranty

There is a limited warranty valid for one year from date of purchase which covers mechanical faults only. Repairs for damage caused by negligence or misuse are not covered by the warranty and may be charged.

THE WARRANTY IS ONLY VALID IF REGISTERED WITHIN FOUR WEEKS OF DELIVERY.

The easiest way to register is online at www.ETlearning.com/warranty

Online registration also gives you a free 1-month extension on your warranty. If you do not have Internet access, you can complete the warranty card and return it to your local distributor.

Please see the Terms and Conditions of Warranty provided in this manual.

Caring for Walter™

- Walter™ is not a toy and should only be used with adult supervision.
- Walter™ is a sensitive electronic device with an optical scanner which should not be dropped, used or stored in direct sunlight or sandy or dusty conditions, or exposed to extremes of temperature, or immersed in any fluids. If Walter™ is damaged as a result of any of these circumstances, the warranty will not be valid.
- Do not use Walter™ in excessively humid conditions or subject it to rapid changes in temperature as the accumulation of condensation in the electrical circuitry may cause it to fail.
- When changing batteries, use caution discarding the old batteries. Do not burn them as they may explode.
- Remove the batteries if you do not plan to use Walter™ for an extended period of time.

Troubleshooting

Walter™ does not turn on:

- Check that the SD card is inserted.
- If you are using the power supply provided, check that it is properly connected and plugged into the power outlet.
- If you are using batteries, check that the batteries are new/have sufficient charge and are placed in the correct polarity.
- Check that the battery compartment is properly closed.


Walter™ turns on but there is no sound when an icon is scanned:

- Check that the volume is turned up.
- Check that Walter™ has been activated for that book by scanning the icon on the title page. This has to be repeated every time a new book is selected.
- Ensure that the book is placed flat on the table or floor, and that the pen is slowly scanned across the icon, and not pressed onto the page.

- If there is still no sound, re-synchronize the pen with the base unit:
 - ♦ On the base unit, press ► and hold for 10 seconds.
 - ♦ When the blue light on the base unit is flashing, scan this icon 
 - ♦ The lights on the base unit and pen will both flash blue to show that synchronization is in process.
 - ♦ Once complete, the lights will stop flashing and will remain blue.
 - ♦ If the lights flash purple, synchronization has failed, and the process needs to be repeated.
 - ♦ To test if synchronization was successful, press the volume button on the pen and the base unit should beep.

Walter™ is still not working:

- If you have followed the above steps and your Walter™ is still not working, use a paperclip to press the reset button on the base of Walter™:

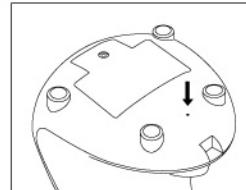

If you have followed all of these steps and your Walter™ still does not operate satisfactorily, please contact your distributor.

Terms & Conditions of Warranty

The warranty certifies that this product is delivered to you free from any defects in materials or workmanship. You are entitled to this warranty subject to the following terms and conditions:

1. This worldwide warranty only applies to the original purchaser and to a product with a valid serial number.
2. The product is warranted for a period of one year from the date of original purchase.
3. During the warranty period, you will be entitled to free repair or replacement of parts arising from defects in materials and workmanship of the product but excluding damage caused by: misuse, negligence, malicious act or accident; excessive heat or humidity; inflow of any liquid, sand or dirt; operation in direct sunlight or excessive physical force sufficient to deform or damage the case.
4. The warranty will be automatically cancelled if the product is modified, tampered with or repaired in any way by a third party.
5. You are required to return the product to your distributor at your cost and with proof of purchase including the original invoice and warranty card.

Notwithstanding anything herein contained, Educational Technologies Limited shall not be liable to the user or any third party whatsoever for any damage, loss, liability or failure to provide any services under this warranty in respect of any act, omission or negligence of any technician, employee or independent contractor of Educational Technologies Limited relating to the performance or purported performance of any obligations under this warranty.

Educational Technologies Limited or its agents or representatives shall not be liable for any loss, injury or damage, including consequential loss, injury or damage arising directly or indirectly out of or in connection with the service, delivery or use of the product.

Personal Data (Privacy) Ordinance

The information which you have provided to us will be used by Educational Technologies Limited in providing services to you in relation to this warranty, and will at all times be governed by the terms of the Personal Data (Privacy) Ordinance of Hong Kong. Please note the following:

1. The personal data supplied by you will be used for the purpose of
 - a. Maintaining our records relating to you and your purchases, in order that we may provide maintenance, warranty or other services to you;
 - b. Sending you information relevant to your products and advertising and promotional materials;
 - c. Determining any amounts of money payable from you;
 - d. Any other purposes thereto
2. Data held by us relating to you will be kept confidential, but we may from time to time provide such information to
 - a. Any government or statutory authority
 - b. Our parent company or any other company forming part of the Times Publishing Group
 - c. Any other person with a duty of confidentiality to Educational Technologies Limited
3. Under and in accordance with the terms of the ordinance, you have the right to
 - a. Check whether we hold data about you and access that data
 - b. Require us to correct any data relating to you that is inaccurate
 - c. Ascertain our policies and practices relating to data and to be informed of the kind of personal data held by us
 - d. Require us not to disclose your personal data to any third party without your specific approval.

For enquiries, please visit: www.ETLlearning.com

Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ETL learning™

10/F, Block C, Seaview Estate,
2-8 Watson Road, North Point, Hong Kong
www.ETLlearning.com

Trademark: Educational Technologies Limited
Product Name: WALTER II
FCC ID: Y67-ETLW2P
FCC ID: Y67-ETLW2S
W2100500001

