

## Understanding & Using Your eKT

EKT has two parts:

1. The key unit (a), which holds the key ring;
2. The belt unit (b), which securely attaches to any belt or utility belt.



To attach belt unit to belt or utility belt:

1. Place the metal clip inward, or towards the user's body, onto the top of the belt.
2. Push down until metal clip fits snugly around the belt and belt is completely within metal clip.
3. When secured, the metal clip should form a loop around the belt to prevent it from sliding up and off the belt.



To attach key unit to belt unit:

1. First make sure the gray button is facing outward, or away from the user's body, and that the key ring is at the bottom of the key unit.
2. Fit the top edge of the key unit into the groove of the belt unit at a slight angle away from the user's body.
3. Push the key unit down and toward the belt unit until it clicks and locks securely in place.



To remove the key unit from the belt unit:

1. Grasp the keys with the inside of your hand; at the same time, using your thumb, depress the gray button and pull keys upward away from the body.





## EKT Alarm Signals

If the key unit and the belt unit are separated by more than 25 feet, three things will occur:

1. Audible alarm signals will sound from both the key unit and the belt unit.
2. The belt unit will vibrate.
3. The key unit will emit a bright 1/2 watt LED warning light.

All three warning signals will continue until the key unit is safely reattached to the belt unit.

## How to Change Batteries

## Product Warranty

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Troubleshooting & Warnings

This equipment generates, uses and can radiate frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the unit on and off, the user is encouraged to attempting to reduce the interference by increasing the separation between the EKT units and the affected device or consult the dealer for technical help.

...er to: <http://www.access.gpo.gov/nara/cfr/cfr-retrieve.html#page1>

Title 47 CFR

Part 15, Section 105

**Caution:** Changes or modifications to EKT's RF hardware that are not expressly approved by EKT, LLC could void the user's authority to operate the equipment.

## Product Support Information

**ekt**  
3000

## User Manual

## NOTICES OF COMPLIANCE



**ekt**<sup>TM</sup>  
llc

[www.ekt-alert.com](http://www.ekt-alert.com)