

Figure 11
Inside Configuration of the EUT



Figure 12
Inside Configuration of the EUT

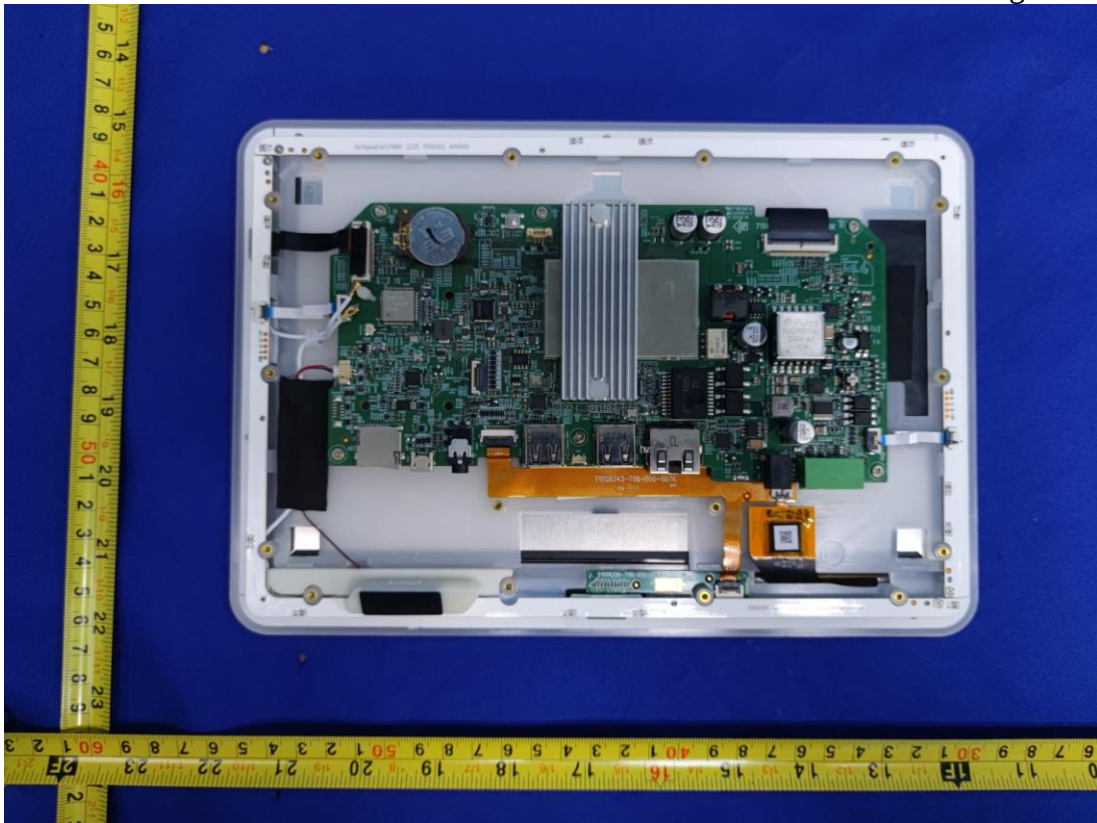


Figure 13
Inside Configuration of the EUT

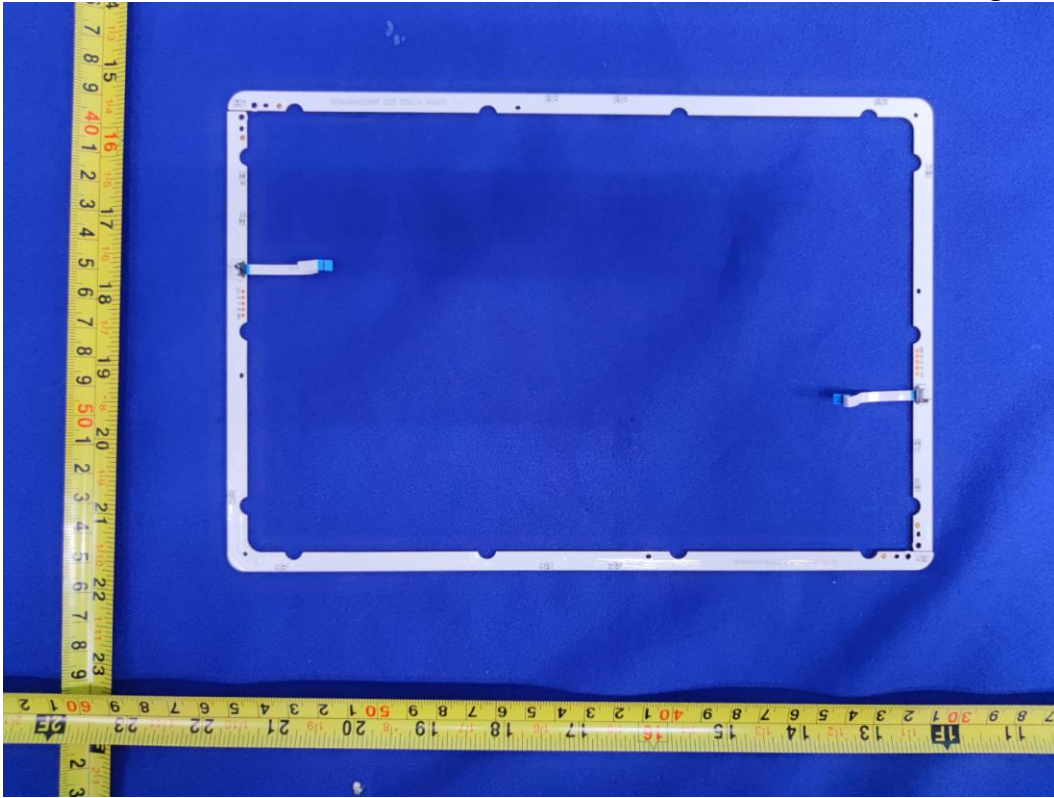


Figure 14
Inside Configuration of the EUT

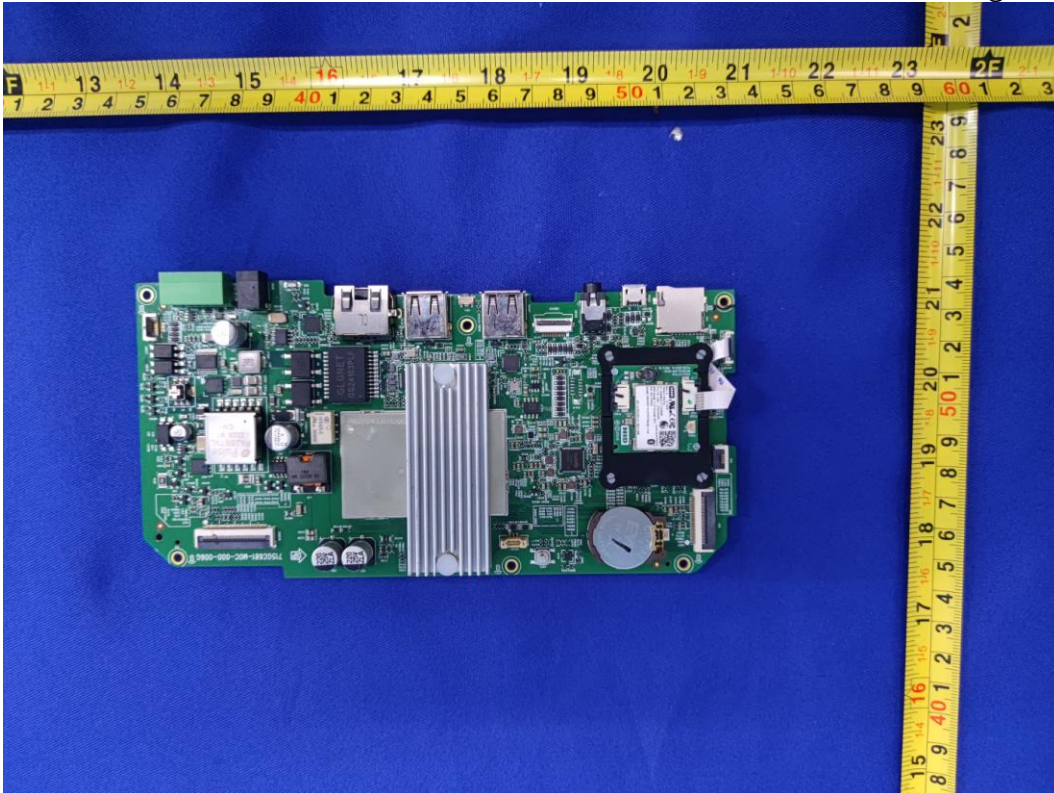


Figure 15
Inside Configuration of the EUT

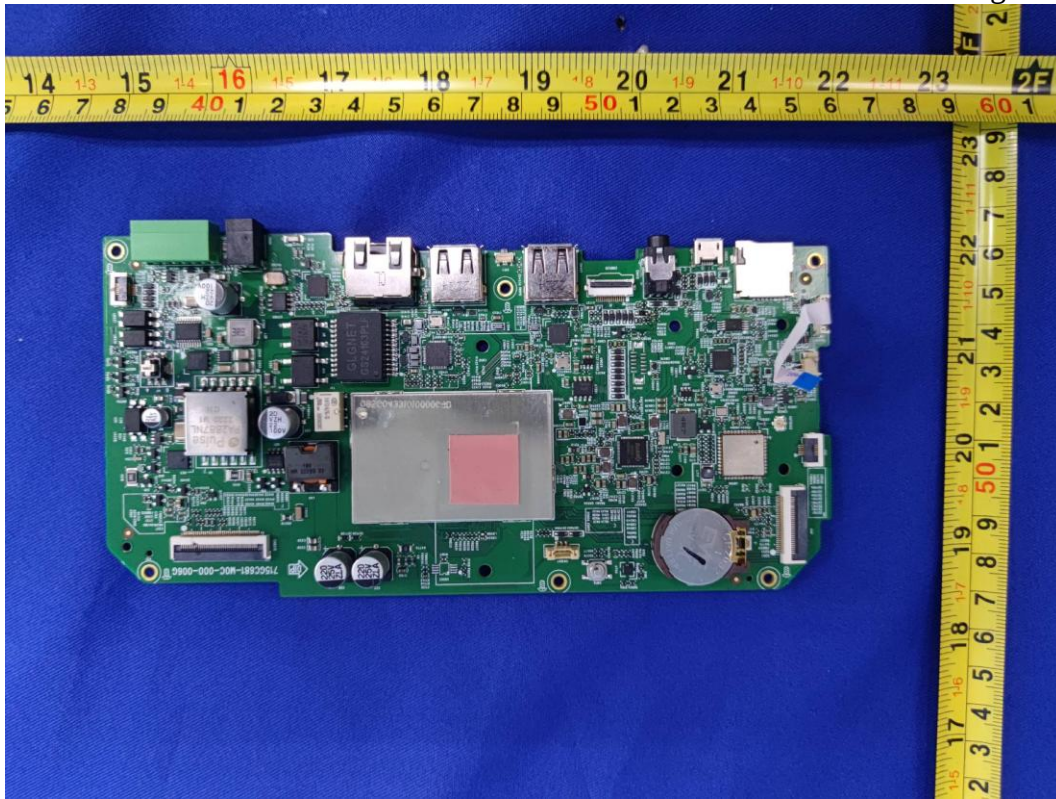


Figure 16
Inside Configuration of the EUT



Figure 17
Inside Configuration of the EUT

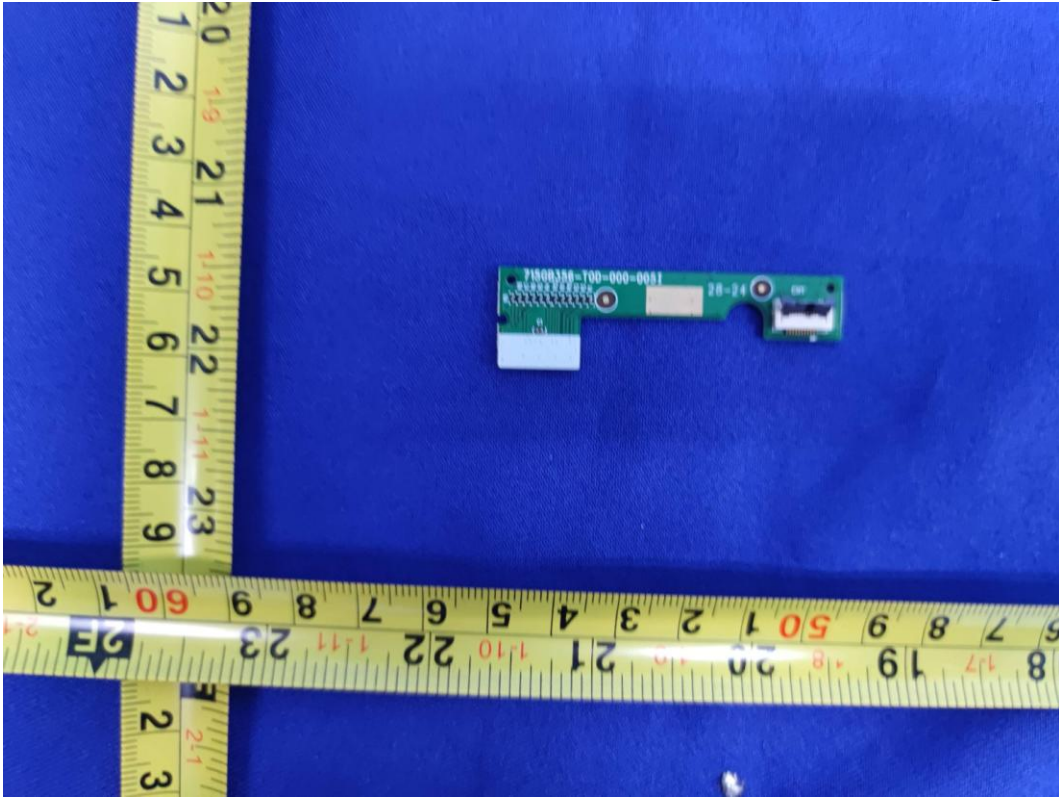


Figure 18
Inside Configuration of the EUT

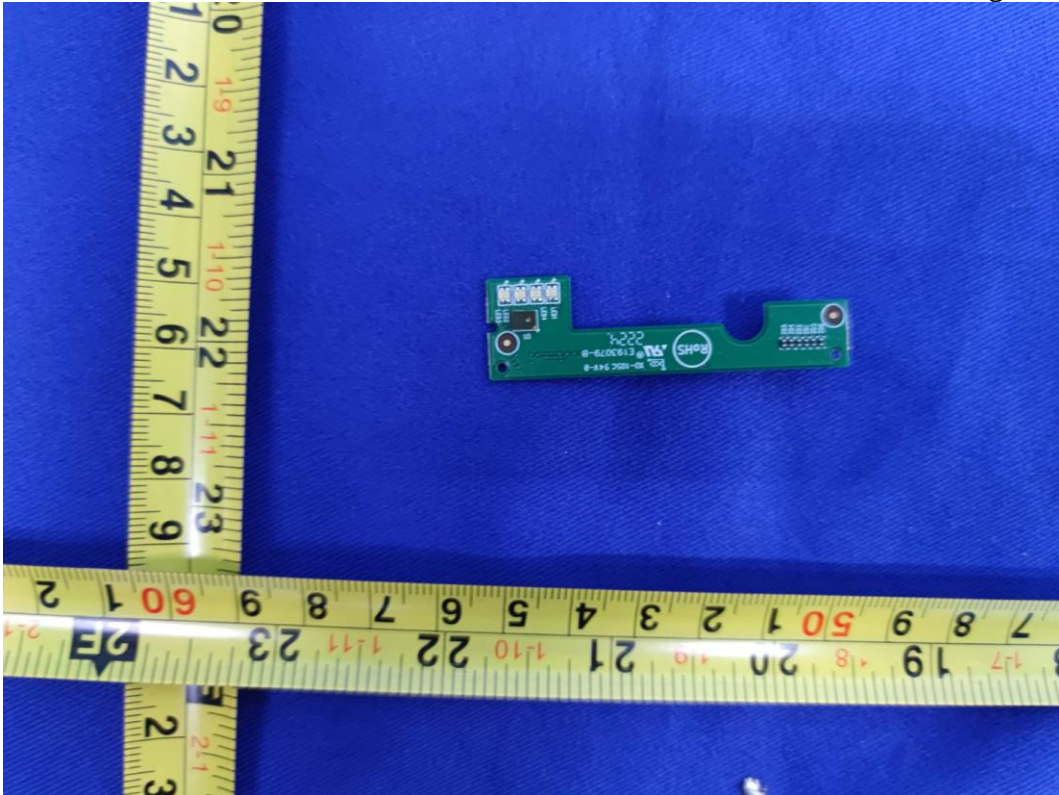


Figure 19
Inside Configuration of the EUT

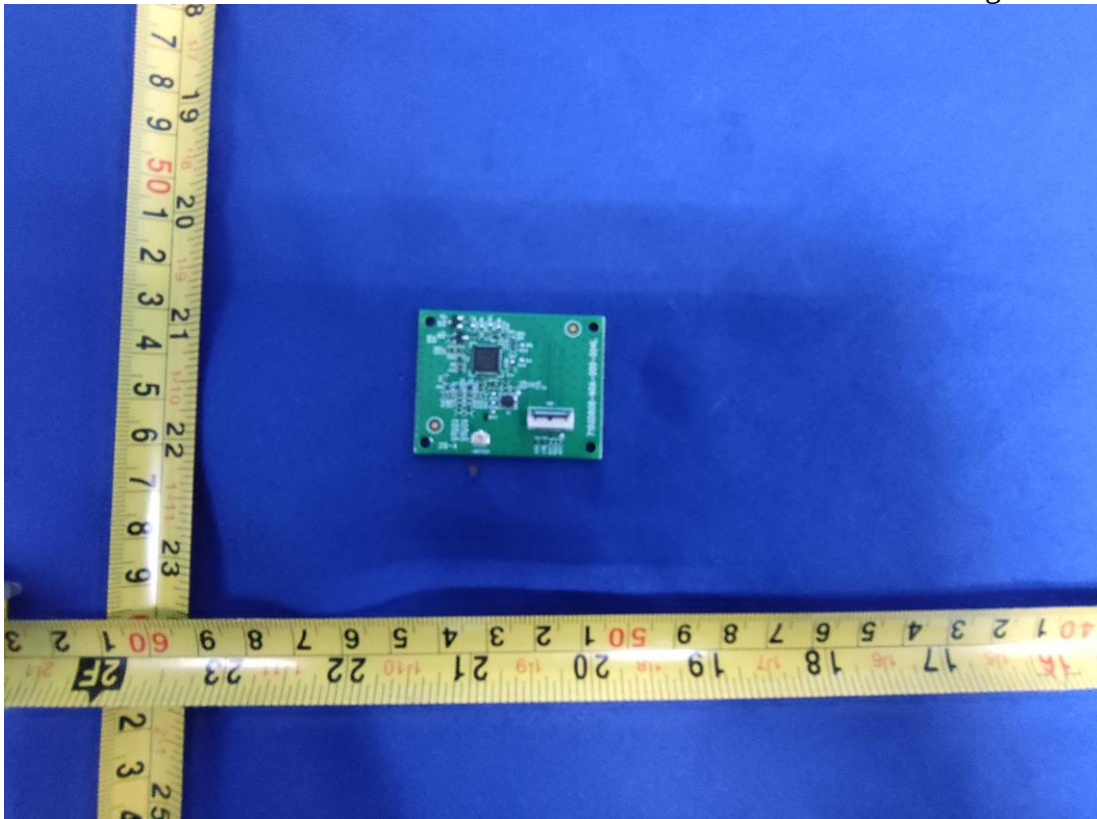


Figure 20
Inside Configuration of the EUT

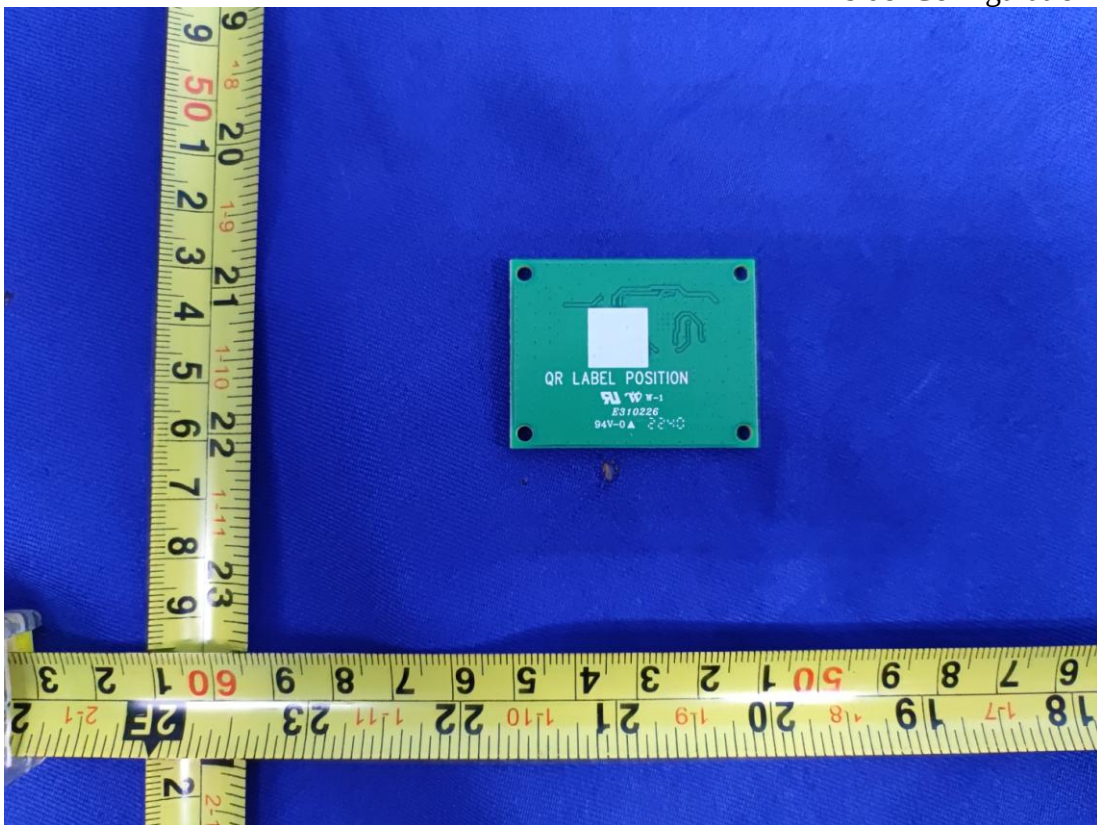


Figure 21
Inside Configuration of the EUT

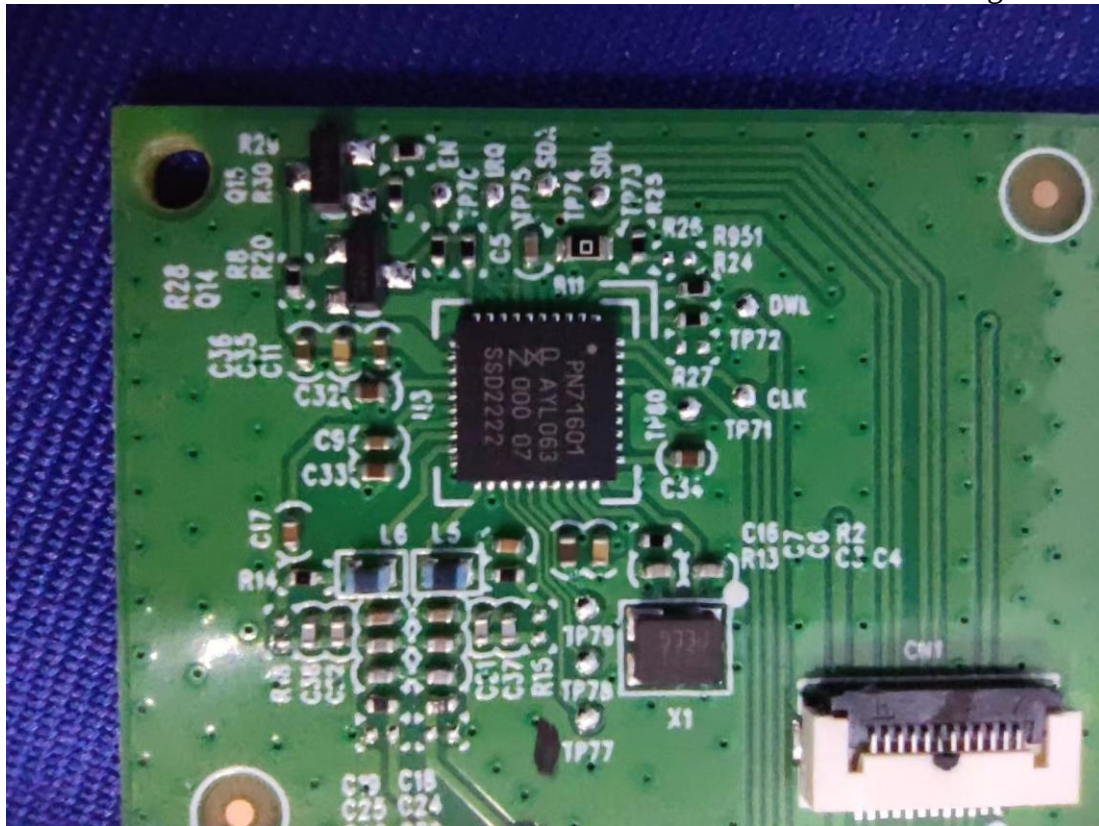


Figure 22
Inside Configuration of the EUT



Figure 23
Inside Configuration of the EUT

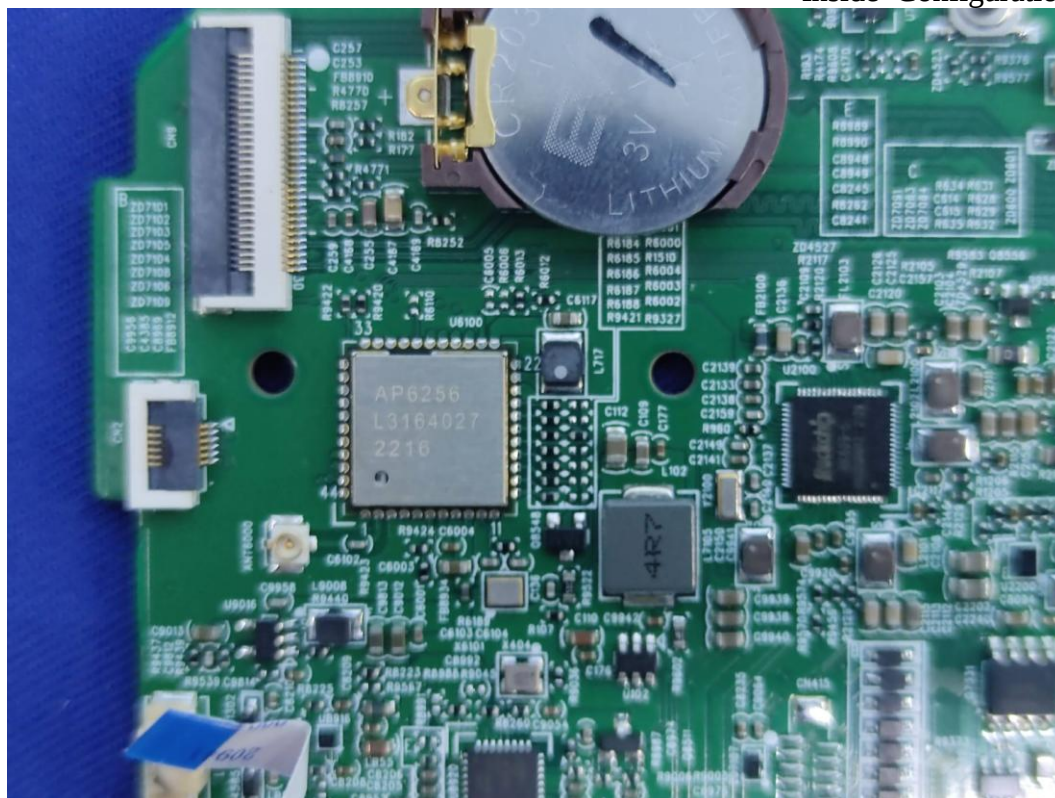


Figure 24
Inside Configuration of the EUT

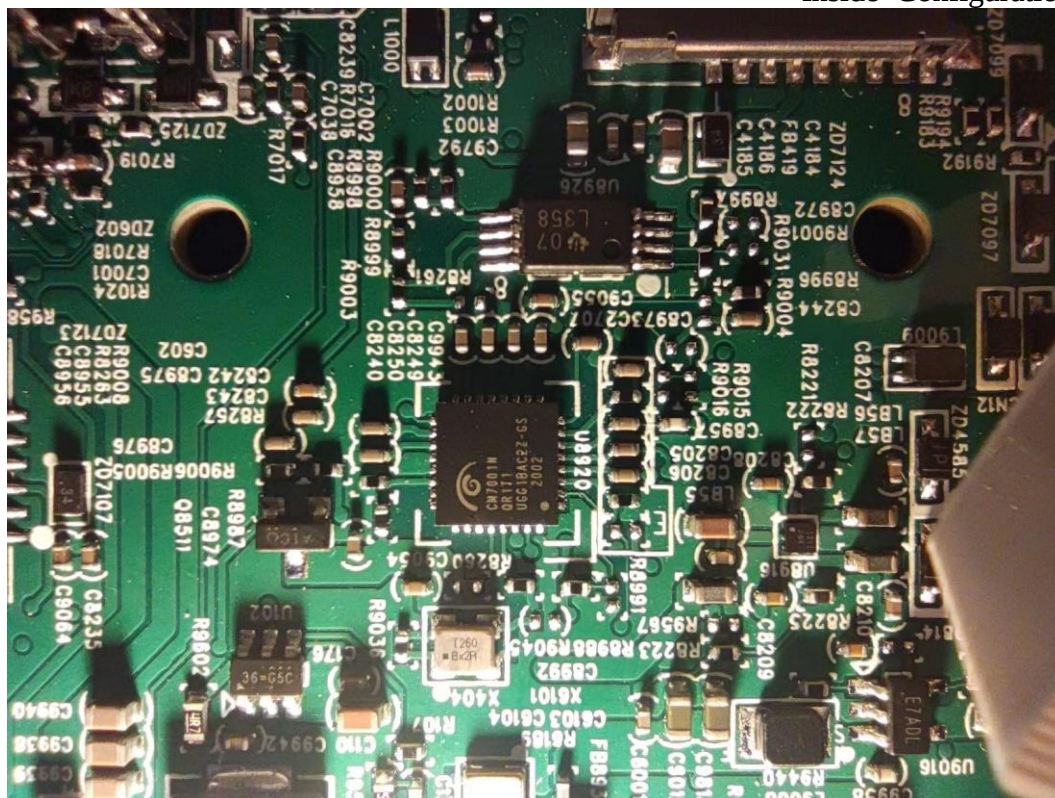


Figure 25
Inside Configuration of the EUT

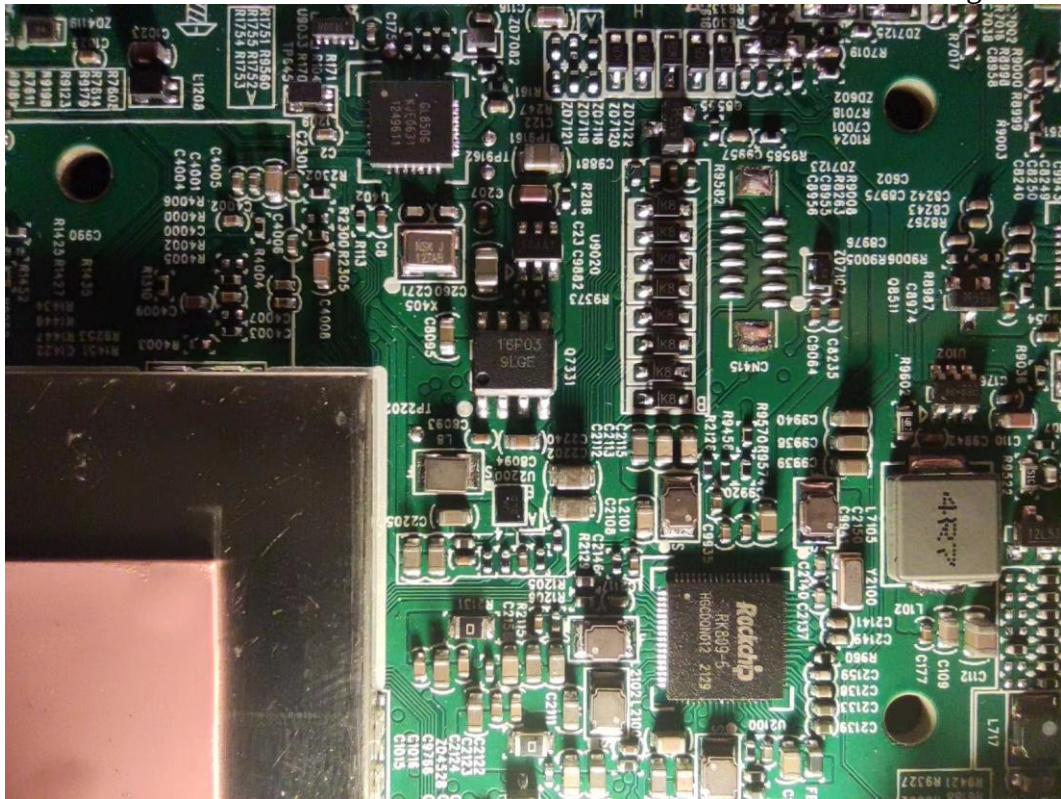


Figure 26
Inside Configuration of the EUT

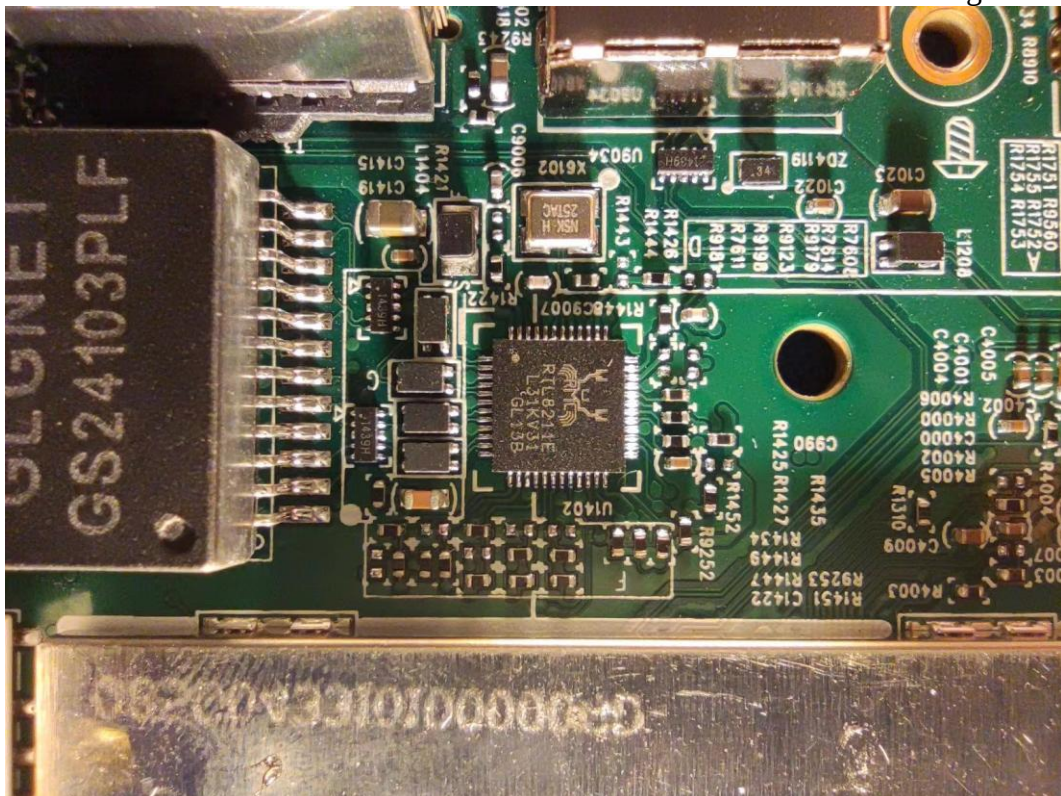


Figure 27
Inside Configuration of the EUT

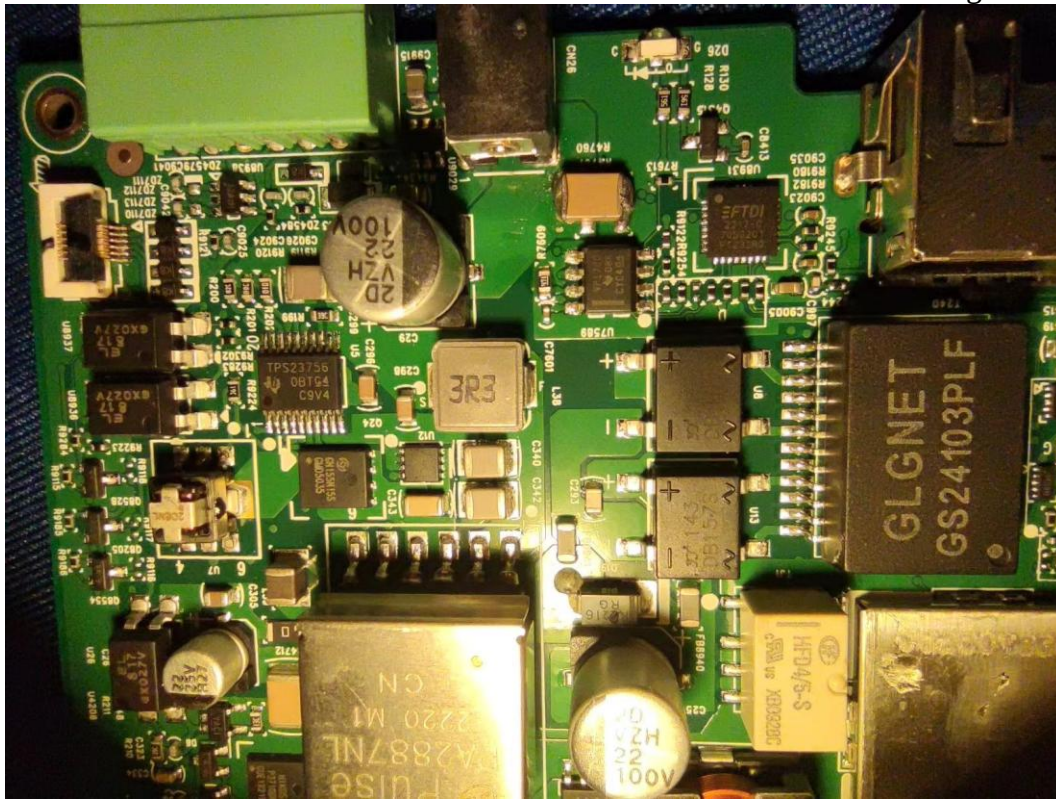


Figure 28
Inside Configuration of the EUT

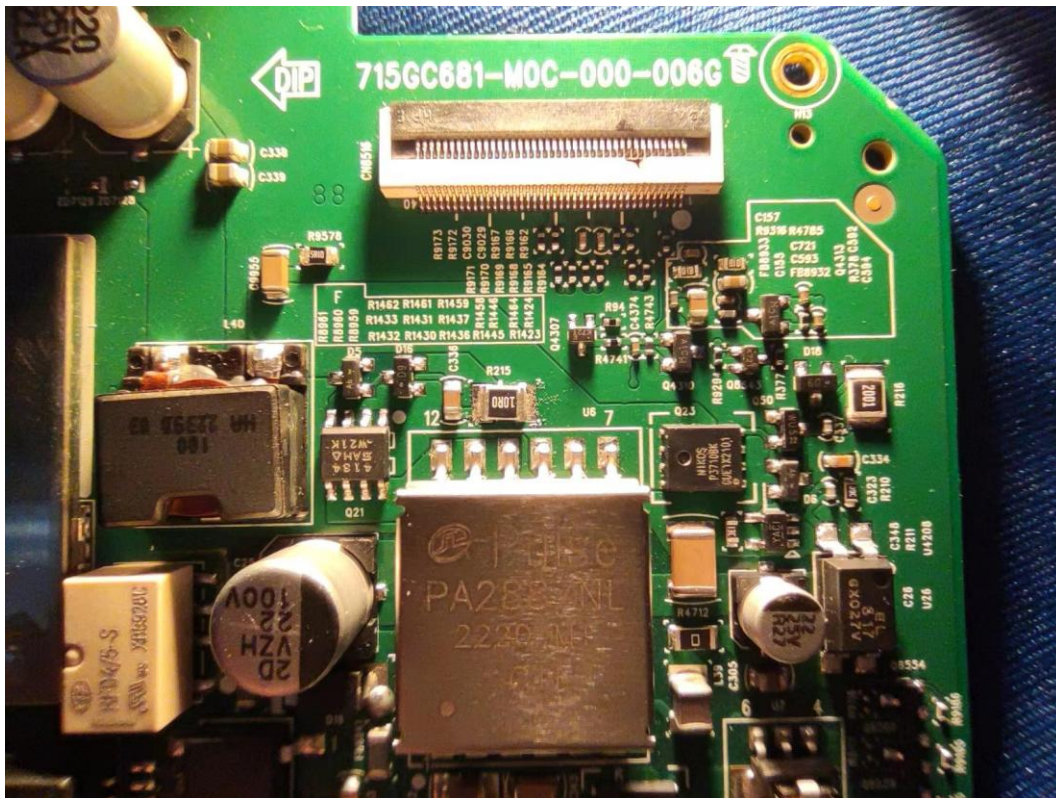


Figure 29
Inside Configuration of the EUT

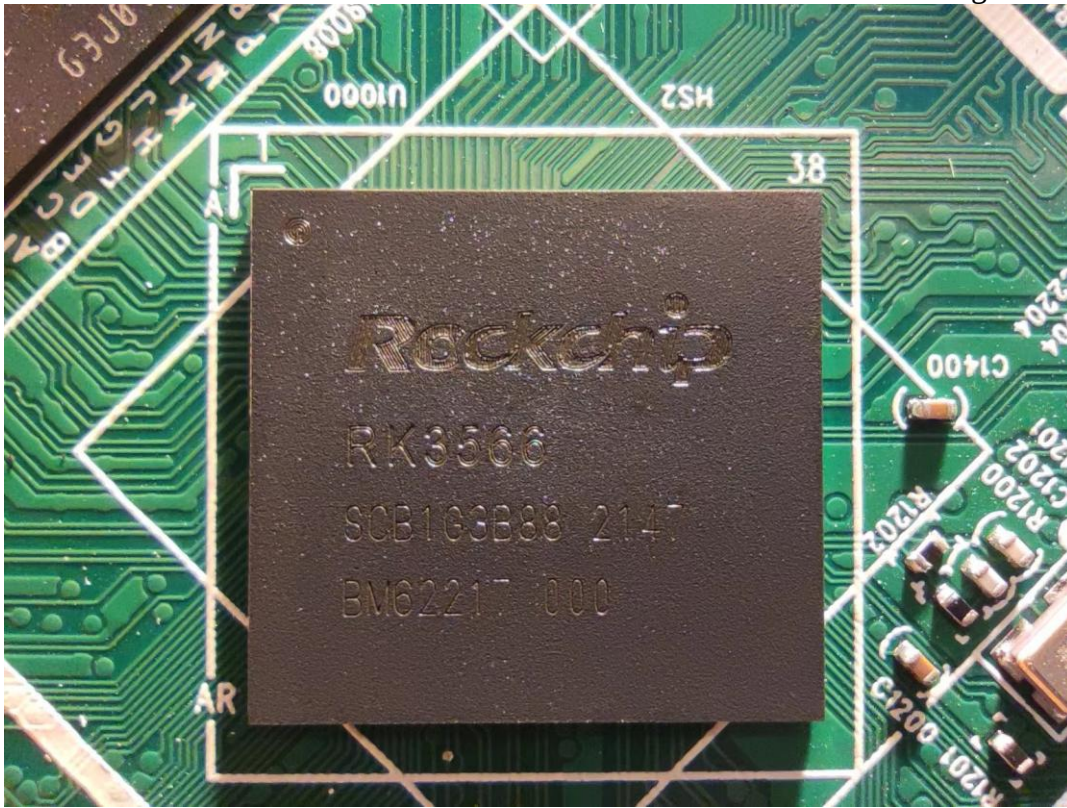


Figure 30
Inside Configuration of the EUT

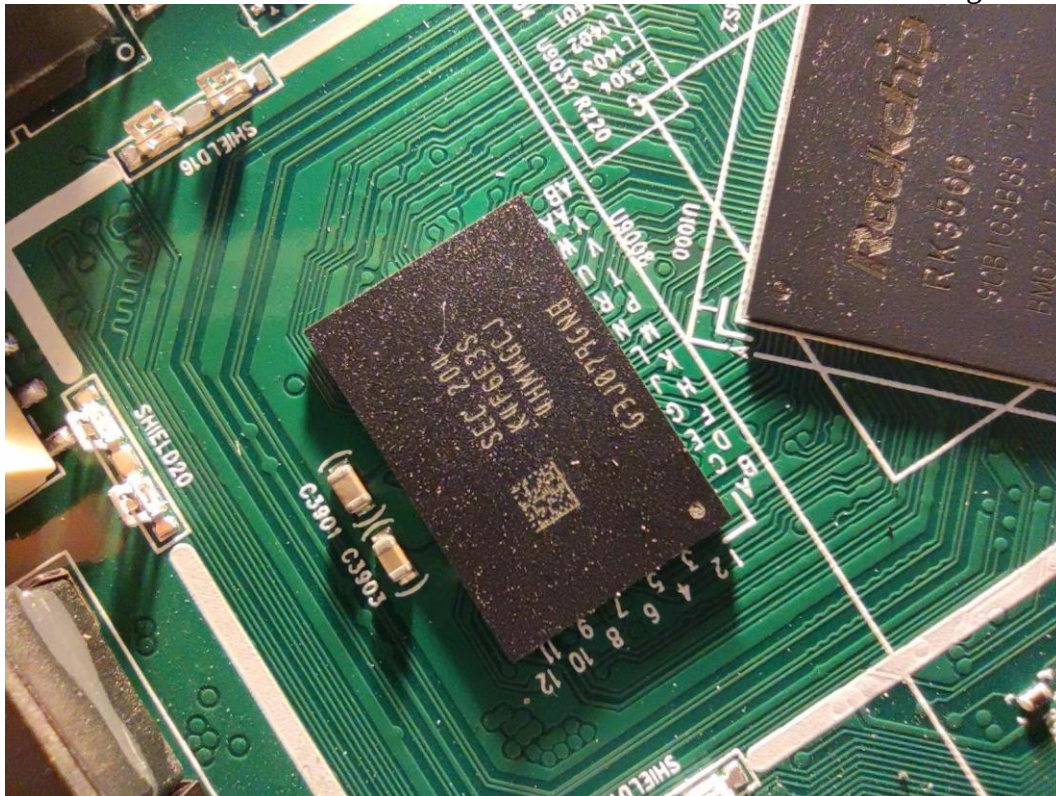


Figure 31
Inside Configuration of the EUT

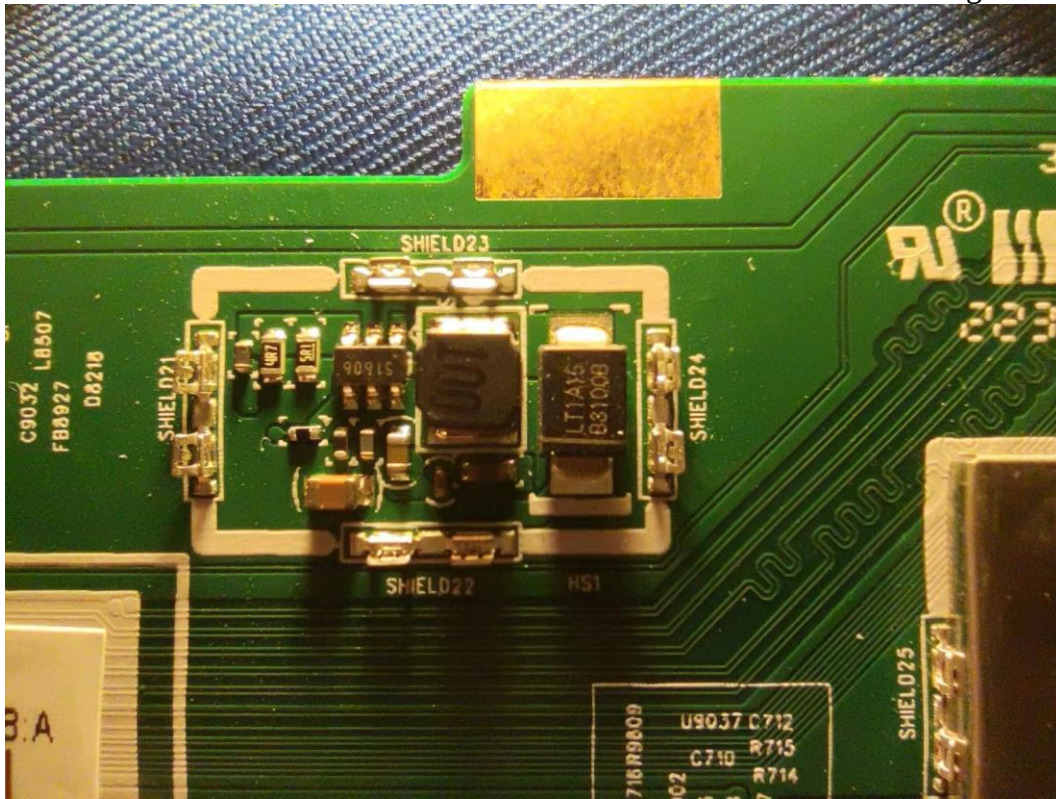


Figure 32
Inside Configuration of the EUT


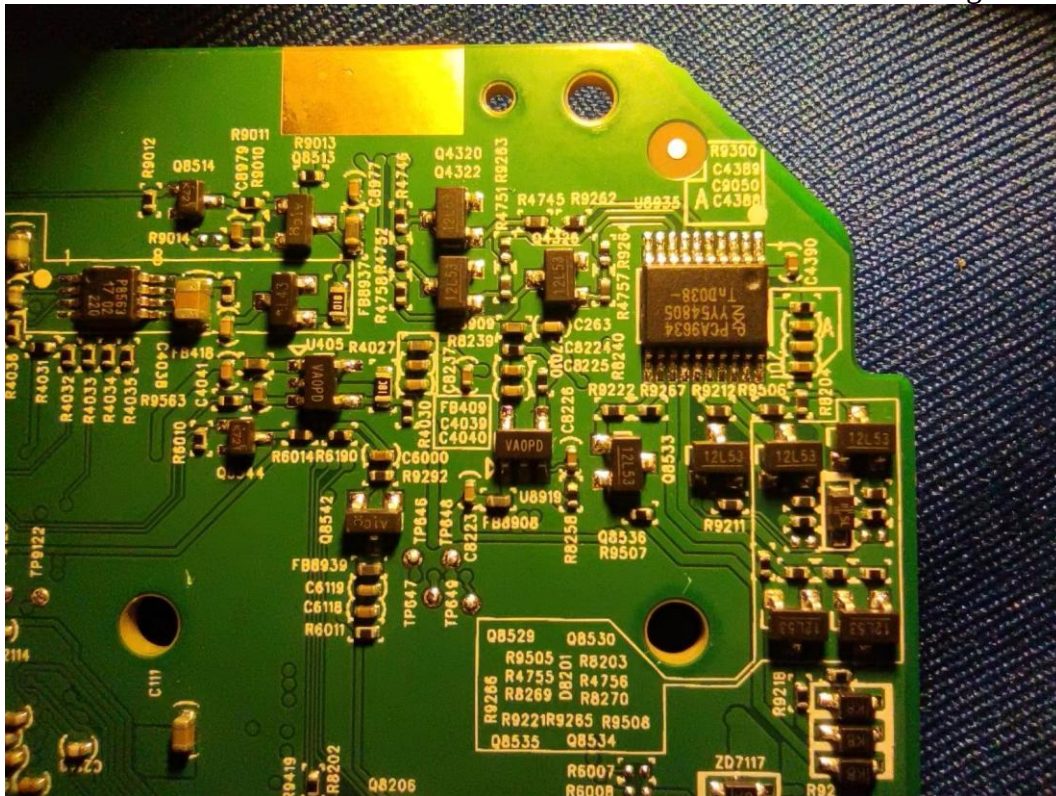


Figure 33
Inside Configuration of the EUT

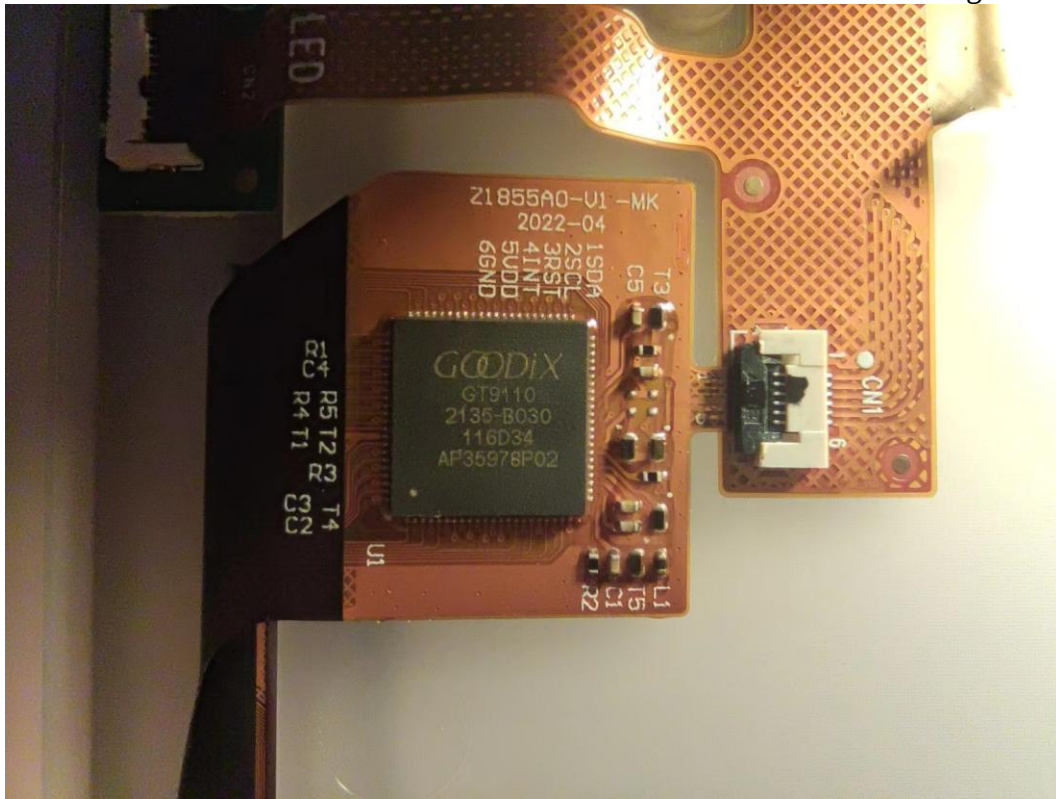

..... THE END