

Figure 7
Inside Configuration of the EUT

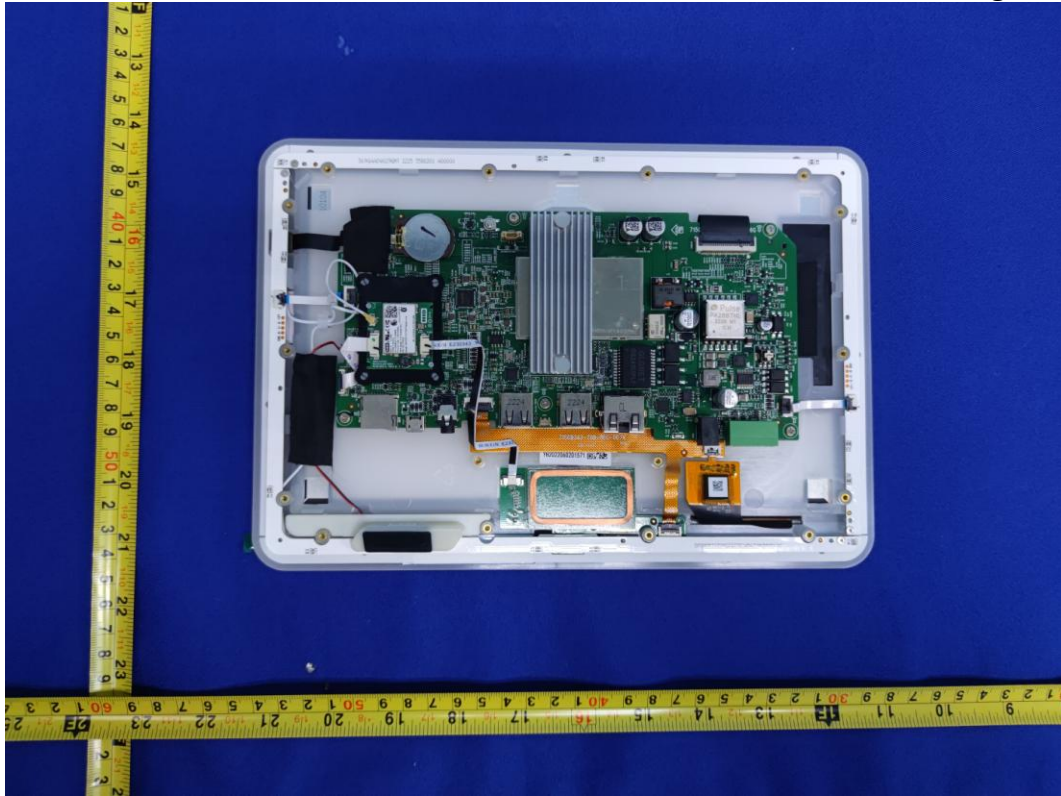


Figure 8
Inside Configuration of the EUT

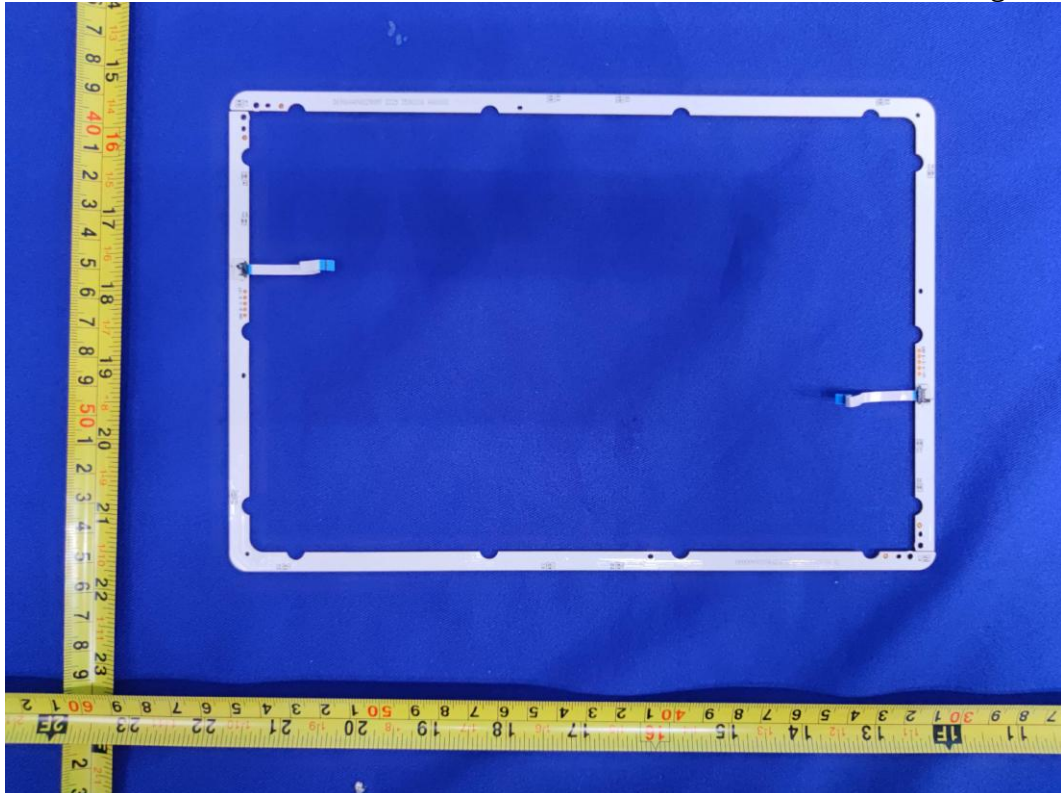


Figure 9
Inside Configuration of the EUT

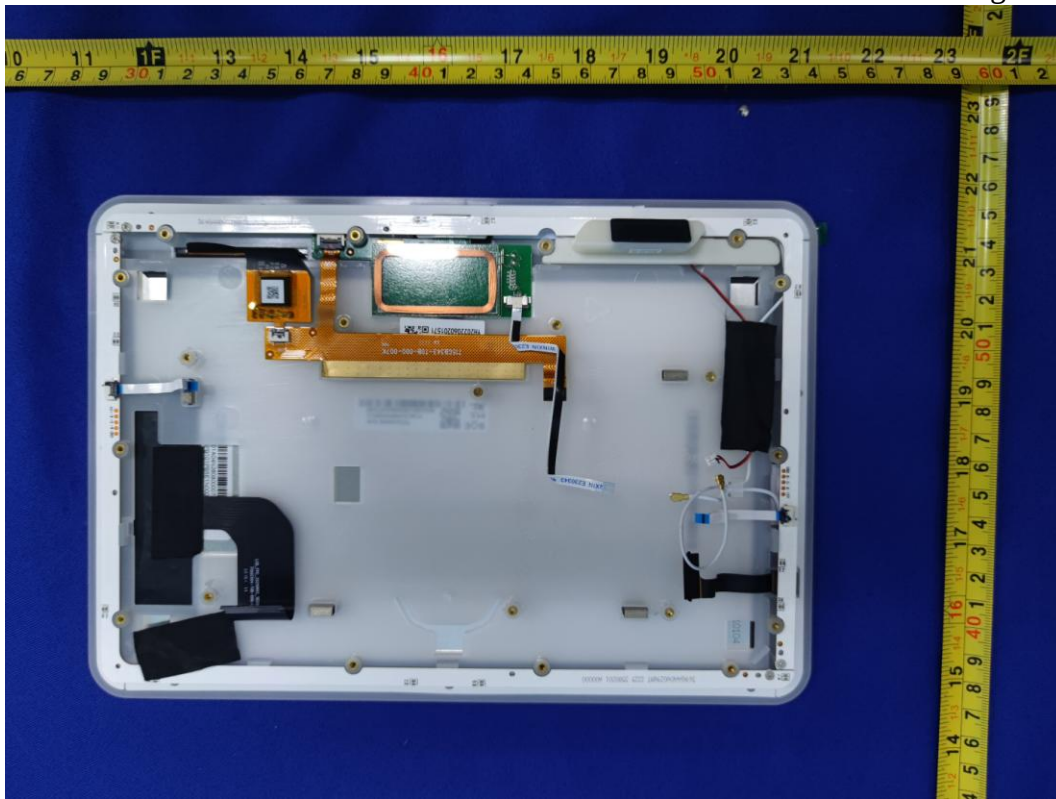


Figure 10
Inside Configuration of the EUT

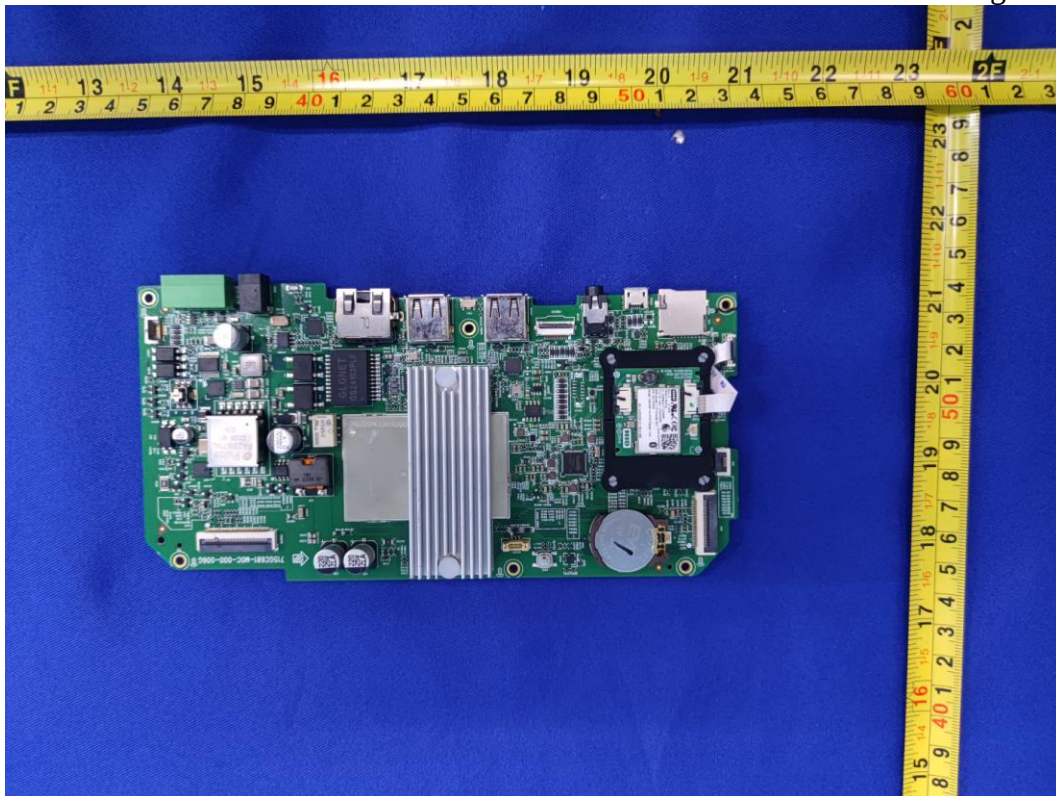


Figure 11
Inside Configuration of the EUT

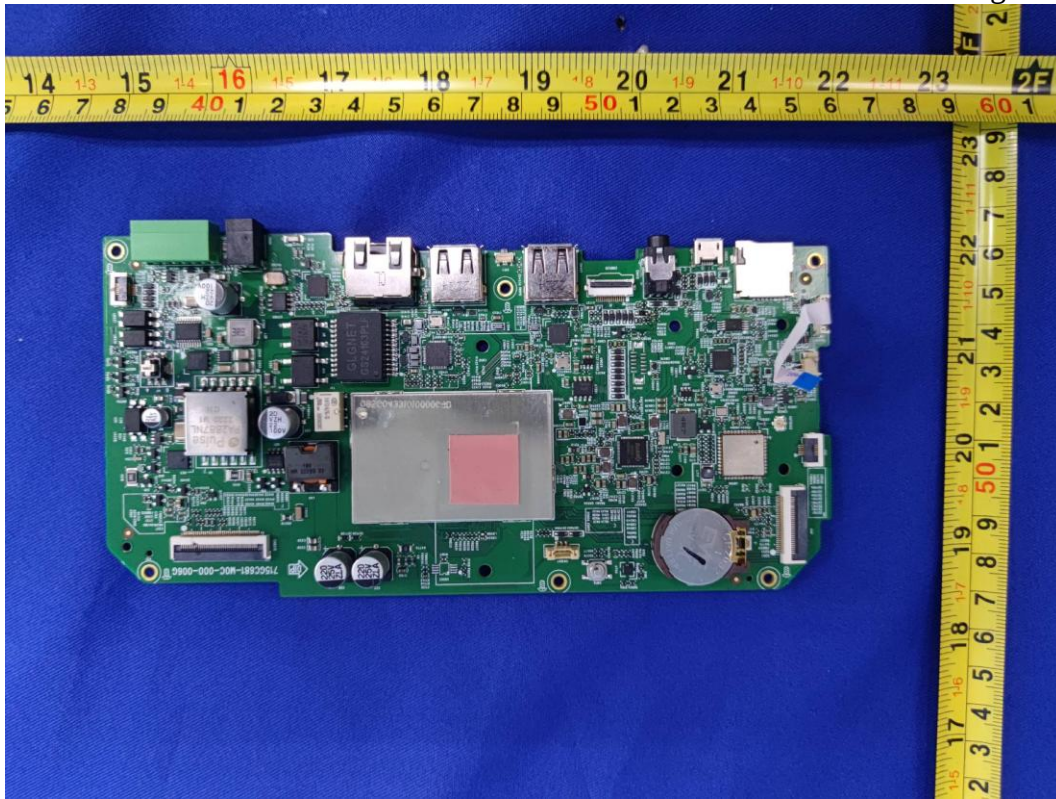


Figure 12
Inside Configuration of the EUT



Figure 13
Inside Configuration of the EUT

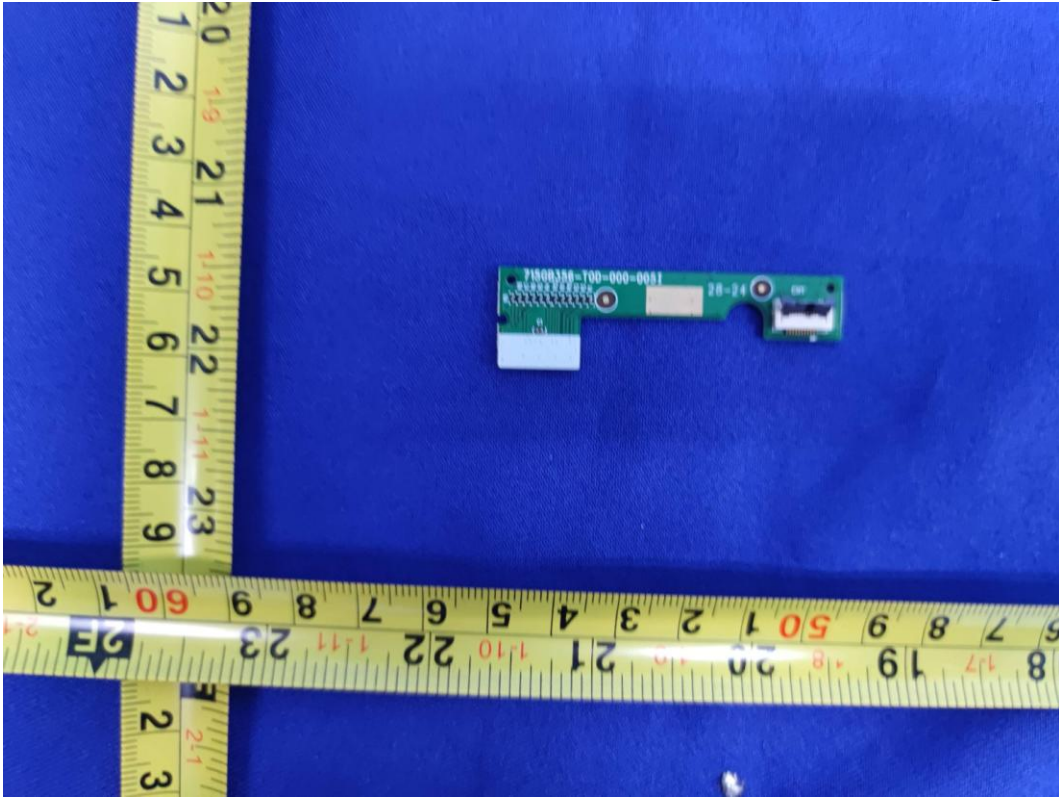


Figure 14
Inside Configuration of the EUT

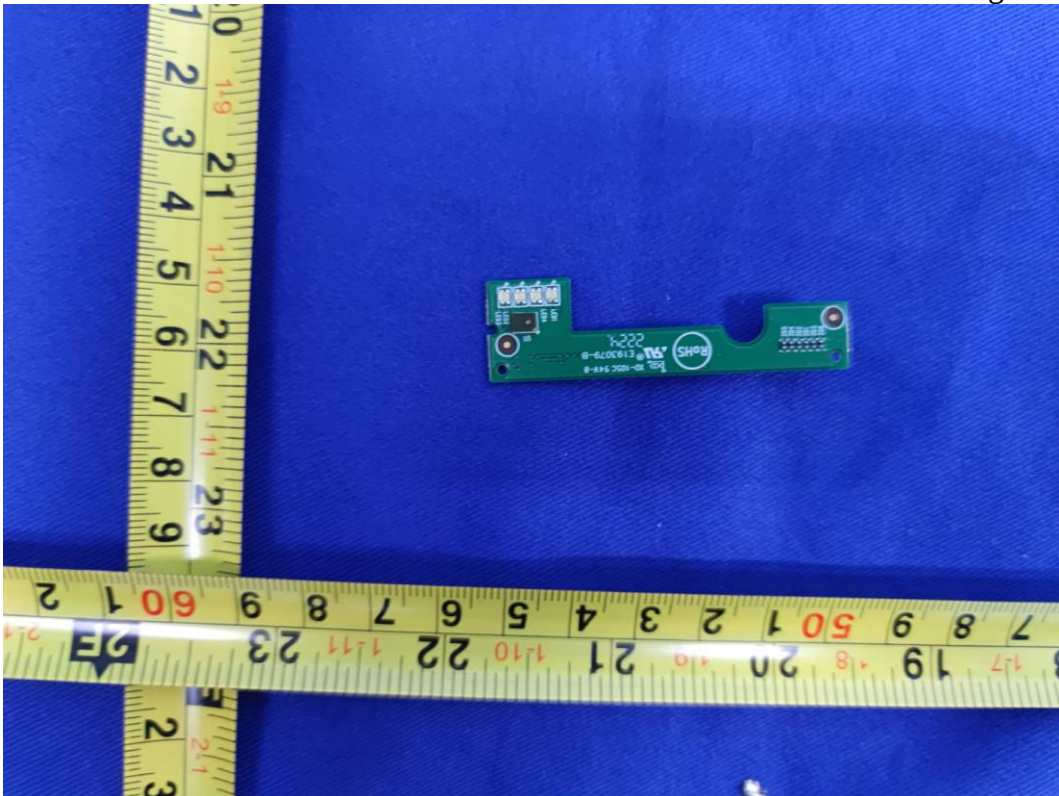


Figure 15
Inside Configuration of the EUT

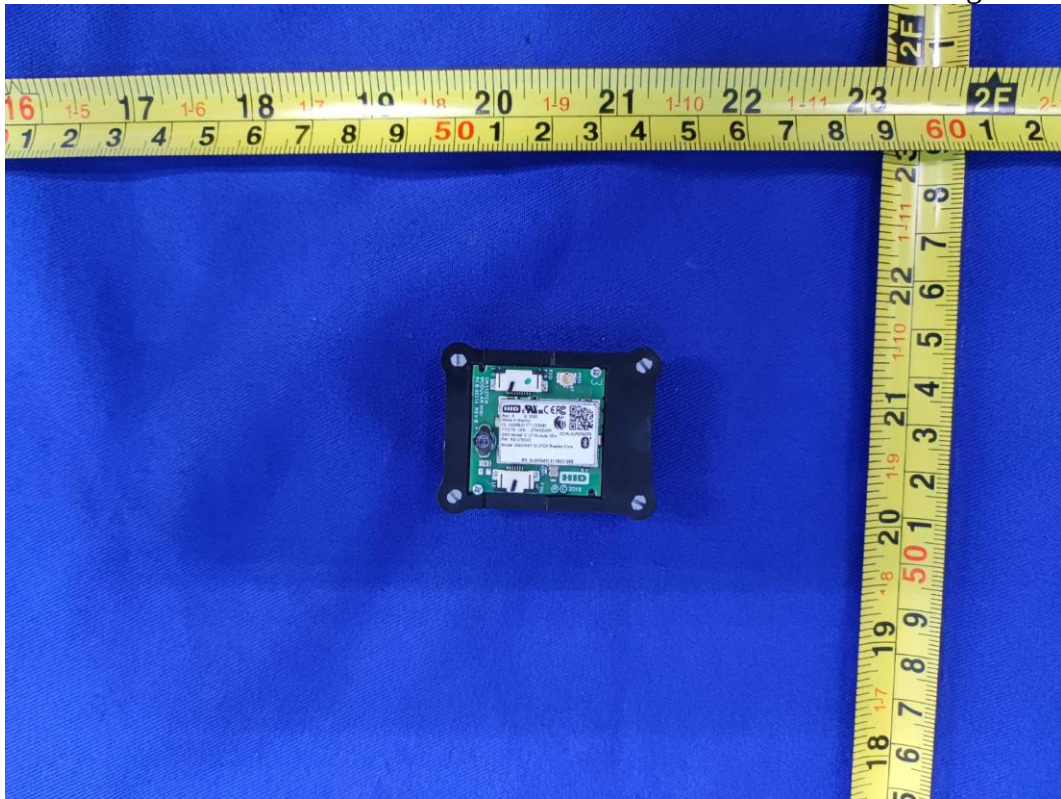


Figure 16
Inside Configuration of the EUT



Figure 17
Inside Configuration of the EUT



Figure 18
Inside Configuration of the EUT



Figure 19
Inside Configuration of the EUT

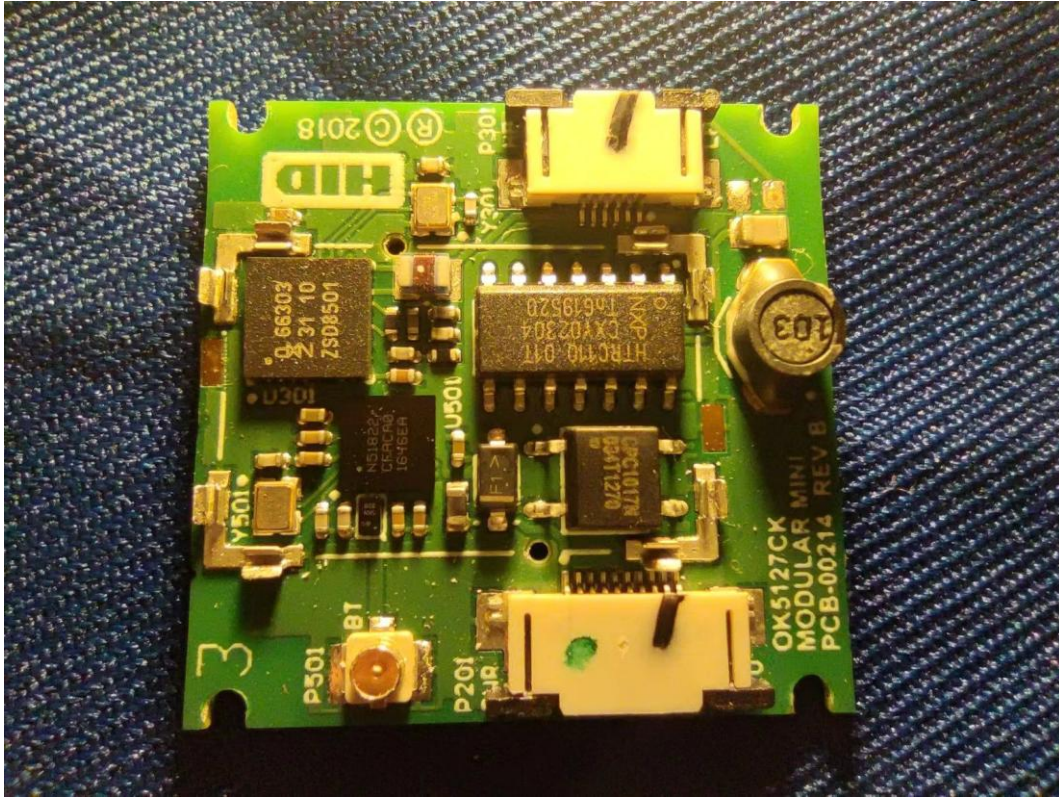


Figure 20
Inside Configuration of the EUT

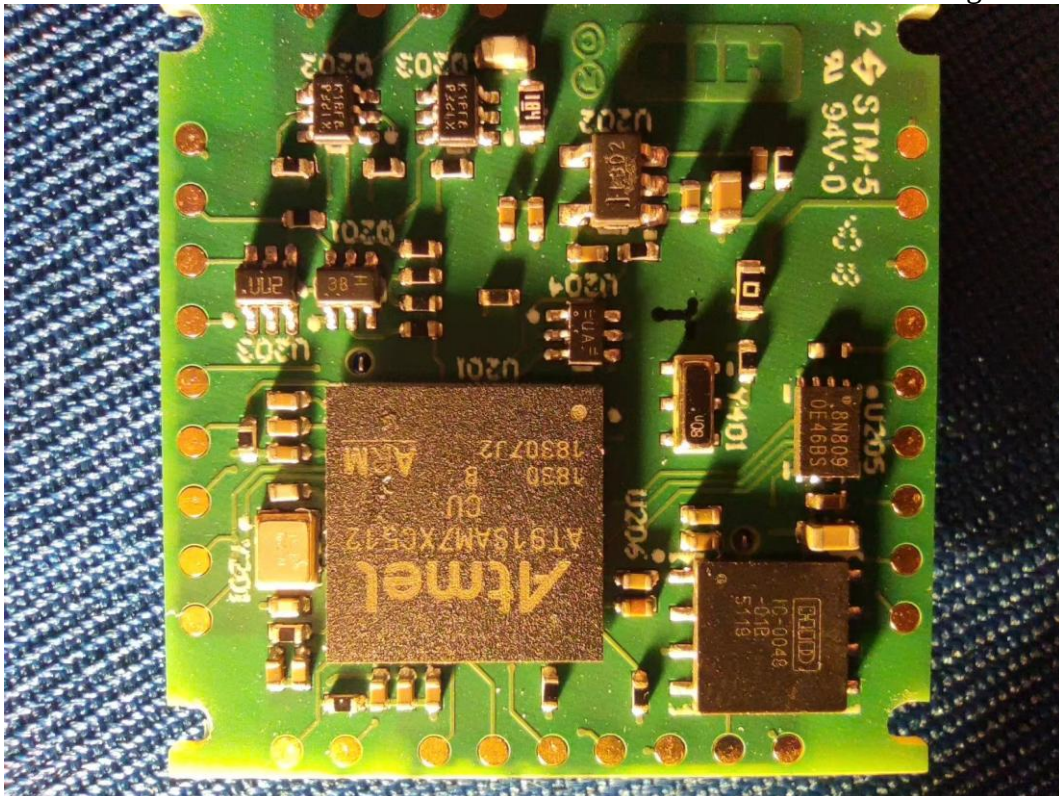


Figure 21
Inside Configuration of the EUT

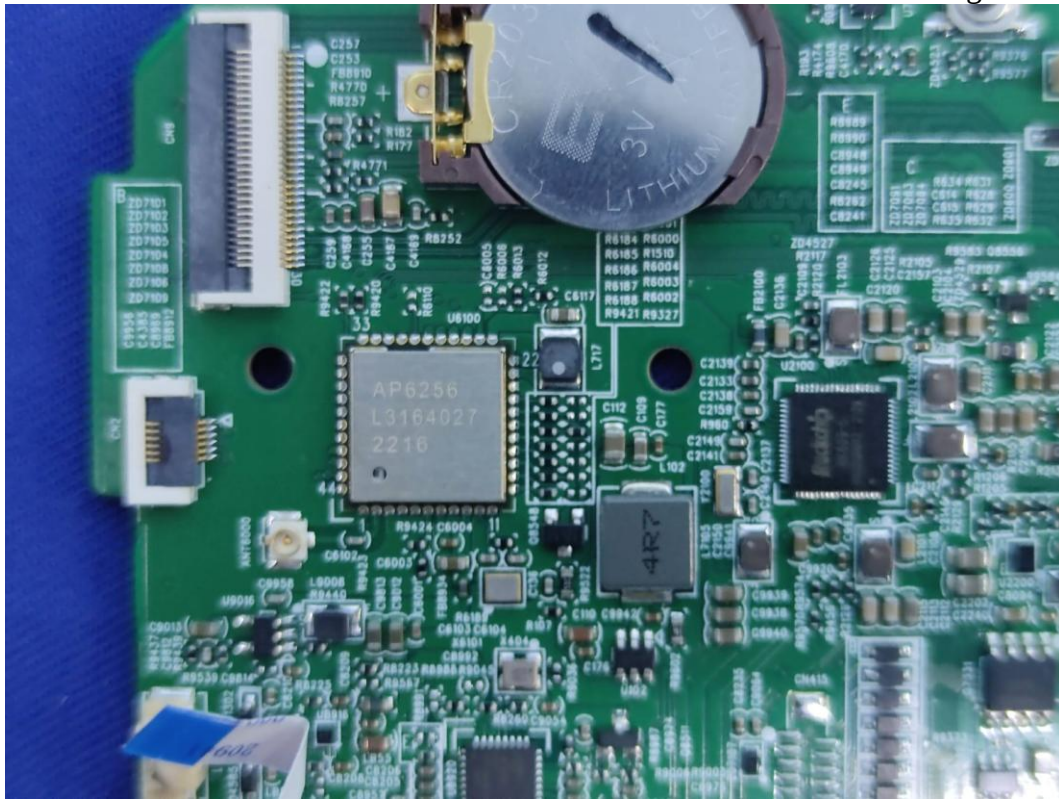


Figure 22
Inside Configuration of the EUT

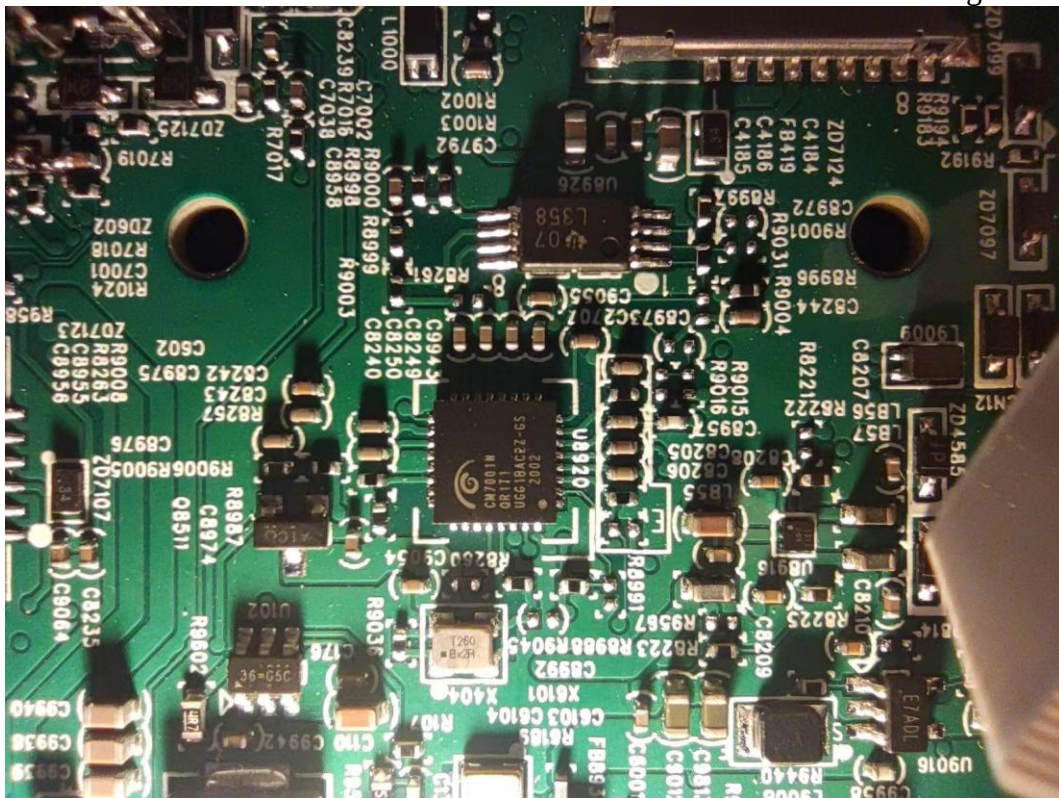


Figure 23

Inside Configuration of the EUT

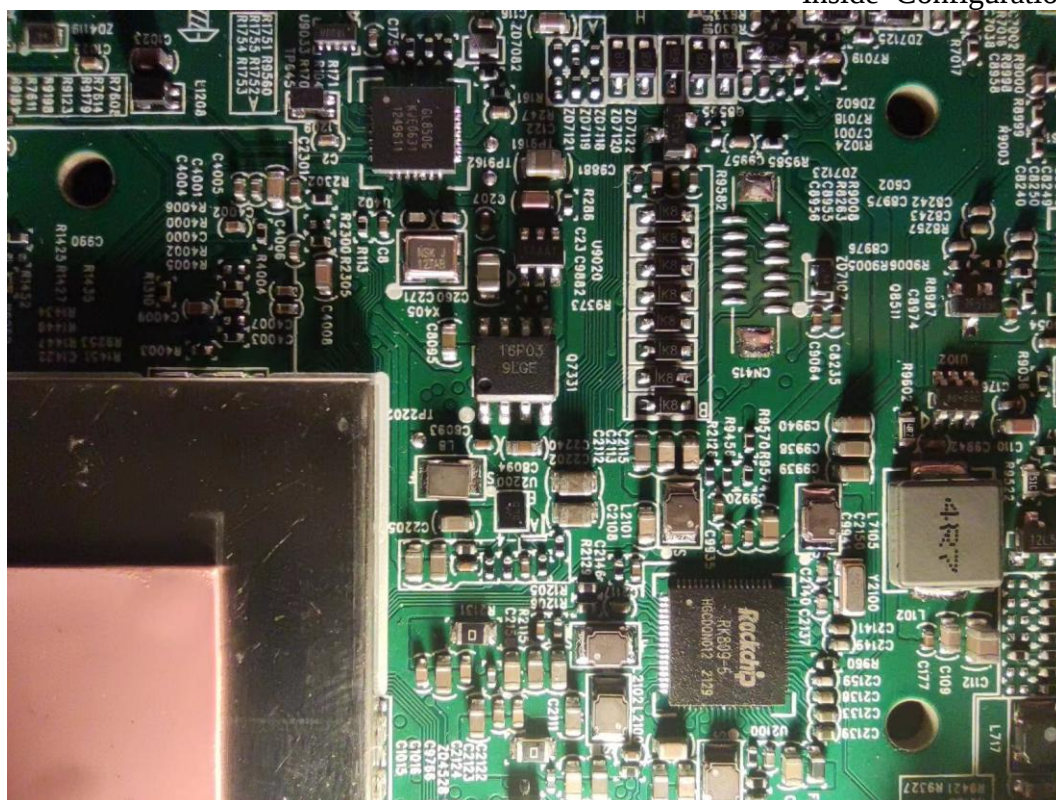


Figure 24
Inside Configuration of the EUT

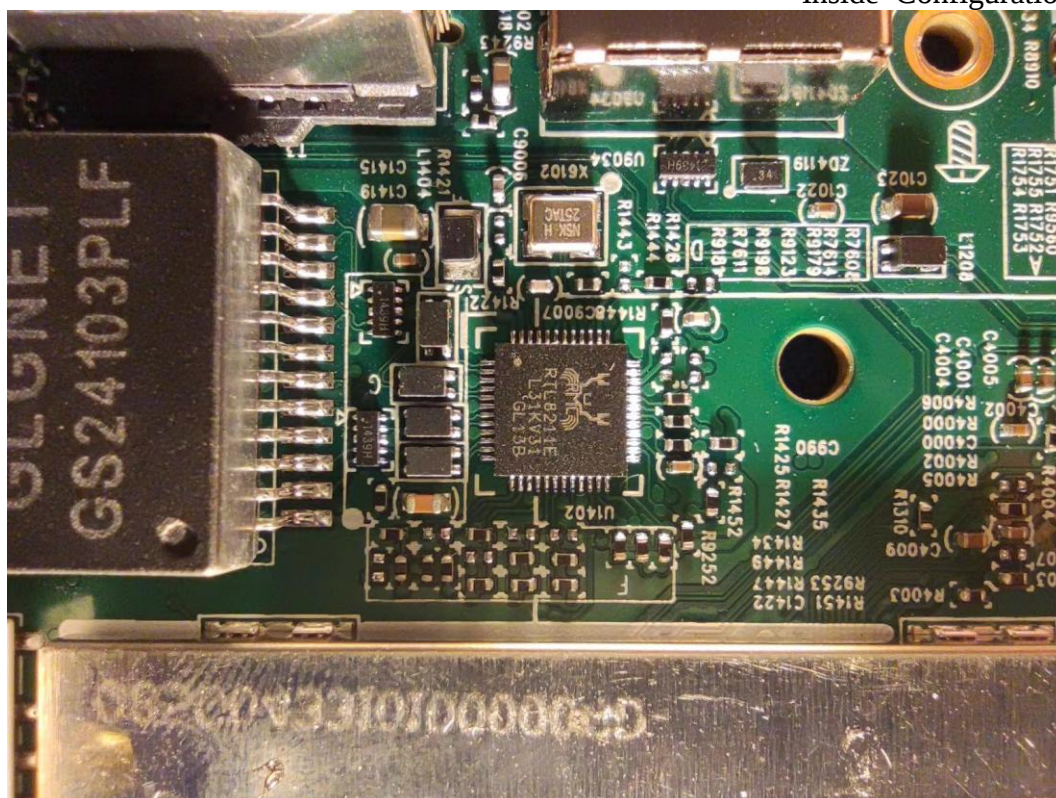


Figure 25
Inside Configuration of the EUT

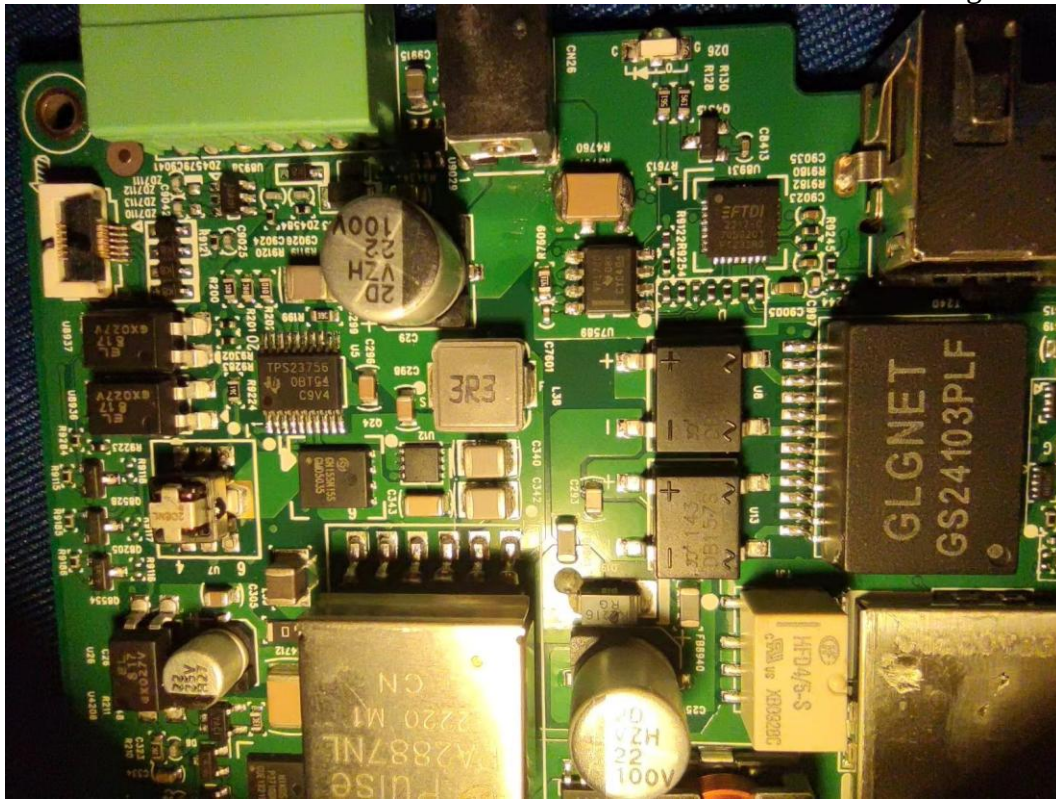


Figure 26
Inside Configuration of the EUT

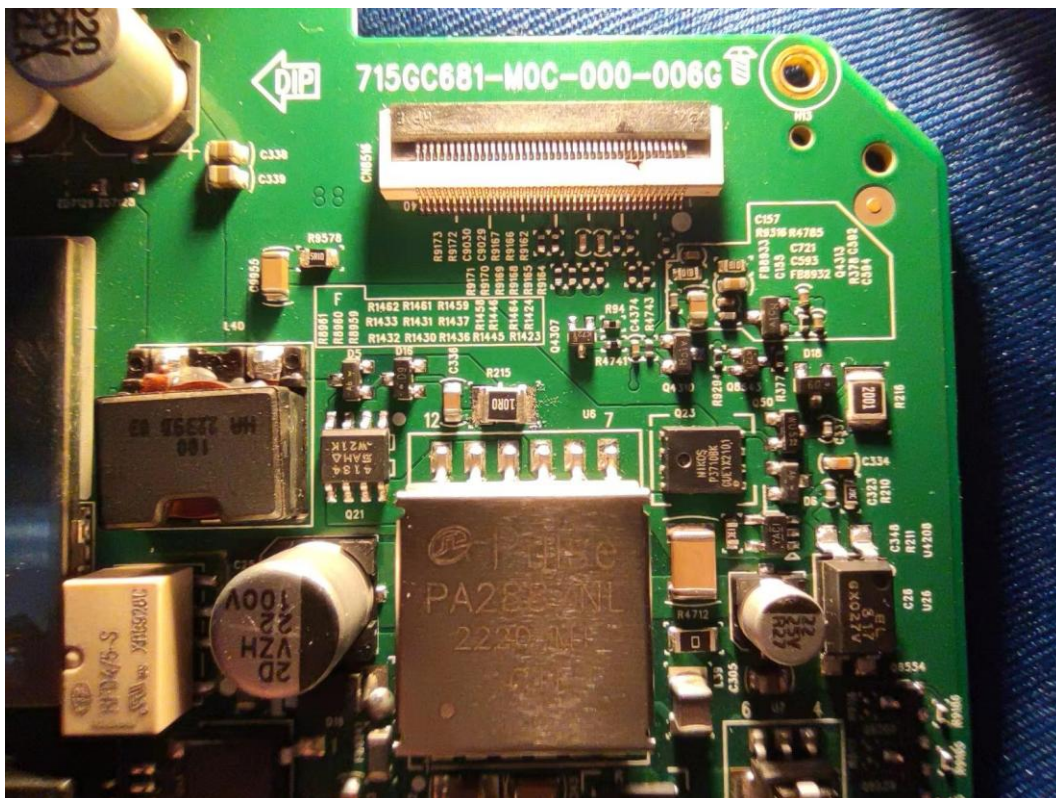


Figure 27

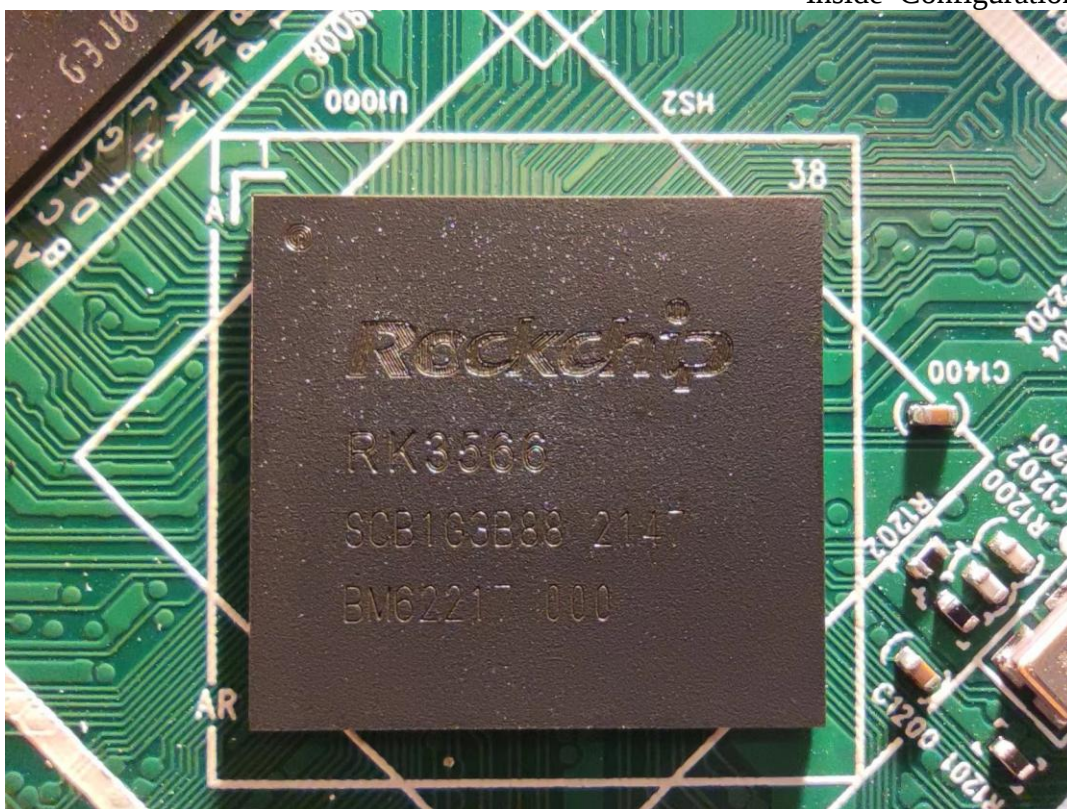


Figure 28

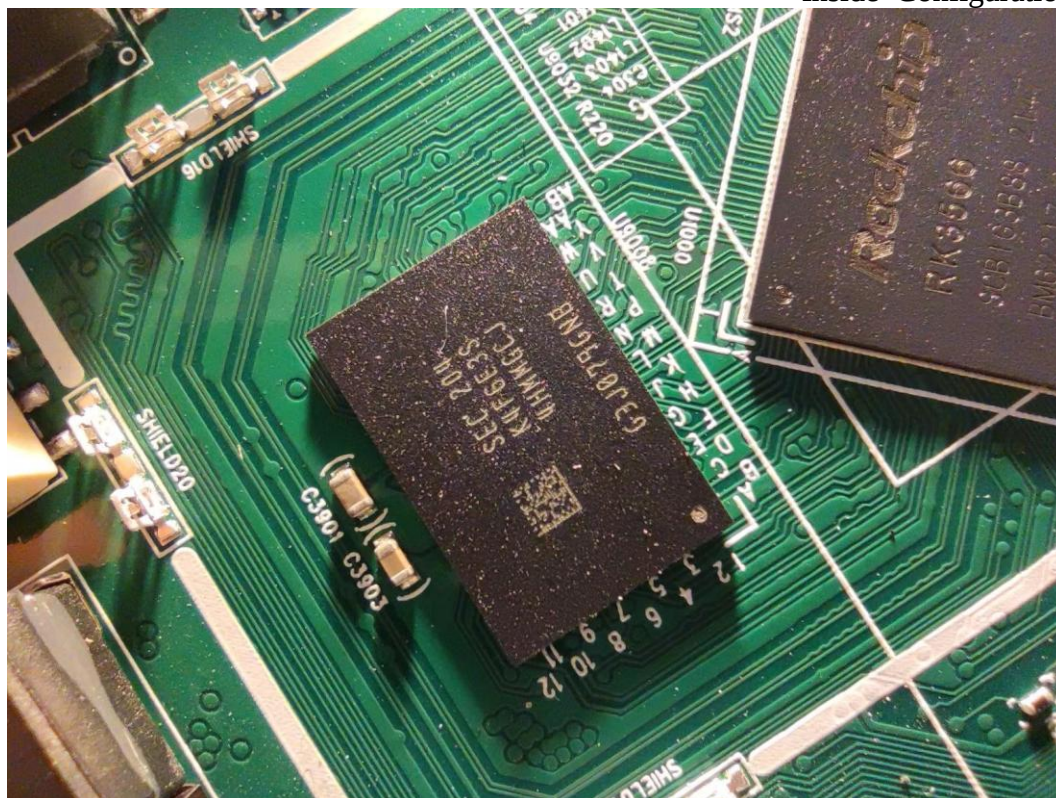


Figure 29
Inside Configuration of the EUT

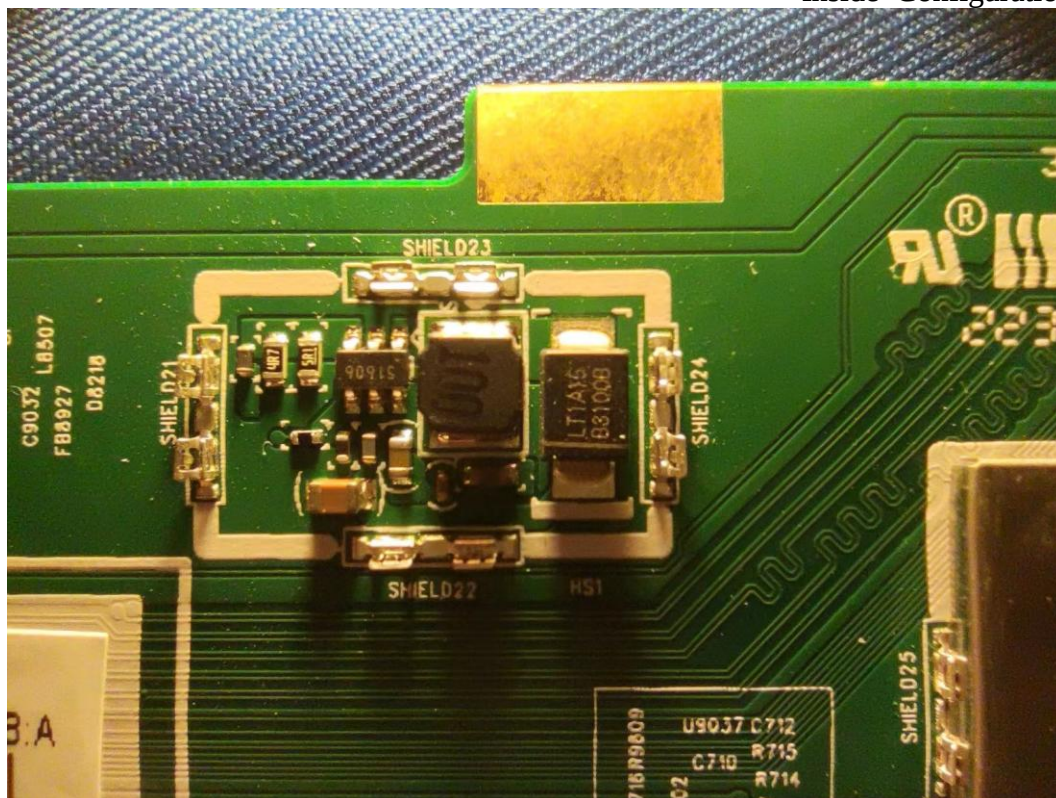


Figure 30

Inside Configuration of the EUT


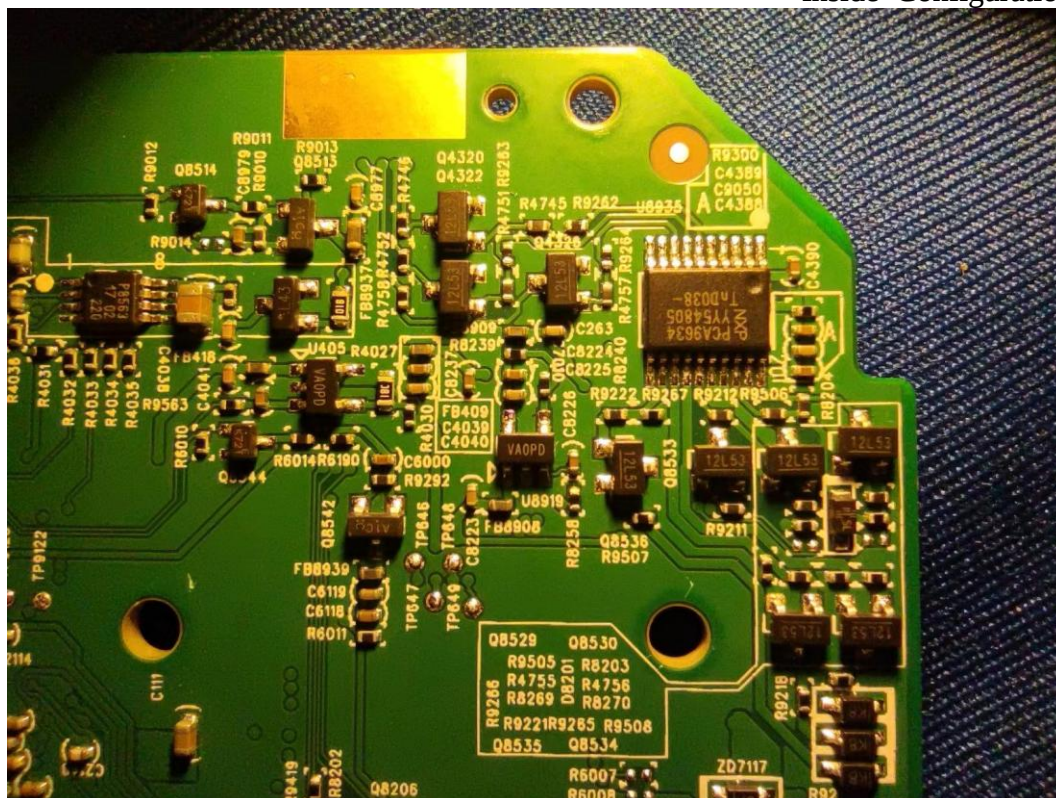


Figure 31
Inside Configuration of the EUT

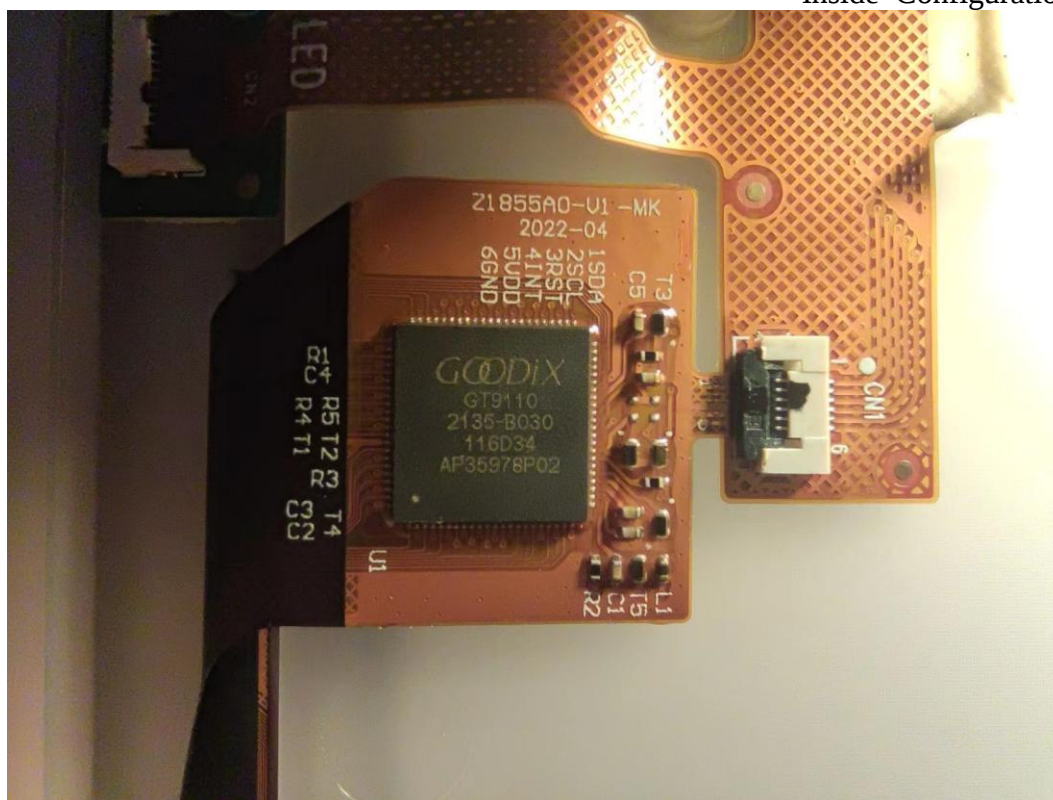

THE END