



USER MANUAL

PARTS & FUNCTION DOOR BELL

This receiver can handle two wireless doorbell button or transmitter with different melody and flash pattern.

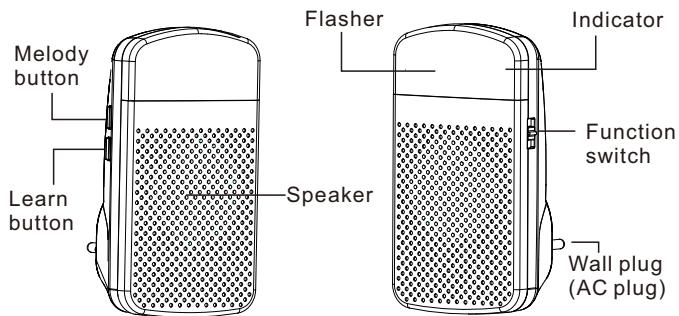

MOUNTING & POWER

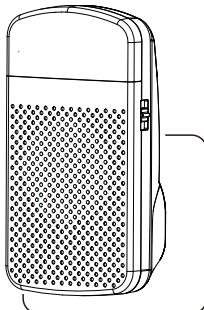


This receiver work with AC 80V to 240v, do not need any install. Simply plug to the AC wall socket.

CODE PAIRING & MELODY SELECTION

* PLEASE NOTE THE DOORBELL BUTTON & CHIME UNIT ARE PAIRED & READY TO USE.

- Step 1: Insert the battery into the transmitter to be used (Doorbell button)
- Step 2: Plug the receiver to the wall socket.
- Step 3: Press & hold the • learn button for 3 seconds. The red LED indicator inside the lens will blank. (if the red LED indicator will lit constant. Indicates the memory is full.)
- Step 4: Press the ♫ melody selector button to scroll through the melodies. Once you hear a melody you prefer, do not press any button as the melody is set for that transmitter.
- Step 5: Once the melody are selected, Trigger the transmitter to pair. If successful, the receiver (chime unit) will generate a short tones. Press the • zone selector button to exit the pairing mode, the system is now ready to use.

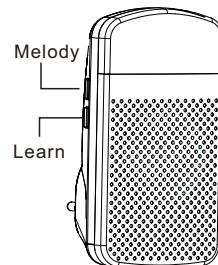

Change the melody

First, press & hold the • zone selector button for 3 seconds to enter the pairing mode. Press the ♫ melody selector button to select the melody desired.

Trigger transmitter once to record the melody

Clearing the transmitter memory of the Receiver

First, press & hold the • learn button for 3 seconds to enter the pairing mode. Press & hold the • learn button & ♫ melody selector button together for 3 seconds to delete the memory. The receiver will generate a beep tone to indicate all transmitter on the memory is deleted. The red LED will change to blink. Now you can pair new transmitter to the receiver.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Read all warnings.
4. Follow all instructions
5. Do not use this device near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other.
9. Do not tamper with the polarized & Grounding plug. Each blade of the plug has a special purpose for seamless communication & safety. A grounding type plug has two blades and a third grounding prong.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product. When moving the cart/product combination to avoid injury from tip-over (When applicable).
13. Unplug this product during lightning storms or when unused for a long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the product. Liquid damage is not covered by warranty.
16. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
17. Caution marking is located at the bottom of device.
18. The marking information is located at the bottom of device.



Safety Instructions

Warning: To prevent fire or shock hazard. Do not expose this unit to rain or moisture.



The lightning flash with an arrowhead within a triangle alerts you to uninsulated dangerous voltage within the product's enclosure that could cause an electric shock

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.



The exclamation point within a triangle alerts you to presence of important operating, maintenance and servicing instructions in this user's manual.

- The socket-outlet shall be installed near the equipment and shall be easily accessible.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: Modifications to this product will void the user's authority to operate this equipment.