



USER MANUAL

MA-810

PARTS & FUNCTION

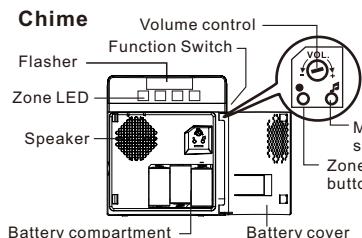


POWER

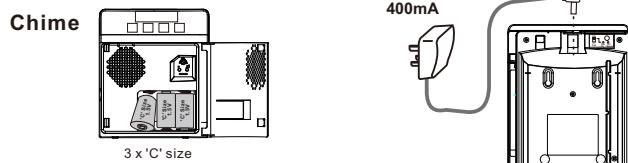

Setup

This Bed Shaker must be worked with the Echochime 300 when using the vibration function.

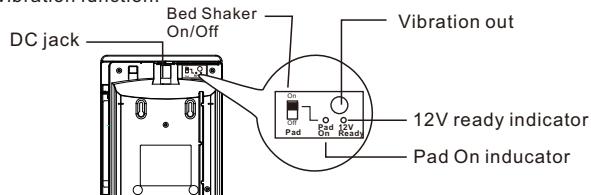


DC jack: If using the Bed Shaker, it must be connected with a 12V 400mA AC/DC adaptor to this jack.

12V ready indicator: This indicator will light up, when the 12V adaptor is connected correctly.

Bed Shaker on/off: Slide this switch to turn on or turn off the vibration function.

Pad on indicator: If the Bed Shaker on/off switch is slide to on position, this LED indicator will light up to indicate vibration function is ready.

Vibration out: Plug the Bed Shaker to this jack.

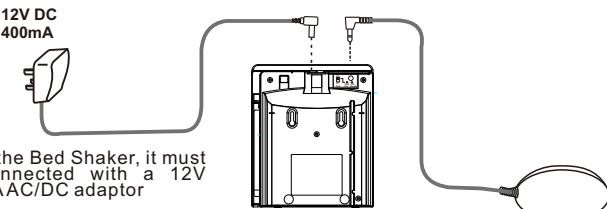


Using the Bed Shaker, it must be connected with a 12V 400mA AC/DC adaptor

Cancel Button

Pressing the 'Cancel' Button will stop the chime and light after the unit has been activated.

MOUNTING

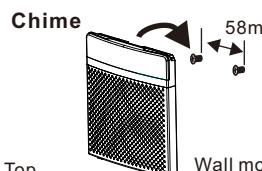

Wall mounted

CODE MATCHING & TUNE SELECTION

Step 1: Insert the battery into the transmitter to be used (Doorbell button)

Step 2: Insert the batteries into the receiver (chime unit).

Step 3: Enter pairing mode for the receiver (chime unit). Press & hold the • zone selector button for 3 seconds. The LED in zone #1 will flash.

Step 4: Press the • zone selector button again to move to the zone you wish to pair with. Press the ♫ melody selector button to scroll through the melodies. Once you hear a melody you prefer, do not press any button as the melody is set for that zone.

Step 5: Once the zone & melody are selected, trigger the transmitter once to pair. If successful, the receiver (chime unit) will generate two short tones. Press the • zone selector button to exit the pairing mode, the system is now ready to use.

To stop the Chime while the receiver (chime unit) is alerting press the reset button.

Delete the remote button on the chime memory

First, Press and hold the 'Learning' button for 3 seconds to enter the learning mode. Press the 'Learn' button to select the zone you want to delete. Press and hold both the 'Learning' and the 'Melody' button 3 seconds. The chime will generate a tone to indicate the remote on this zone has been deleted.

Change the melody/tone on desired zone

First, Press and hold the 'Learning' button for 3 seconds to enter the learning mode. Press the 'Learn' button to select the zone you want to change. Press the 'Melody' button to select the new melody/tone and then push the remote button. You will hear a tone to indicate the melody has been changed.

BATTERY LOW INDICATOR

If a zone LED light is blinking, it indicates that the battery is low for this transmitter. You must replace the battery as soon as possible.

If the white flash at the top of the Chime blinks every 5 seconds, this indicates the receiver batteries are low. You must replace the batteries of the receiver.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: Modifications to this product will void the user's authority to operate this equipment.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCT

