



2.4g Wireless Speaker Users'Guide

MD 2010



For any customer inquiry or in the unlikely event of a product failure, please phone or email the Helpline
DO NOT RETURN THE PRODUCT TO THE RETAILER.

Helpline: 559-244-0141
Email: help@eztvlistening.com

Made in China

Please read all instructions carefully

BEFORE OPERATING THE PRODUCT

Carefully read this manual before using this product. Make sure you know how the units function and how they operate. Maintain the units in accordance with the instructions to insure that they function properly. Keep the instructions with the units for reference by all users. These safety instructions, by themselves, do not completely eliminate all danger and proper accident prevention measures must always be used.



BEFORE INITIAL USE

Remove all packaging. Carefully wipe the outer cases with a soft damp cloth and dry afterwards with a dry soft cloth. For safety do not immerse the units in water or any other liquid. Check for any damage that may have occurred during transit. Do not use the product if you find any damage, and immediately return it to the supplier for replacement or repair.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

STEP 1 CONTENTS Confirm all items are present before disposing of the shipping box.

Users' Guide

Remove items from box

- (1) 1 - Receiver
- (2) 1 - 2.4G Transmitter
- (3) 1 - AC Adapter (Transmitter):

- (4) 1 - Audio Cord
- (5) 1 - RCA Adapter
- (6) 1 - Neck Strap

- (7) 1 - Ear-buds
- (8) 1 - Users' Guide

STEP 2 PLUG IN A/C ADAPTER

Plug the A/C Adapter (3) into electrical outlet and plug the other end into the '5V DC' jack located on the back of the Transmitter (2).
NOTE: The units will not work if unplugged from electrical outlet.



Back of TV, Satellite Box or Cable Box

STEP 3 PLUG IN AUDIO CORD

For best results, please use Television "audio out" ports.
Plug any double end (Red and White) of the Audio Cord (4) into the 'AUDIO IN' port located on the back of the Transmitter (2).



Plug the other end (Red and White) into the 'Non-Digital Audio Ports' located on the back of your television set, satellite box, or cable box. Audio out ports are labeled 'Audio Out' or 'Out'.



Never plug the Audio Cord (4) into the ports on the front of your television set as these are always 'Audio In' ports. EZ-TV Listening will not work if you mistakenly plug the Audio Cord (4) into an 'Audio In' port.

**TIP: When TV "AUDIO OUT" IS NOT AVAILABLE**

If you do not have an Audio Out Port on the back of your television set, satellite box, or cable box, then use the RCA adaptor(5).

Plug the ends of the Audio Cord (4) into the RCA adaptor (5) port. Plug the other end of RCA adaptor (5) into the "Headset" port on the front of your television set. You may also use the RCA adapter with your MP3 player/iPod and any "Headset" port, including your computer.



Mp3 player/iPod

TV Headset Jack



STEP 4 PLACING THE TRANSMITTER

You may place the Transmitter anywhere you prefer, so long as it is properly connected to an electrical outlet and to the device you wish to listen to. Then press the large gray button at the back of the Transmitter to turn it ON. The transmission distance can reach up to 50 meters. With such capability, the Receiver unit will function almost anywhere in your home, on your patio or deck.

STEP 5 USING RECEIVER

You may take the Receiver almost anywhere with you so long as it is within 50 meters of the Transmitter. You may wish to use the neck strap, making it even more convenient. Push the power switch to "ON" and rotate the volume dial to adjust the volume to your liking. Turn off the Receiver by pushing the power switch to "OFF". When the Receiver is "ON" A Green light will indicate it is working.

TIP On a full charge, your receiver is able to operate continually for up to eight (8) hours. To charge the Receiver (1) place it in the charging cradle on the top of the Transmitter (2). Make sure you turn off the receiver while charging.



STEP 6 CHARGING RECEIVER

On a full charge, your receiver is able to operate continually for up to eight (8) hours. To charge the Receiver (1) place it in the charging cradle on the top of the Transmitter (2). Make sure you turn off the receiver while charging. During charging a RED light on the Receiver will come on. When the Receiver is fully charged the RED light on the Receiver will turn off.



STEP 7 HOW TO ADD AND SYNCRONIZE ADDITIONAL RECEIVERS (SPEAKERS)

A Transmitter (2) may have multiple Receivers (1) in addition to the original one. You may purchase additional Receivers by contacting the Helpline at 559-244-0141 or e-mail at: help@eztvlistning.com.

To add an additional Receiver, confirm your Transmitter is properly connected and the audio source is supplying a signal to your original Receiver. Make sure the source is "on" and/or in "play" position and make sure the Transmitter (2) is turned on. Then place the new Receiver in the charging cradle on the top of the Transmitter (2). Make sure you turn on the Receiver(1).
 -Press the CH button at the back of Transmitter (2) first
 -Then press the PAIR button while still pressing the CH button
 -Release both buttons once CH light flashes (Usually it takes 3 seconds)
 -If the above actions have been completed properly, your new Receiver should function the same as your original Receiver.



TROUBLE SHOOTING

NO SOUND:

- Insure that the transmitter power cord is correctly inserted into the AC wall outlet and that electrical power is on.
- Insure that the Receiver ON/OFF button is set to the ON position.
- Make sure the Receiver battery is charged.
- Check and adjust as necessary the volume control dial on the Receiver.
- Check the audio source that is supplying the signal for transmission to make sure the source is "on" and/or in the "play" position.

DISTORTED SOUND:

- The Receivers may be too far away from the Transmitter.
- The Receiver batteries may be low.
- The input signal from the audio source may be too low, increase the output volume of the source device if possible and retry.



FREQUENTLY ASKED QUESTIONS

Q1: How do I Charge the Receiver?

A1: Turn your Receiver off and place the Receiver in the charging cradle of the Transmitter until you are ready to use it again.

Q2: Can I overcharge the headset?

A2: No, our EZ-TV Listening Receiver is not able to be overcharged.

Q3: What is the lifetime of the batteries?

A3: The batteries are designed to last between 1-2 years depending on use.

Q4: What color should the charging light be when charging a Receiver?

A4: The charging light should glow red while a Receiver is in the slot and being charged. When the Receiver is fully charged, the RED light will turn off.

Q5: I plugged the Audio Cord into the ports on the front of my TV; why is there no audio?

A5: Any Audio ports on the front of your Television are Audio "Inputs" and are not compatible with our system. Audio "outputs" are located on the back of the Television, and are labeled "Audio Out".

Q6: What if I do not have any "audio out" ports?

A6: In this case, please use RCA adaptor--Plug the ends of the Audio Cord (4) into the RCA adaptor (5) jack. Plug the other end of RCA adaptor (5) into the Headset jack on the front of your television set, MP3 Player/iPod and any Headset Jack, including your computer.



ELECTRICAL SAFETY

When using electric equipment always observe safety regulations where applicable to reduce the risk of fire electric shock and personal injury. Always check that the power supply corresponds to the voltage on the rating plate.

Supply cord and plug

Always fully unwind any cord to avoid overheating. Never allow any supply cord to come in contact with hot objects. Do not carry the equipments by the cord. Disconnect by first switching off the mains outlet, grasping the adaptor and pulling it out gently.

If the adaptor or adaptor supply cord is damaged, it must be replaced by the manufacturer, its' service agent or a similarly qualified person in order to avoid a hazard. Only use authorized replacement parts.

Children

Caution: Keep out of reach of children.

EZ-TVListening is not intended for use by young children. Young children must be supervised to ensure that they do not play with or misuse the equipment, or become entangled in the electrical or other connecting cords.

Water

For your safety do not immerse any part of this wireless speaker system or power adaptors in water. Care must be taken when using speakers outdoors to avoid possible water damage. Do not use with wet hands.

Handling

Do not drop the product as this may cause damage to both external and internal components. Do not use this equipment if it has been damaged in any way, immersed in water, if the adaptor or supply cord is damaged. Contact with any damaged electrical equipment could result in electric shock.

GENERAL SAFETY

When using electric equipment basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury. Do not use near flammable or hazardous materials. Read all of these instructions before attempting to use the equipment.

Damaged or dropped

Always inspect any electrical equipment before use. Do not use this equipment if it has been damaged, dropped, left outdoors in damp or wet weather, or dropped in water. Return it to an authorized service dealer for examination and repair. Do not attempt to service this equipment yourself. Refer servicing to qualified service personnel.

Store in a safe place

When not in use store your wireless speaker system and all its accessories and instruction manual in a safe and dry place.

Liability

No liability can be accepted for any damage and personal injury caused by non-compliance with these instructions any other improper use or mishandling. This equipment is intended for household use only.

Before Cleaning

When not in use and before cleaning, always disconnect the transmitter from its' electrical supply and turn off the receiver.

Cleaning Guide

Regularly clean the outside of the equipment with a soft damp cloth and dry it with a dry soft cloth. Do not immerse in water. Do not use harsh solvents to clean the plastic components.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of 90 days from the date of purchase.

This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections

For any customer inquiry, or in the unlikely event of a product failure, please telephone or email the helpline contacts listed below for assistance.

WARRANTY FOR UNITS USED COMMERCIALLY IS LIMITED TO 90 DAYS FROM DATE OF PURCHASE

Product: _____

Model No: _____

Purchase Date: _____

Purchased From: _____

Name: _____

Address: _____

Phone Number: _____

IMPORTANT! Please retain this warranty card along with your purchase receipt. Please do not return to the retailer.

Helpline: 559-244-0141