 


Problem	Reason	Solution
Can't operate this drifting car	Insufficient battery power or electric power	Please replace the batteries. Switch off for energy saving when do not use this toy.
	Batteries are not well loaded.	Correctly load the batteries, pay attention to its polarity.
	Switch is off.	Check if the switch on the transmitter is on or not.
Slowdown of the car speed	Insufficient battery power or electric power	Replace the batteries and please switch off for energy saving when not use it.
	Beyond the controlling scope of the car	If the speed slowed down or stopped, please put the transmitter close to the car when controlling.
Can't drive in a straight.	The adjuster of the front wheel is still not well adjusted correctly.	Adjust the adjusting pin of the front wheel on the car base, e.g. if the car deviates to the fitted from the left. If the car deviates to the left, please adjust the adjusting pin to the right.
The car can't be controlled or strange action happened when driving.	The transmitter is interfered by other microwave or the car is interfered by any other transmitters.	Drive the car in the area where theres is no any other interference.
	Beyond the controlling scope of the car	Raise up the transmitter and use it close to the car.
	Insufficient battery power	Replace the batteries and please switch off the power for energy saving when do not use it.
	The antenna can't	Point the antenna to the car rather than point it to the sky Do not touch the antenna.

After finish drifting, please use a small brush to clean and remove the dust or any other object off the car.



Warning! <u></u>



- Cautions when using the battery.

- Cautions when using the battery.

  1. AA alkaline battery is highly recommended.

  2. Rechargeable battery should be used.

  3. Rechargeable battery should be used.

  3. Batteries should not be short-circuit, decomposed or put into the fire.

  5. Chargeable battery should be charged under the guardianship of the adult.

  6. Chargeable battery should be charged under the guardianship of the adult.

  6. Chargeable batteries should be taken out of this toy before charging.

  7. Battery should be correctly loaded.

  8. Don't mix using batteries of different types or mix using the old batteries with the new ones.

  9. You can clean this toy with liquid, please take out of the batteries before cleaning.

  10. Only the same types of battery or battery of similar types can be used.

  11. Exhausted or used batteries should be taken out of this toy.

  12. Batteries should be taken out if it is not used for a long time.

  13. The quantity of the battery to be connected should not be over the quantity recommended.