



PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE PLAYING AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

RADIO CONTROL FREQUENCY

For interference-free results, do not operate this vehicle with other radio-controlled toys not included in this set within transmission range.

TRANSMITTER AND RECEIVER

Since radio waves control the vehicle and in order to avoid interruption, do not operate this vehicle near electrical or telephone lines, CD players, mobile phones, elevators, steel girders, other electronic devices and hearing aids.

INSTALLING THE BATTERIES

- Unscrew and open battery compartment cover to insert batteries in the vehicle as shown in diagram. Make sure all batteries are at the correct polarities.
- Close the cover and tighten the screw.

- To insert battery in the controller, open battery compartment cover to insert battery as shown in diagram.
- Close the cover.
- Do not mix old batteries in the vehicle and transmitter when the toy is not in use.
- Do not mix old and new batteries together.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are not to be discharged.
- Spare terminals are not to be short-circuited.
- For best performance, alkaline batteries are recommended.
- Do not mix old batteries in the vehicle as they may explode or leak.
- Batteries Contain Mercury. Don't Put In Trash. Recycle or Dispose as Hazardous Waste.

OPERATING TH

- For your safety, never play with this toy on the street.
- Turn the "on-off" switch at the bottom of the vehicle to "on" position, then the vehicle will be idle.
- Pull the trigger downward on the transmitter, the vehicle will respond in going forward.
- Release the trigger, the vehicle will stop.
- Push the trigger upward on the transmitter, the vehicle will turn in reverse.

OPERATION TIPS

OPERATION TIPS

2. Do not play with this toy on grass, sand or carpet.
3. Do not drive the toy through water.
4. Always point the controller antenna upward for better transmission.
5. Do not make any physical contact with the controller antenna while operating.

5. Do not make any physical contact with the controller antenna while playing.
6. Keep the toy in a dry and cool place after playing.
7. Do not leave in direct sunlight.


7. Do not leave in direct sunlight.

CONFORMS TO TOY SAFETY STANDARDS ASTM F963-07

THIS DEVICE OPERATES WITH PART 15 OF FCC RULES.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Your equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If your equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

BATTERY INSTRUCTION DIAGRAM

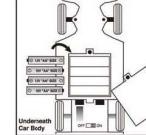

USES 4X 1.5V "AA" SIZE BATTERIES. (NOT INCLUDED)

