

## 三键遥控器使用说明书

### Three keys remote control using instructions

#### 一， 技术参数：

##### Specification:

Working frequency:工作频率： 433.92MHz±150KHz

Modulation mode:调制方式： OOK

发射功率： <10mW

Working voltage:工作电压： DC3V（2302 纽扣电池）

Working current: 工作电流： <8mA

Enclode mode: 编码方式： LX2260 1.2M

#### 二， 使用方法


##### Using instructions


Push down the key+ on the remote, the transmitted LED will light at the same time , the transmitted signal is D3. Push off the key, transmitting will tranmilated and the LED will light off.

按下遥控器 + 键，发射指示灯亮，同时发射数据为 D3 的信号，放开按键，遥控器停止发射，指示灯熄灭。

Push down the key – on the remote, the transmitted LED will light at the same time , the transmitted signal is D2. Push off the key, transmitting will tranmilated and the LED will light off.

按下遥控器 - 键，发射指示灯亮，同时发射数据为 D2 的信号，放开按键，遥控器停止发射，指示灯熄灭。

Push down the key  on the remote, the transmitted LED will light at the same time , the transmitted signal is D1. Push off the key, transmitting will tranmilated and the LED will light off.

按下遥控器  键，发射指示灯亮，同时发射数据为 D1 的信号，放开按键，遥控器停止发射，指示灯熄灭。

三， 注意事项

Notation:

Replace the battery if the remote distance becomes short or the LED light becomes dim.

若发射距离变近或指示灯变暗，请及时更换电池。