

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	1 of 12

Two Ports Mini Reader User Manual

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	2 of 12
1 SCOPE	3				
2 THE LIST OF REFERENCES:	6				
3 ABBREVIATED TERMS.....	6				
4 SYSTEM SPECIFICATION	6				
4.1 SYSTEM STRUCTURE.....	7				
4.1.1 <i>Radio Frequency Circuit</i>	8				
4.1.2 <i>The Interface of Power Supplies</i>	8				
4.1.3 <i>Hardware User Manual</i>	8				
4.1.4 <i>Module Operation</i>	9				
4.1.5 <i>Interfacing with Handfree Mini Reader Module</i>	10				
4.1.6 <i>Starting Windows Demo Program</i>	11				

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	3 of 12

1 Scope

Radio Frequency Identification (RFID) has been included in the 21st century one of the 10 major technologies. RF is the automatic identification object recognition technology. Readers are to read in the attached electronic tags on objects such as to carry out card access to the information, animal tracking, checking inventory and merchandise checkout, and sales of the whole supply chain management. This will become a model to change human consumption patterns emerging technology.

The main operation principle of RFID is utilizing the reading device (Reader) Send RF wave for the electronic label that is planted into or stuck on the things (Tag) in order to distinguish the wireless materials. The composition component of RFID system includes Reader, Tag, Mobile Devices and the contents which are in reader or tag.

When the application system wants to distinguishing things, the host can be passed by RS-232 to control reader and sends radio wave energy. When Tag senses this energy that there is asking the answering machine inside (Transponder) and the mechanism will change power into energy that passes a series of discernment materials giving back to reader and host that are in order to distinguish the things.

The specification of TWO PORTS MINI READER is in compliance with EPC Class-1 Gen 2 that is a specification for RFID air interface.

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	4 of 12

determined by turning the equipment off and on , the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To OEM installer:

1. FCC ID label on the final system must be labeled with "Contains FCC ID: YD400000UHFISTC04" or "Contains transmitter module FCC ID: YD400000UHFISTC04 ".
2. In the user manual, final system integrator must be ensured that there is no instruction provided in the user manual to install or remove the transmitter module.
3. Transmitter module must be installed and used in strict accordance with the manufacturer is instructions as described in the user documentation that comes with the product. This device complies with the following radio frequency and safety standards.

The user manual of the final host system must contain the following statements:

USA-Federal Communication Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no grantee that interference will not occur in a particular installation. If this equipment dose cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on , the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	5 of 12

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating to conjunction with any other antenna or transmitter.

To inherit the modular approval, the antennas for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	6 of 12

2 The list of references:

Item	References
1	EPC Class-1 Generation-2 UHF RFID version 1.1.0
2	ISO/IEC WD 18000-6 REV1

Table 1

3 Abbreviated Terms

Term	Definitions
ASK	Amplitude-Shift Keying
EPC	Electronic Product Code
PIE	Pulse Interval Encoding
ppm	Parts-per-million
PSK	Phase-Shift Keying
Reader	Interrogator
RF	Radio Frequency
RFID	Radio Frequency Identification
TAG	Transponder IC
FW	Firmware

Table 2

4 System Specification

Reader is mainly used to read the materials from tag to carry on the work of distinguishing of the things with Mobile Devices. When Mobile Devices assigns the order for Reader, reader will transmit RF wave with data out through antenna. Once tags are receiving the information, the tag will backscatter the data with 96-bit EPC C1G2 protocol to Reader through RF mechanism that is built inside. Reader receives after the data that will give Mobile Devices the work of distinguishing which carries on the things.

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	7 of 12

TWO PORTS MINI READER implements a PHEMT GaAs IC switch to change transceiver path from one antenna the other antenna. For this device is working with data transmitter and receiver at one path and one time only. The GaAs IC, called as221-306, is a reflective SP4T switch. It is an ideal switch for high power applications. It can be used for GSM dual-band handset applications where low loss low current, and small size are critical parameters. The applications are very straight forward to lay out the circuit in the PCB Board.

For the wired RS232 interface of entity among Mobile Devices and readers, the industrial communication protocols are interchanging in order to reach the data. It is depending on the untouchable RF wave between reader and tag to reach the data to interchange with the communication protocol that is defined by EPC C1G2.

The Fig 4-1 is a data flow chart. It is including Reader, PDA and cell-phone communication code of protocol during the encoding and decoding. The code of the communication protocol between Reader and Tag is operated with decoding. °

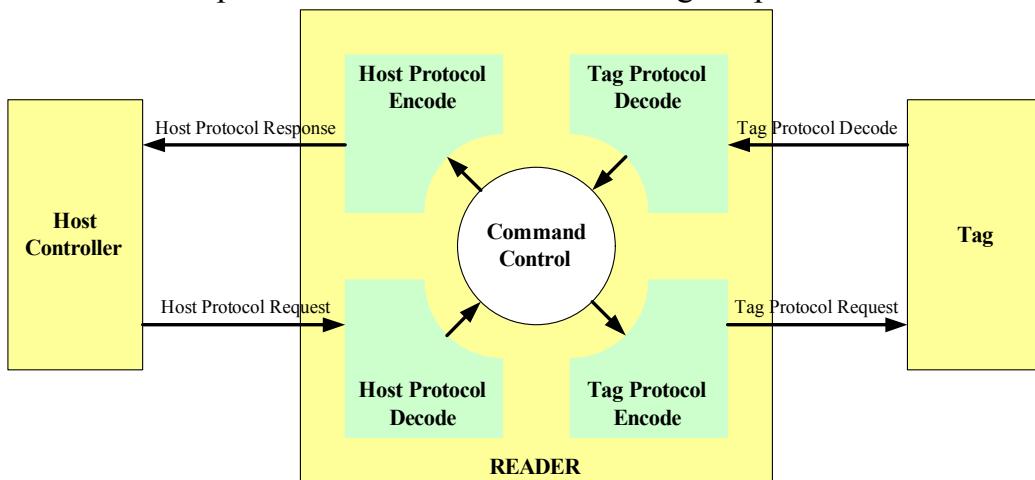


Fig 4-1. Data Flow Chart

4.1 System Structure

There are five parts of Mobile Devices for system structures that are including the radio frequency, power base, digit process, FW (Firmware) and user interface respectively.

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	8 of 12

4.1.1 Radio Frequency Circuit

This is a transceiver module with ISM of the electromagnetic wave for a transmission and receiving. It is among them transceiver inside that is in transmitter and the receiver function as follows:

- The function of the Transmitter:
The function of the transmitter is controlled and produced the signal carrier by the synthesizer of the microprocessor. The signal that will be modulated in amplitude to be an ASK signal used to offer the power that the tag is used to read data from its memory as well as using the pulse to adjust the way of changing to write the data into the tag .
- The function of the Receiver:
The function in receiving information from tags has been demodulated to several digital signals. The signals are also amplified and straining waves to deal with microprocessor.

4.1.2 The Interface of Power Supplies

The power system is offered 3.3V by TWO PORTS MINI READER interface of Mobile Devices with Max. 2A.

- 3.3V-5.2.5 (1) : The microprocessor and UART using.
- 3.3V-5.2.5 (2) : ISM RF transceiver using.
- 3.3V-5.2.5 (3) : Power Amplify using

4.1.3 Hardware User Manual

NOTE: This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

The TWO PORTS MINI READER connects to the host via a 16 pins header for data, communications and 4-pin header for power. The 3 data lines are: Ground, Data Transmit (TX) and Data receive (RX) for UART. The communication header also contains the additional pins which are interfaces for

Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	9 of 12

USB or JTAG. Those pins can be used to provide data to another sensor or auxiliary board. The power header pins supplying power to the TWO PORTS MINI READER is 3.3 Volts (and must be low-noise and regulated). A diagram of the pins are given below.

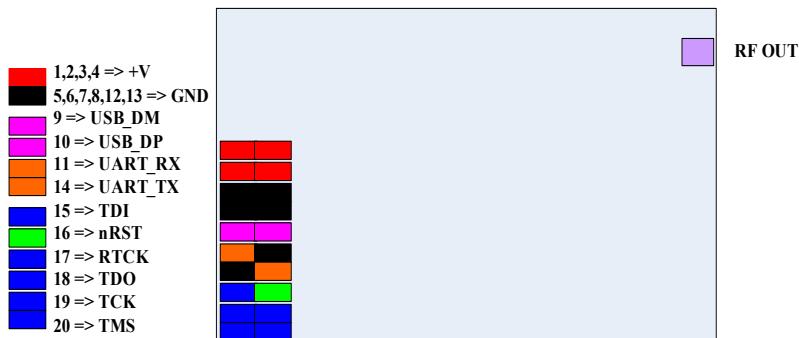


Fig 4-4. Pin Out for TWO PORTS MINI READER

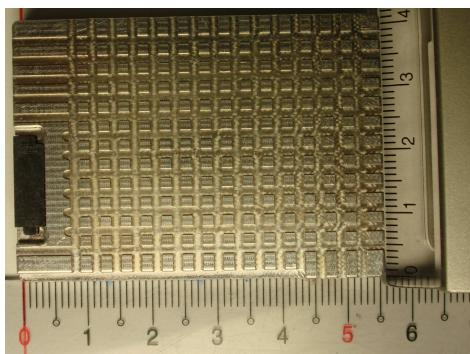


Fig 4-5. Photograph of TWO PORTS MINI READER

4.1.4 Module Operation

The TWO PORTS MINI READER is a dual-antenna reader module. The backscatter signal is demodulated to baseband through a standard mixer stage and is filtered and amplified. The baseband signal is then sampled and processed by a microcontroller.

The entire RF section of the reader module can be completely turned OFF under software control by the microcontroller. This allows the TWO PORTS MINI READER to consume very low power when in standby mode. During RFID operation, the transmit power of the TWO PORTS MINI READER is 1W, so the total power consumption is 1.8A during the fraction of a second that is required to read the tags in the field. A Flow Chart of module is given in Fig 4-6.

User Manual Document

Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	10 of 12


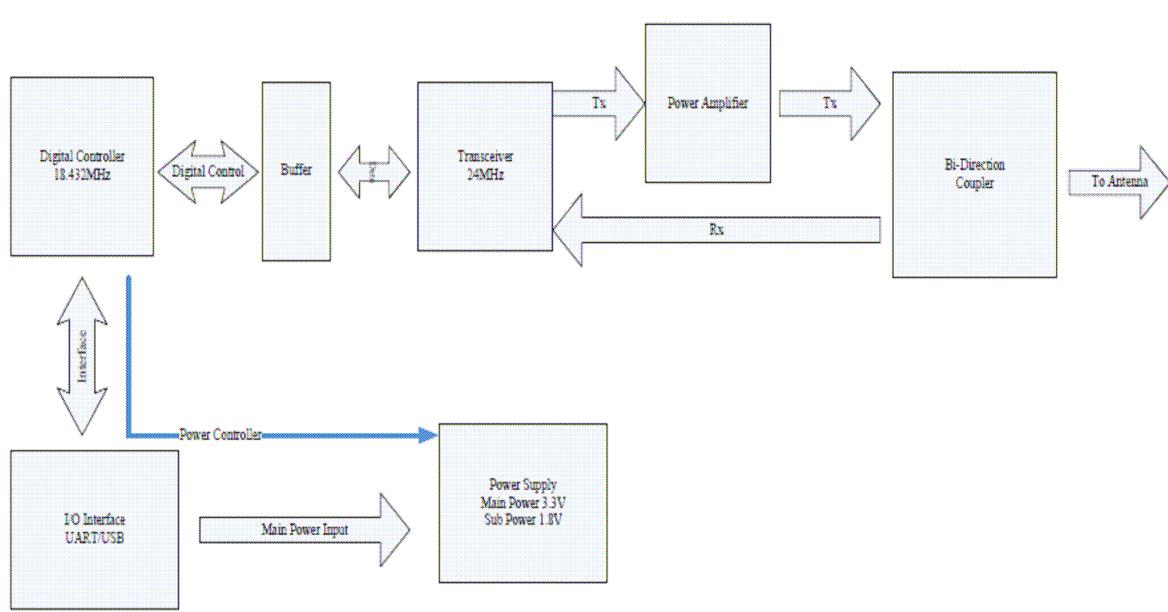


Fig 4-6. TWO PORTS MINI READER FLOW CHART

4.1.5 Interfacing with TWO PORTS MINI READER

The TWO PORTS MINI READER is designed to interface with another circuit board (i.e. as following photo) and communicate using a simple 3-wire serial interface. However, for testing purposes, it is possible to connect the TWO PORTS MINI READER to a computer using a serial RS-232 adapter. In this case, the TWO PORTS MINI READER Control Panel software can be used.

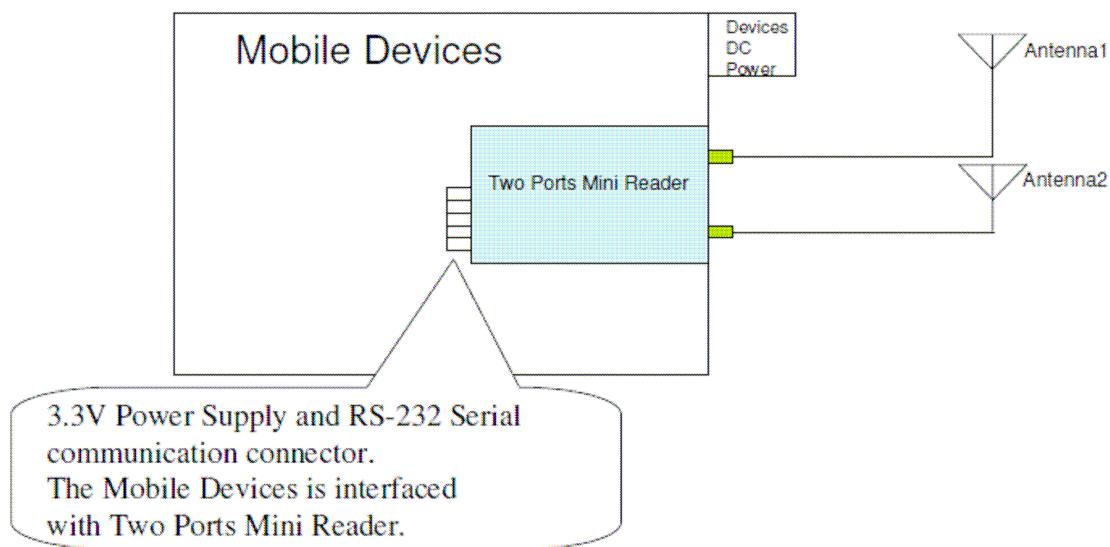

User Manual Document					
Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	11 of 12

4.1.6 Starting Windows Demo Program

After installing the demo program, you can connect the reader to the computer using a serial cable (standard DB9 connectors). Please make sure that you have an antenna connected to the reader.

The program supplied with the kit is able to interface to all the RFID readers made by CARMAR. You should open the program (CARMAR reader control panel), then go to the Reader menu and selected . Then go to the ComPort menu and select the proper COM port where you connected the reader. You should then verify that the BaudRate setting is correct (9600), then you can click the CONNECT button. After you run the program for the first time, the software settings will be saved automatically so you should not need to reconfigure the control program unless you switch to another reader product.

User Manual Document

Document Title	Doc. No.	Model Ver.	Doc. Ver.	Issue Date	Page
Two Ports Mini Reader	1.0	ISTC04	1.0	04/01/2010	12 of 12

標籤讀取 | 參數設定/擷取 | 連線設定 | Read/Write/Lock/Kill | Hibiki Protocol | System Control

Inventory Mini turn on power test

Tag ID	Read Count	Mini-RSSI	MAX-RSSI	Aver-RSSI	Memory Data
--------	------------	-----------	----------	-----------	-------------

Reader menu

ComPort menu

Inventory 條件

讀取次數: inventory

Matched Tag ID: MemBank: clear

WordPtr:
WordCount:
Access Password:

開始測試，經過: 天 小時 分 秒

