



Battery 9V --- 0.5W
Each unit uses one 9V battery (not included). This toy takes 9V type battery (not included). To replace, push the cover, note polarity of batteries, remove and replace with two new ones. Never let a child use this product unless battery door is secure. Batteries and small objects and could be ingested. Keep all batteries away from small children.



Do not throw the battery away, but dispose of it as household chemical waste.

BATTERIES INSTALLATION

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Replacement of batteries must be done by adult.

HOW TO OPERATE YOUR TRANSCEIVER

1. Remove screw and open battery door and snap in a 9-volt batteries. (Alkaline batteries recommended)
2. Press the "PUSH TO TALK" switch for transmitting.
3. Release "PUSH TO TALK" switch for receiving.
4. When transmitting, speak clearly in a normal voice, holding the set about 3" from your mouth.
5. Best transmission and reception are obtained when the antenna is held in a vertical position, and fully extended.

CAUTION

1. Your transceiver set has been fully adjusted prior to shipment from the factory and be sure not to touch the internal components other than battery.
2. When the sound becomes weak, it is time to change the Battery.
3. After use, always return the ON-OFF Switch on the OFF position.
4. Keep your set in dry and clean place.

The following is FCC labeling for your information.

On the device:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

On the manual or packing:

*Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment

off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

ATTENTION:

REMOVE ALL PLASTIC TIE & PACKAGING BEFORE GIVING THIS TOY TO A CHILD.

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE, DUE TO SMALL PARTS.

PRODUCT CONTENTS, SPECIFICATIONS & COLORS MAY VARY FROM ILLUSTRATION.

PLEASE RETAIN ALL INFORMATION FOR FUTURE REFERENCE.

Boley
Where the action is!®

NO. 13136 MADE IN CHINA
© 2009 B.C. CHINO, CA 91710

4XCFE10



Distributed by:
DOLGENCORP. LLC
100 MISSION RIDGE
GOODLETTSVILLE, TN 37072-2170
MADE IN CHINA