


EUT INTERNAL PHOTOS


EUT UNCOVER View

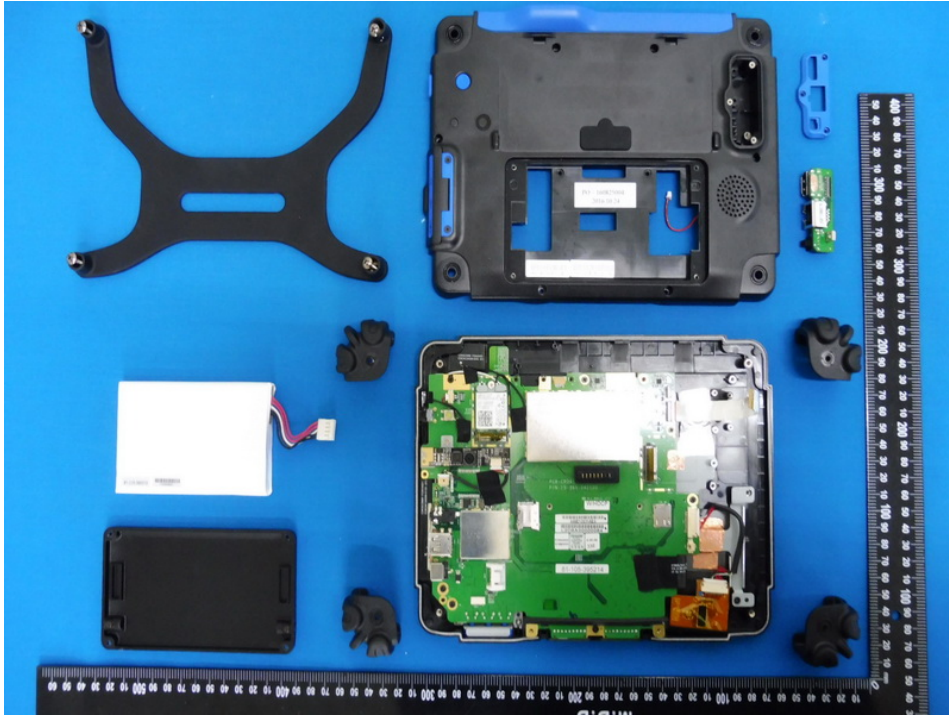


EUT UNCOVER View




EUT Battery Top View

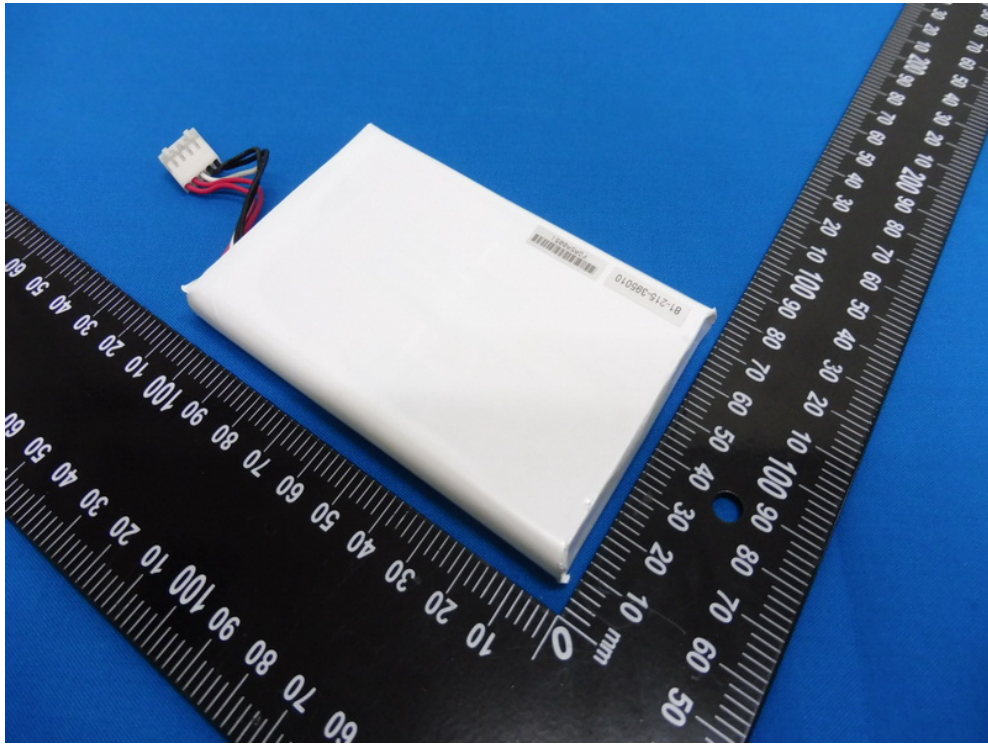


EUT Battery Top View

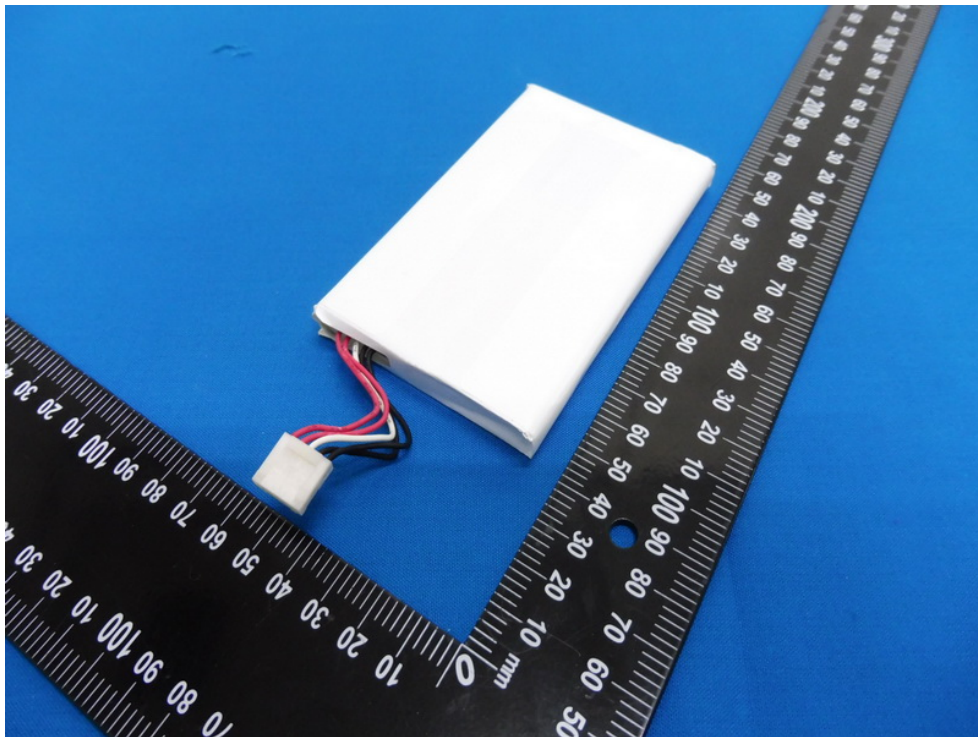

EUT BT& WiFi MAIN Antenna location View

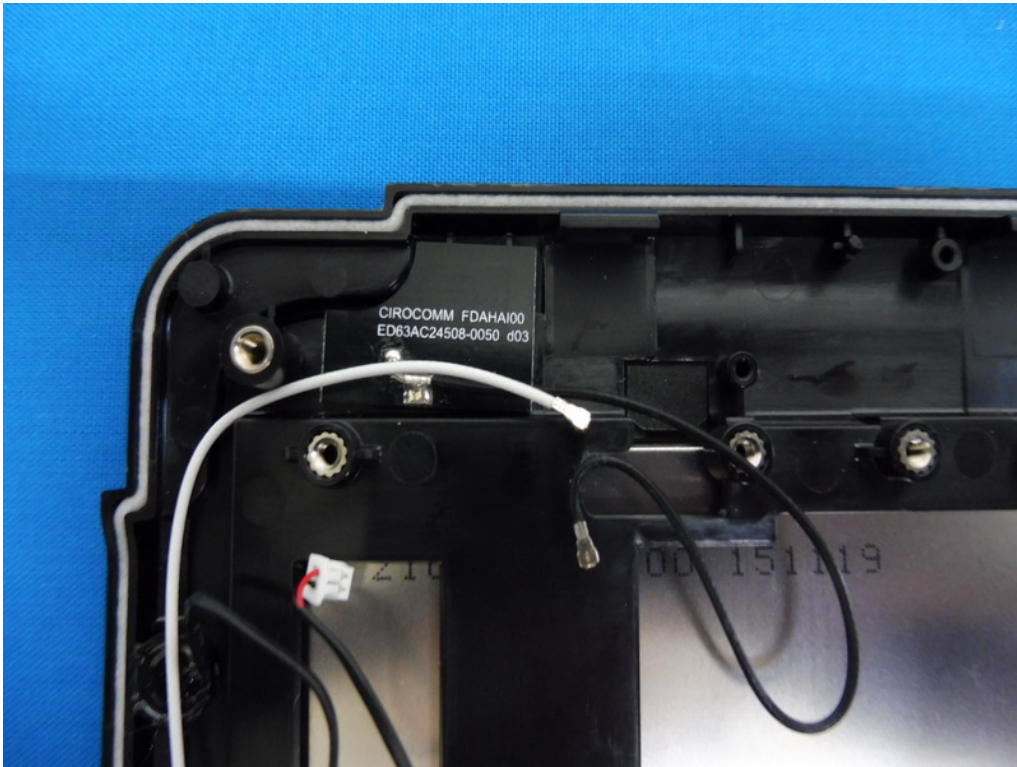


EUT BT& WiFi MAIN Antenna Top View

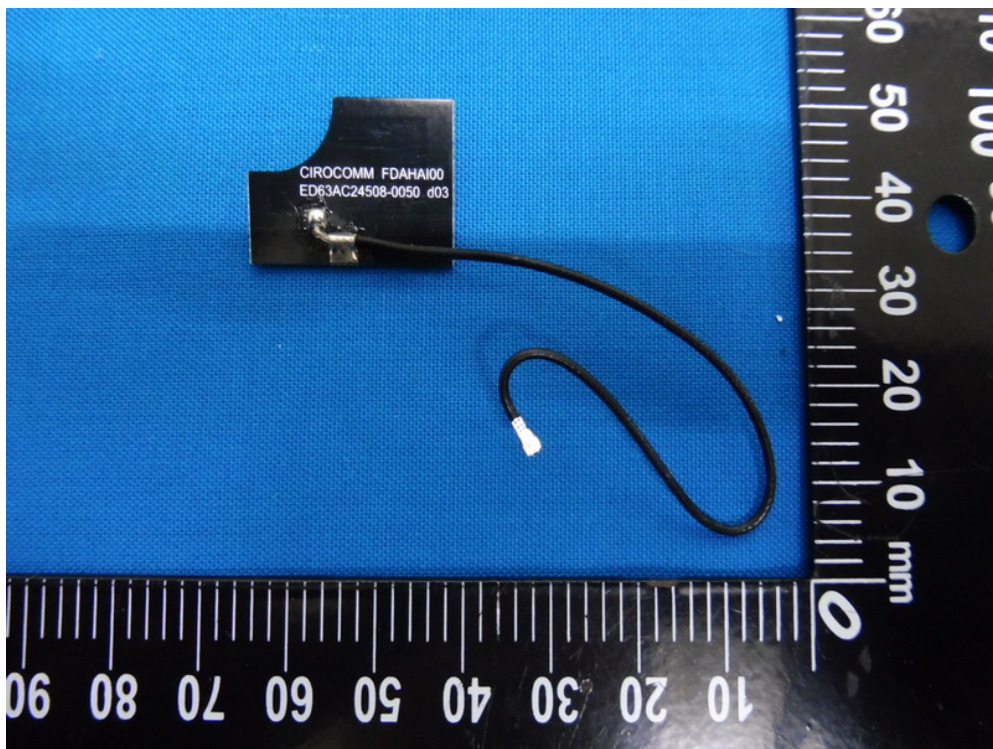


EUT BT& WiFi MAIN Antenna Bottom View




EUT BT& WiFi AUX Antenna location View

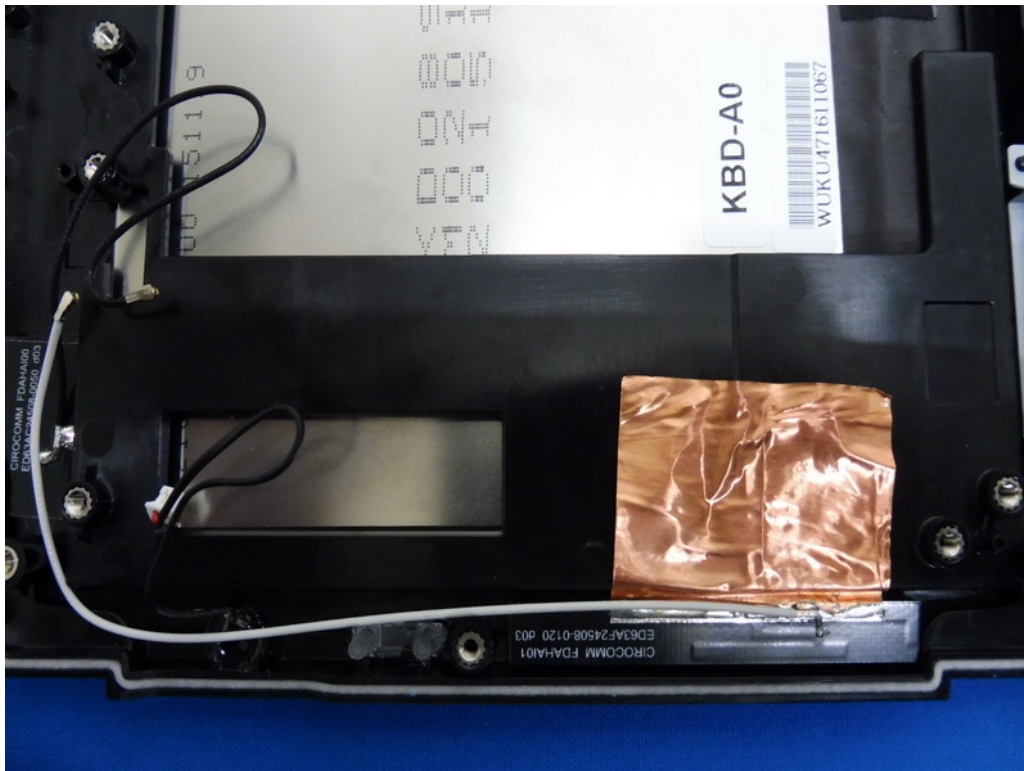

EUT BT& WiFi AUX Antenna Top View

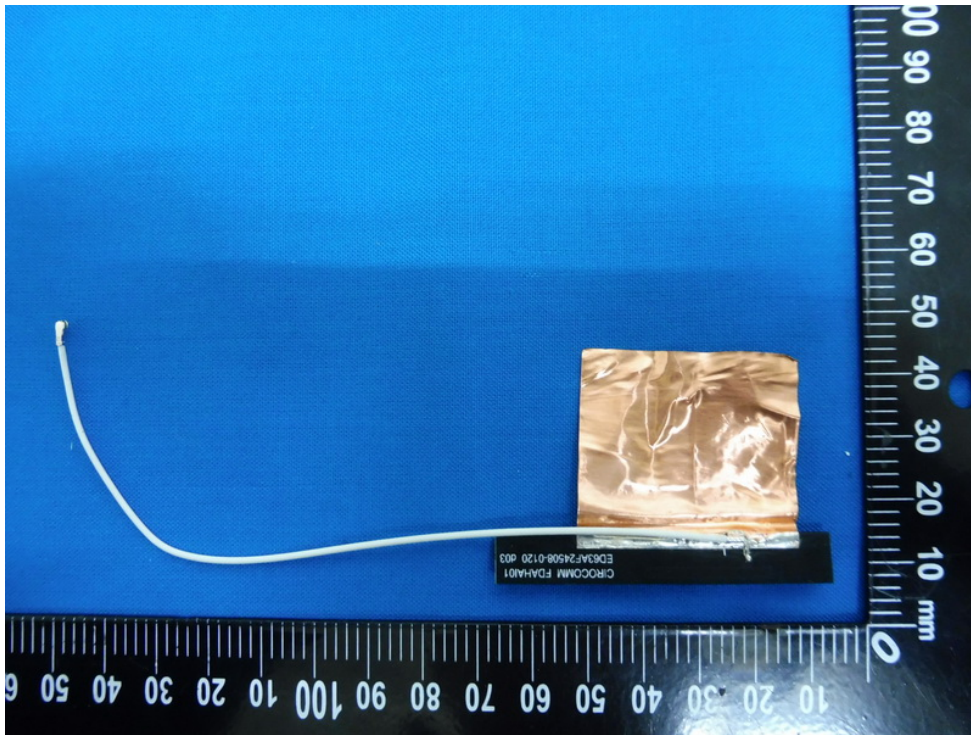


EUT BT& WiFi AUX Antenna Bottom View

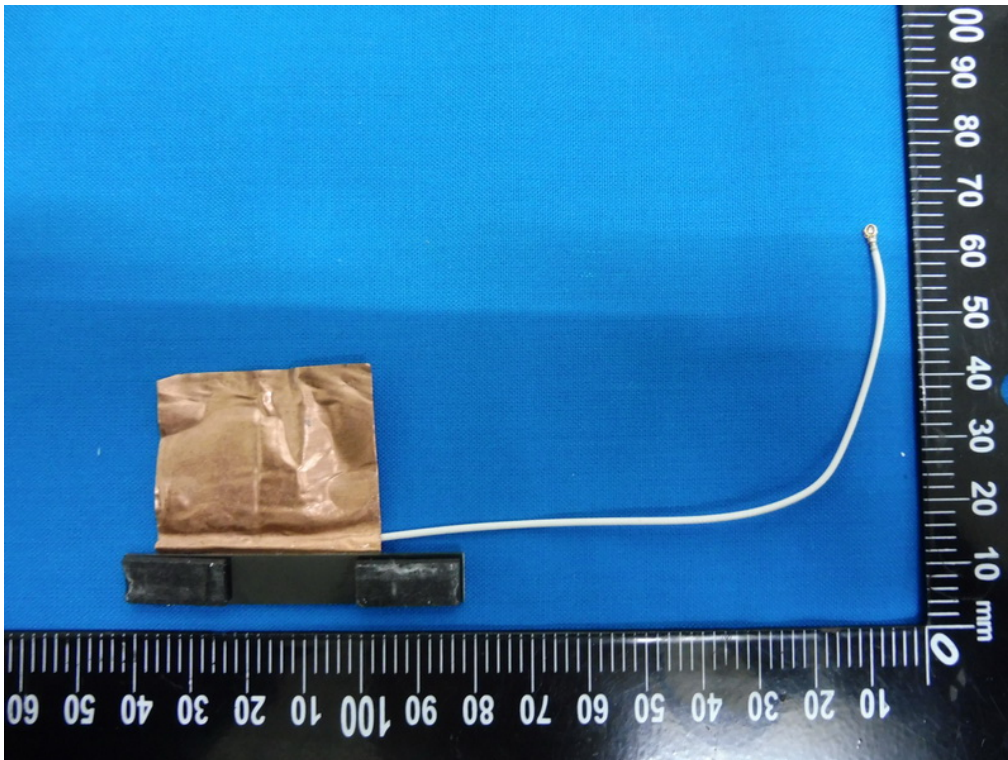


EUT UNCOVER View




EUT UNCOVER View

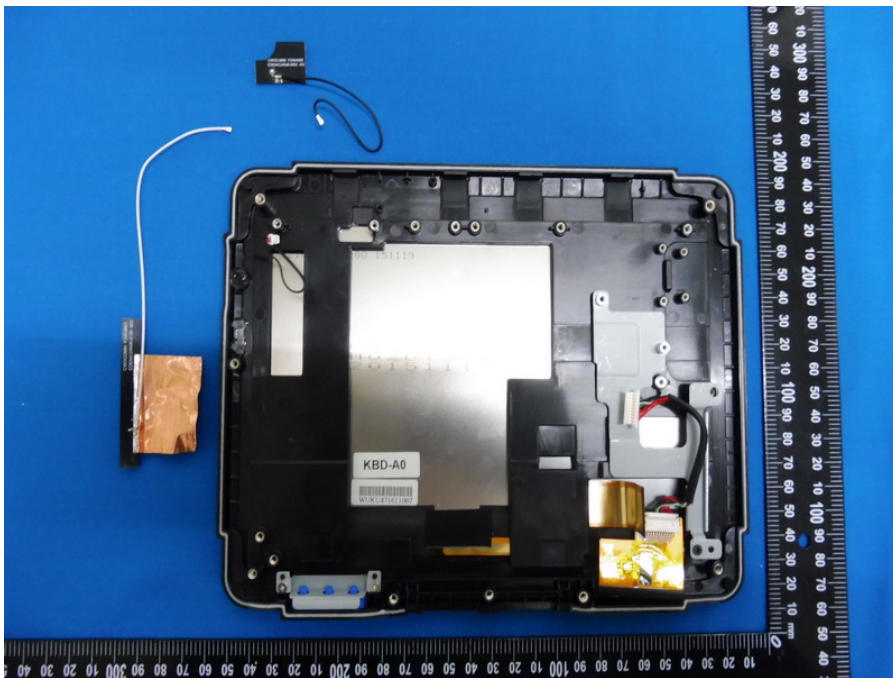


EUT Main Board Top 1 View

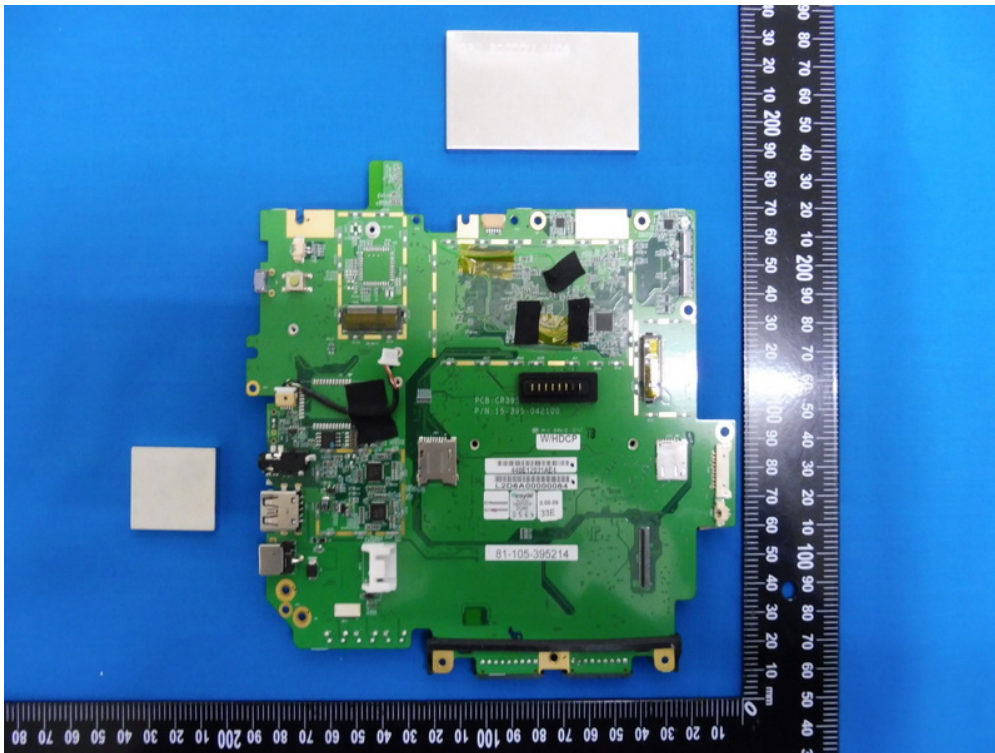


EUT Main Board Bottom 1 View

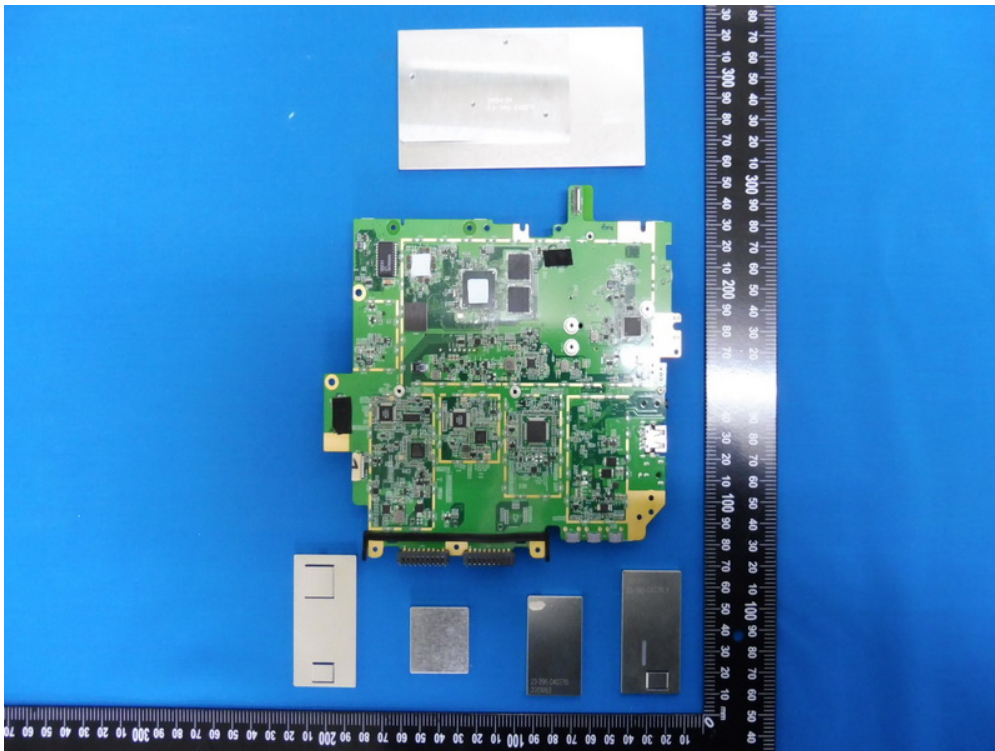


EUT Main Board Top 2 View

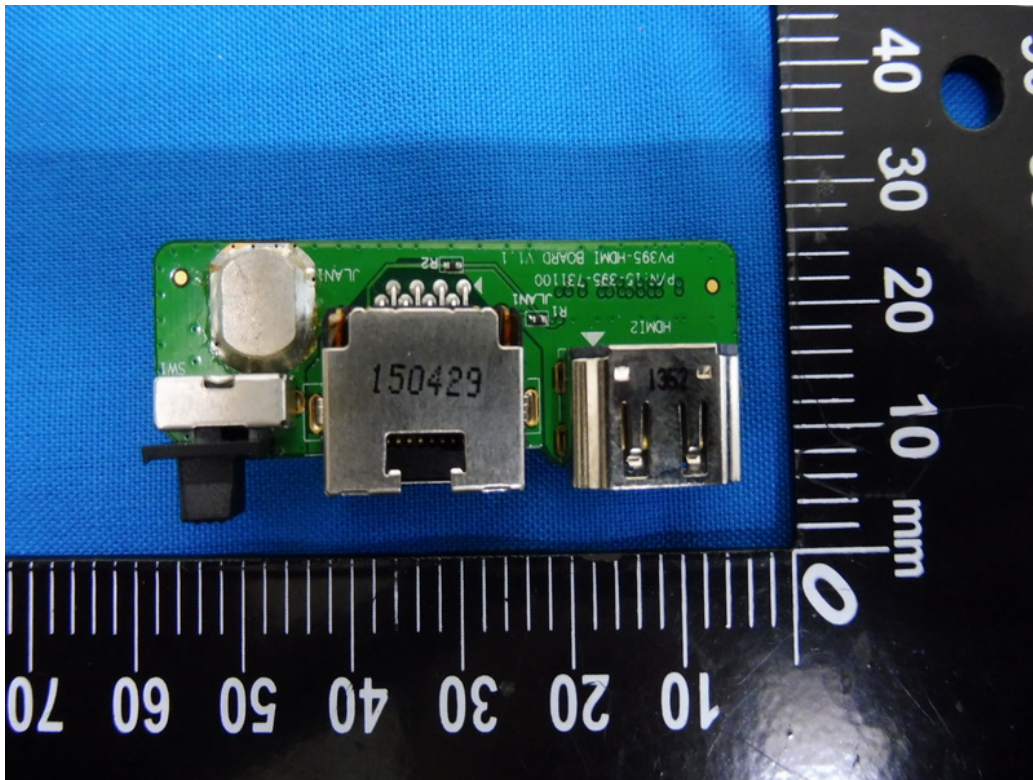


EUT Main Board Bottom 2 View

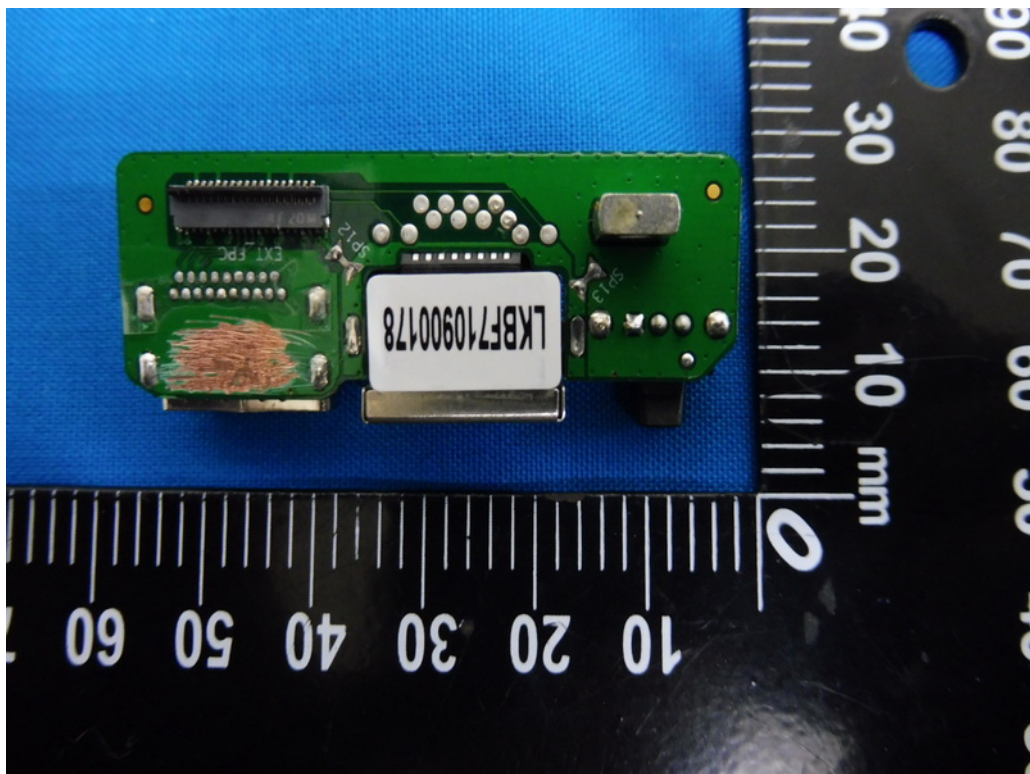

EUT Main Board Top 3 View

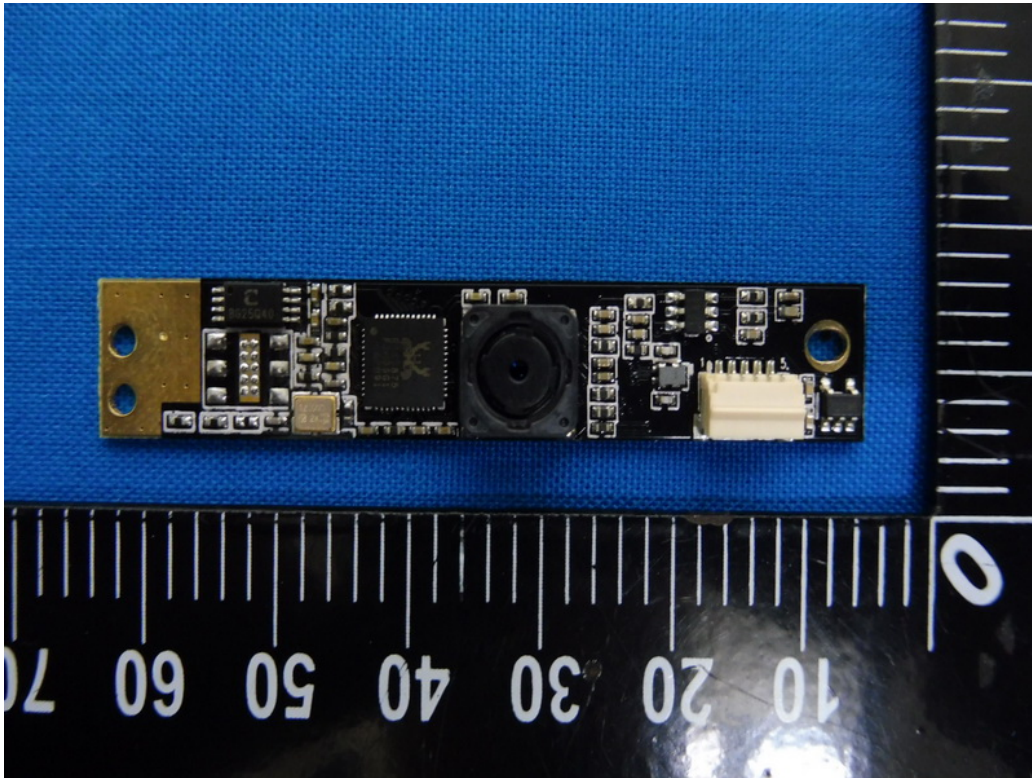


EUT Main Board Top 3 View

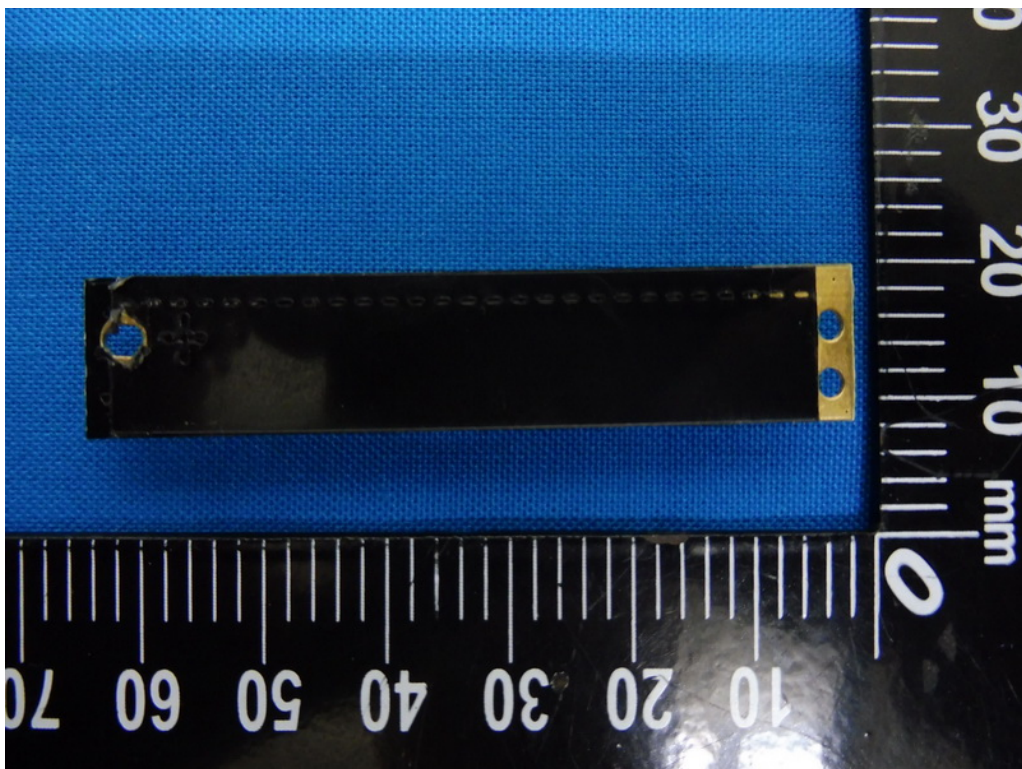

EUT Block Top View



EUT Block Bottom View

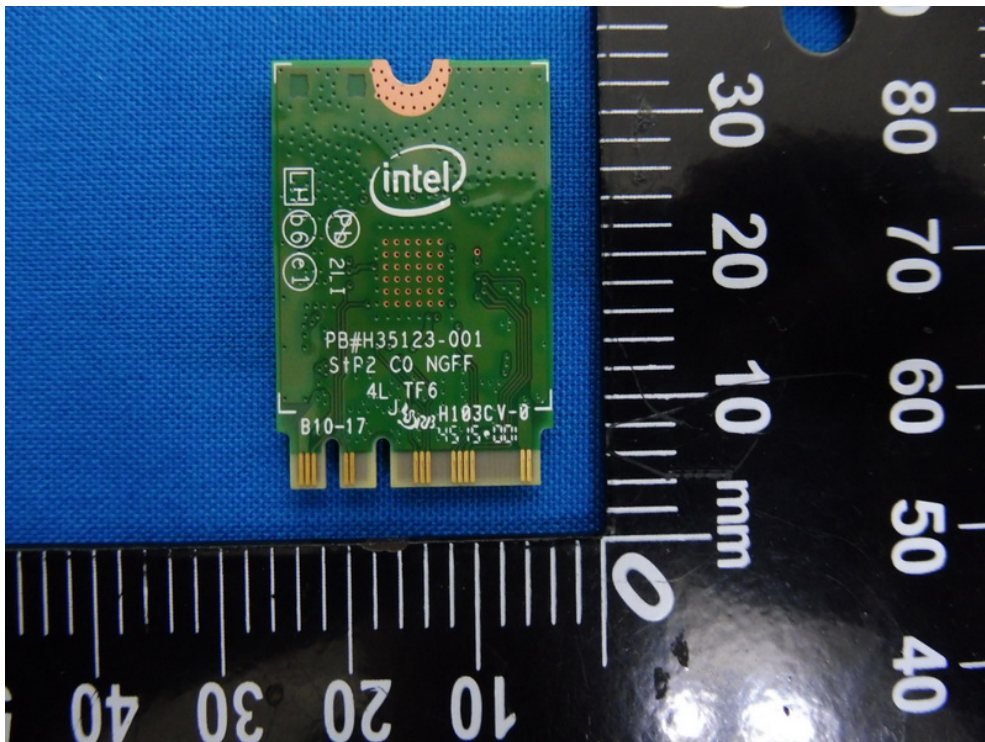

EUT Block label View

