

## Central Door Locking and Remote Keyless Entry (RKE) System




### To lock and arm the vehicle with RKE

When the vehicle is unlocked and disarmed using RKE, hazard lamps will flash twice. If there was an unauthorized attempt by someone from the time you have locked and armed the vehicle to the time you press the unlock button of RKE, hazard lamps will flash and alarm will chirp four times, to alert about unauthorized entry attempt.

### To unlock the vehicle with RKE

When the vehicle is unlocked and disarmed using RKE, hazard lamps will flash twice. If there was an unauthorized attempt by someone from the time you have locked and armed the vehicle to the time you press the unlock button of RKE, hazard lamps will flash and alarm will chirp four times, to alert about unauthorized entry attempt.

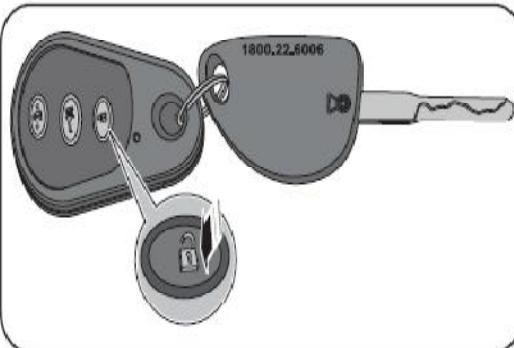

### NOTICE

Using the key when the vehicle is locked and armed with RKE will be treated by the system as unauthorized.  
When vehicle is armed, opening the door from inside by operating door inner handle will activate the vehicle security alarm. If this occurs, press the UNLOCK button on the RKE to disarm the Vehicle Security Alarm.

To activate the security system, always lock the vehicle with RKE.

#### Panic Alarm

To turn the Panic Alarm feature ON or OFF, press the PANIC button on the RKE for at least one second and release.

When the Panic Alarm is ON, the hazard lamps will flash, the alarm will chirp and interior lamps will come ON. The Panic Alarm will stay on for 30 seconds unless you turn it OFF by pressing the PANIC button for the second time.

#### RKE operating range

Using RKE, you can lock and arm or unlock and disarm your vehicle from distances of up to 30 ft (9 m). you can set or remove panic alarm from distances of up to 30 ft (9 m)



#### Transmitter RKE Battery Service

##### **NOTICE**

Perchlorate Material needs special handling for disposal.

Refer to local regulations.

#### Battery replacement


If your Remote Keyless Entry (RKE) fails to operate from a normal distance, check for these two conditions.

1. A weak battery in the RKE.
2. Closeness to a radio transmitter such as a radio station tower, airport transmitter, and some mobile or CB radios.

##### **NOTICE**

After opening the remote, do not touch the battery terminals that are on the back housing or the printed circuit board.

#### Replacement of RKE

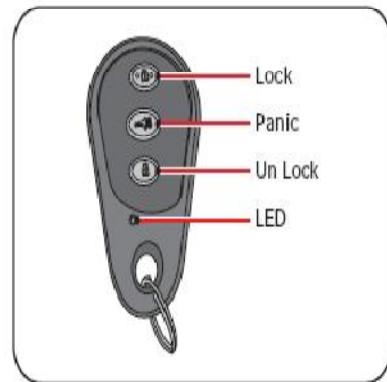

The front side of the RKE has control buttons and an LED. If the LED is not flashing when any of the buttons are pressed or when it flashes once when a button is pressed continuously, it indicates that the Remote Battery is low..

