

**eonon**



**Model:D1301**

## **User Manual**

Please read this manual before using and  
save this manual for future reference.



Thank you for buying this product, please read through these operating instructions, so you will know how to operate your model properly. after you have finished reading the instructions, put them away in a safe place for future reference .

## CONTENTS

<b>CONTENTS</b>	1
<b>PRECAUTIONS</b>	2
<b>FRONT PANEL</b>	4
<b>SYSTEM MENU</b>	6
<b>REMOTE CONTROL</b>	14
<b>BASIC OPERATION</b>	18
<b>RADIO OPERATION</b>	19
<b>BLUETOOTH OPERATION</b>	22
<b>TV OPERATION</b>	25
<b>DVD/VCD/CD OPERATION</b>	26
<b>SYSTEM SETUP</b>	29
<b>MP3 OPERATION</b>	34
<b>IPOD OPERATION</b>	36
<b>INSTALLATION</b>	37
<b>TROUBLE SHOOTING</b>	39
<b>CABLE CONNECTION</b>	41
<b>ACCESSORIES</b>	41
<b>SPECIFICATION</b>	42

**IMPORTANT:** Please adjust screen to make the touching effect function best when you initiate the unit for the first time.

For the details, please refer to the operation at Page 13.

**NOTE:** Due to the continuous product improvement, specifications and design are subject to change without prior notice.

## **PRECAUTIONS**

### ***Notes on Installation***

The unit is designed for 12VDC,negative ground operation system only. Before installing the unit, make sure your vehicle is connected to DC12V negative ground system.

Be sure to connect the color coded leads according to the diagram.Incorrect connections may cause the unit to malfunction or damage the vehicle's electrical system.

Be sure to connect the speaker (-) leads to the speaker (-) terminal.

Never connect the left and right channel speaker cables each other or to the vehicle body.

Make sure all the connections are completely correct before turning on your unit. When replacing the fuse(s), the re-placement must be of the same amperage as shown on the fuse holder.

Do not block vents or radiator panels. Blocking them will cause heat to build up inside and may result in fire.

After completing the installation and beginning to play the unit (including replacing the battery),please remove the guard against theft front-panel at first, and then press **RESET** button on the base with pointed object (such as ball-point pen) to set the unit to initial status.

## PRECAUTIONS

This unit can play the following discs only:

Type of disc	Label on the disc	Recorded material	Size of disc
DVD		Sound and moving pictures	12cm
VCD		Sound and moving pictures	12cm
CD		Sound only	12cm
MP3		Sound only	12cm

**NOTE: The unit is compatible with VCD1.0/2.0/3.0 version and DVCD disc.**

\*Do not attempt to modify the unit, modifying the unit may cause an accident.

\*Stop the vehicle before carrying out any operation that could interfere with your driving.

\*Do not work in extremely high or low temperature. Be sure the temperature inside the vehicle is between +60° C and -10° C before turning on your unit.

\*To enjoy optimum sound and images while playing, handle the discs as follows:

—Handle the disc by its edge to keep the disc clean, and do not touch the surface.




—Do not use your CDs with paste residue or ink attached.



—Do not use CDs with labels or stickers attached, which may leave a sticky residue while beginning to peel off. (Shown as the picture)




—Clean the discs with an optional cleaning cloth. Wipe each disc from the center out. (Shown as the picture)

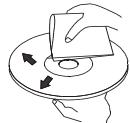

**eonon**

**FRONT PANEL**

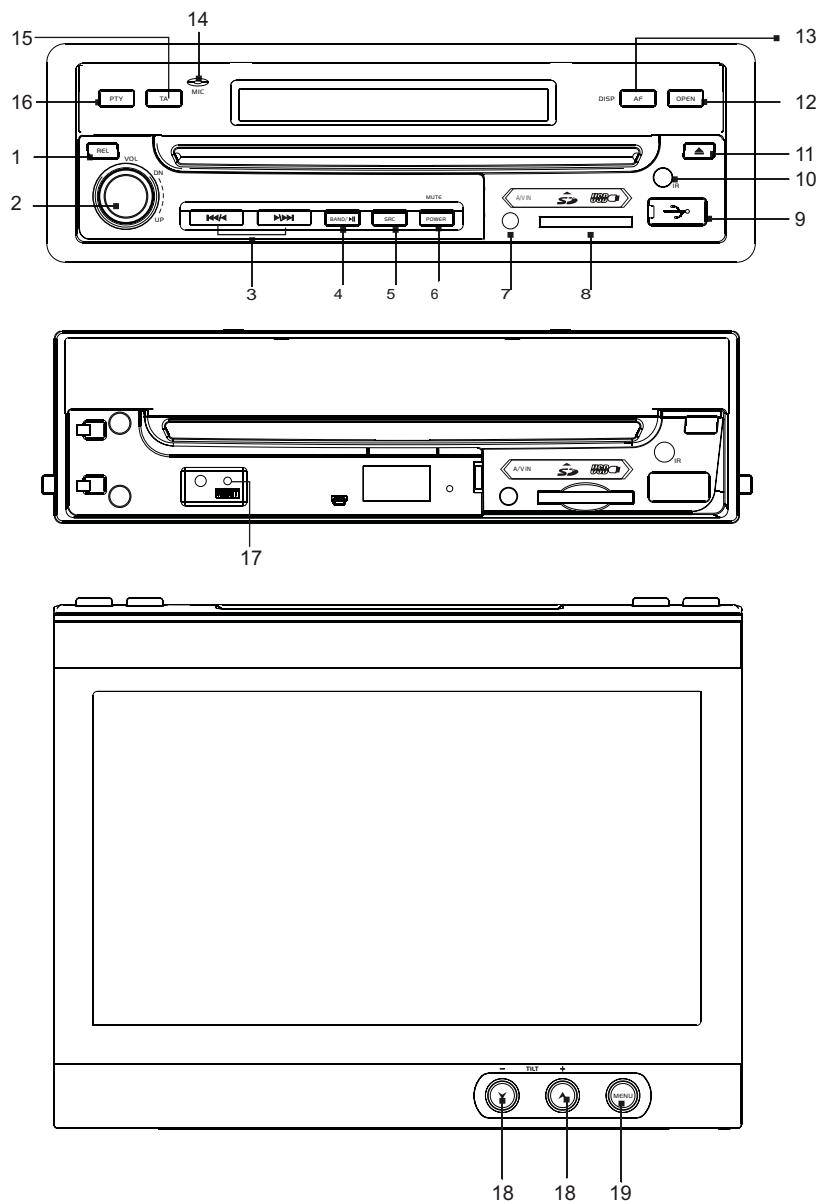

## **FRONT PANEL**

- 1.REL:Press to open the guardagainst theft front-panel.
- 2.VOL:Rotate VOL button clock wiseto increase the volume level; and rotate VOL button anticlockwise to decrease the volume level.  
Press the button to select one of the audio control:L-front/R-front/L-rear/R-rear/Subwoofer/Bass/Middle/Treble/TILT/Volume.  
Rotate the button to adjust the selecteditem
- 3.◀◀/◀/▶/▶▶ :In radio mode, long press switches to manual seek station .  
Short press switches to automatic.  
In playback mode, short press to select previous or next track or chapter.  
Long press will perform fast reverse or fast forward.
- 4.▶⏸/BAND: Press to pause or play playback mode.  
In radio mode, press to change current band.
- 5.SRC: Press to switch sources.
- 6.POWER/MUTE:Press to turn on the unit, press and hold the button for 1 second or longer to turn off the unit. In power on, press to shut off the sound output, press it again to resume previous sound.
- 7.A/V IN: Insert the A/V cord, then press PWR/SRC button to selectAUX1 source.
- 8.SD slot: Insert SD card, the unit will play the files of SD card automatically.  
NOTE: Once the SD card could not eject automatically after pressing, just pull it out manually .
- 9.USB slot: Insert USB device, the unit will play the files of USB automatically.
10. IR window
11. ▲:Short press to eject a disc.
12. OPEN: Press to open or close the TFT panel.
13. DISP/AF: in radio mode, press to turn the AF function on/offpress and hold to display the current time ,source of the front and rear display and media (Disc,USB,SD)available.
14. MIC
15. TA: In radio mode, press to turn the TA function on /off
16. PTY: press to switch PTY program type
17. RESET: press to return to the initialization
18. ⌂/⌂(TILT):Press to set the angle of TFT panel.
19. MENU:In DVD mode, press to display DVD SETUP menu;  
Long press or press in other mode to display SYSTEM SETUP menu.

**SYSTEM MENU**

The users can perform operation by touching screen directly.

**Radio Operation****1. BACKLIGHT**

Turn on /off the backlight.

(The function can be used to change the screen brightness while travelling at night)

**2. SOURCE**

To display the SOURCE screen

**3. Station preset button**

To display the preset station list

(touch one of the station preset button to recall the radio which stored on the position;  
long touch to save the current frequency into the station)

**4.BAND**

To switch bands.

**5.LOC**

To select strong or weak stations reception

**6.EQ**

To select a preset equalizer mode.

**7.LOUD**

To switch LOUD control function on/off

**8.PAGE 1**

To switch to RDS operation page.(Refer to “RDS Operation” for detail)

**9.SEEK-/SEEK+**

To seek a station automatically,


To seek a station manually(long touch).

**10.AMS**

To browse preset stations.

To search and store stations automatically(long touch).

## RDS Operation

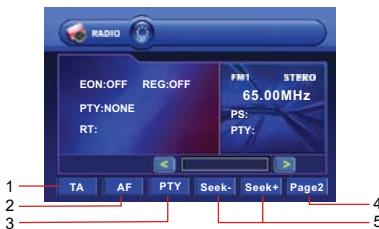

### 1.TA

To turn on /off TA function

### 2.AF

To turn on /off AF function

### 3.PTY

To switch RDS program type

### 4.Page2

To switch to radio operation page.

### 5.SEEK-/SEEK+

To seek a station automatically.

To seek a station manually(long touch).

### EON(Enhanced Other Networks)

**ON:** Active the EON function, the receiver automatically tunes in the station that broadcasts the traffic information when it occurs, After broadcasted ,the unit will automatically return to the original source play before the traffic information broadcast began.

**OFF:** Deactive the EON function

### REG(Regional)

**ON:** Active the REG function, the unit automatically keeps receiving the related RDS station.

**OFF:** Deactive the REG function

## Multi-- Player Operation

In DVD mode, the touching screen display as following after touching at random position.



**1.PLAY**

To start the playback.

**2.PAUSE**

To pause the playback.

**3.STOP**

To stop playing, touch twice to stop completely.

**4.MENU**

To display the DVD SETUP screen.

**5.PREV/NEXT**

To select previous/next chapter or tracks.

**NOTE: Touching the left middle position twice to display the TITLE MENU selection screen, touching the right middle position twice to display the ROOT MENU selection screen, touching the right top position to display the number keyboard. You can select chapter(track) by pressing the touchable screen or the RC.**

---

## Bluetooth Operation


---

### Hands-free phone Operation



1. to display the Bluetooth main screen
2. to display the phone book screen
3. to display the Bluetooth steup screen
4. to display the source selection screen
5. **dial number list**
6. **To dial a call**
7. **To clear the inputted telephone number**
8. **To hang up a call**
9. **To transfer calling audio output mode**

### The phone book screen

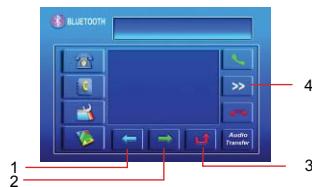

1. To display a telephone number list of the received calls
2. To display a telephone number list of the dialed calls
3. To display a telephone number list of the received but you missed
4. To change the list page

### The Bluetooth Setup screen



1. To connect the Bluetooth device
  2. to pair up the Bluetooth device.
  3. To disconnect the Bluetooth device
  4. To reset the unit if there is something wrong with the Bluetooth function.
  5. Playback/pause
  6. To stop playback
  7. To find the begin of the last or next track
  8. To adjust the volume
- The touching button(from 5 to 7) are available if the A2PD function is activated***

**TV Operation****1.channel preset button**

To display the preset channel list

Touch any one of the list to watch the TV which stored on the position

Touch and hold any one of the list to stored the current channel frequency on the position

**2.CH-/CH+**

To switch the preset channel list downward or upward.

**3.AMS**

To search and store channels automatically

**4.PAL-I**

To switch output system

**5.Ant-1**

To switch the receiving antenna

**6.SYS**

To display the system setup screen.

**7.SEEK-/SEEK+**


To seek a channel automatically

To seek a channel manually(long touch)

**Setup Operation**

*TOUCH ON THE TOP LEFT POSITION TO ENTER SOURCE INTERFACE.*

*The unit will return to previous mode display screen if any operation is not perform in 5 s.*

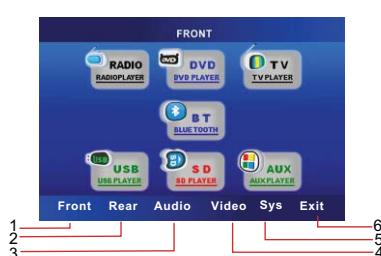

**1.Front**

To display the source selection screen.



Touch the item to select source displayed on the unit screen.

**2.Rear**

To select a source which display on the rear monitor



\* It is unavailable in AUX or TV mode.

\* If another monitor(rear)is connected to the unit,image/audio of the rear monitor can be changed from the unit,so you can enjoy separate image/audio in the rearseats.

\* The unit will output corresponding source sound through REAR-VIDEO-OUT or DUAL-AUDIO-OUT

**3.Audio**


Touch on the AUDIO button and the screen will display as following:



In this menu, there are items of Volume, L-front,R-fornt, L-rear, R-rear , Subwoof, Bass, Middle and Treble can be adjusted. Touch on the  $\blacktriangle$   $\triangleright$  button to adjust each item and touch on  $\blacktriangle$   $\blacktriangledown$  button to turn pages and select the item listed above.

**4.Video**

Press on the VIDEO button and the screen will display as following:

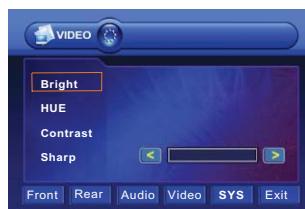

In this menu, there are items of Bright, Hue, Contrast, Sharp can be adjusted. Touch on the item that need adjusted then touch on the   button to adjust.

**5.SYSTEM**

To display the system setup screen. *Refer to “system setup operation” for detail*

**6.EXIT**

To return to current source screen.

**SYSTEM SETUP OPERATION****Clock Sys**

Set the time display mode(12H/24H)

**Key Beep**

Turn on/off the sound guide function

ON:activate the sound guide mode

OFF:deactivate the sound guide mode.

The sound guide beep will not be produced when a button on the unit is pressed.

**Local Area**

Touch the provided option to change the radio frequency for different country.



Touch the provided option to adjust the bass freq, middle freq, treble freq.



Touch the provided option to change the subwoofer ,the bass and middle quality factor.



#### **Clock Adjust**

Adjust the time by touch ⇠ ⇢ ⇣ ⇤

⇠ ⇢ To select item your want to set(hour、 minute、 second)

⇣ ⇤ To change the display number

#### **Night Lum (dimmer)--in half-night mode**


The function to select the backlight brightness.(normal status's 20%,40%,60%,80% )

#### **Touch Adjust**

When the display position on the screen and the touch position on the touch panel not match, or using the product at first time, the adjustment becomes necessary.



Accurately touch the mark provided in the screen for more than 2 seconds until the “adjust succeed” is displayed .

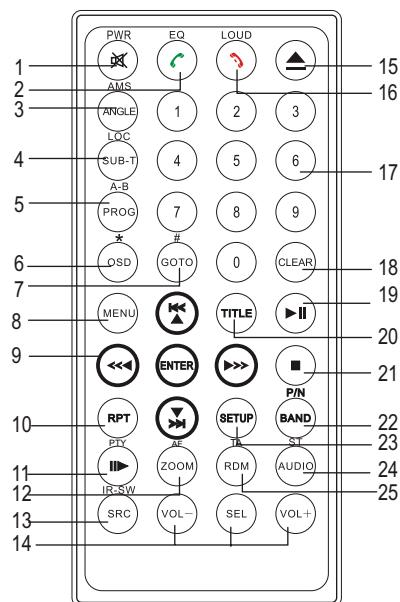**REMOTE CONTROL**

- |                                   |                       |                   |              |
|-----------------------------------|-----------------------|-------------------|--------------|
| 1. PWR/                           | 2. EQ/                | 3. ANGLE/AMS      | 4. SUB-T/LOC |
| 5. PROG/A-B                       | 6. OSD/ *             | 7. GOTO/#         | 8. MENU      |
| 9. [◀◀/▶▶][◀◀/▶▶] [▲/▼/◀/▶]/ENTER |                       | 10. RPT           | 11. ▶▶/PTY   |
| 12. ZOOM/AF                       | 13. SRC/IR-SW         | 14. VOL-/SEL/VOL+ | 15. ▲        |
| 16. LOUD/                         | 17. 0-9 Number button | 18. CLEAR         | 19. ▶▶       |
| 21. ■                             | 22. BAND/P/N          | 23. SETUP         | 20. TITLE    |
|                                   |                       | 24. AUDIO/ST      | 25. RDM/TA   |

## REMOTE CONTROL

### **Installing the battery**

Slide the tray out on the back of the remote control and insert the battery with the plus (+) and minus (-) poles pointing in the proper direction.



### **Use and care of the remote control**

Point the remote control in the direction of the front panel to operate to use it.

#### **Notes:**

Using batteries improperly can cause them to explode. Take note of the following points:

- \* Keep the battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.
- \* Use one CR2025(3V)lithium battery.
- \* Remove the battery if the remote control is not to be used for a month or longer.
- \* Do not short-circuit, disassemble or heat batteries.
- \* Do not dispose of batteries into fire or flames.
- \* Dispose of spent batteries properly.
- \* Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedals.

**REMOTE CONTROL****1. POWER/**

Press the button to turn on the unit;Press and hold for 1second or longer to turn off the unit. In power on,press to mute the device. Press it again to resume previous sound level.

**2. EQ/**

Press to select the corresponding preset modes to adjust the sound quality.

In bluetooth mode, press this button to dial up a call.

**3. ANGLE/AMS**

Press to change the viewing angle in DVD mode;In radio mode, press to browse each stored station .Long press to scan and store station automatically.

In TV mode, long press the button to scan and store channel automatically, press it again to stop scanning.

**4. SUB-T/LOC**

In DVD playback mode, press to change the subtitle language;In radio mode, press to select strong or weak station reception.

**5. PROG/A-B**

In DVD/VCD/CD mode, press to set the program order to play;In playback mode, press and hold to play the section of selected chapter/track repeatedly .

**6. OSD/\***

In playback mode, press to display the playback information; In other mode, press to display the current time, the set source output through the front and rear display, the current available drive.(Disc/SD/USB);In bluetooth mode, press to function as\* button on your mobile phone functions .

**7. GOTO/#**

In DVD mode, press the button and the cursor button to select TITLE、CHAPTER、AUDIO、SUBTITLE、ANGLE、TT TIME、CH TIME、REPEAT、TIME DISP.Then press ENTER button to set the value.

In VCD mode, press GOTO button and cursor button to select TRACK、DISC TIME、TRACK TIME、REPEAT、TIME DISP.Then press ENTER button to set.

In CD/MP3 mode, press GOTO button to select "Disc Go To:\_:\_:\_"、"Track Go To \_:\_:\_:\_"、"Select Track:\_:\_:xx". Then press 0-9 number buttons to set the track you want.

In bluetooth mode, press this button to function as # button on your mobile phone functions .

In radio mode ,press the button and the number button to set the frequency.

In TV mode ,press the button and the number button to select a channel

**8. MENU**

Press to return to the root menu in DVD mode.

In radio mode,press to switch between radio main screen and RDS screen.

**9. [◀◀ / ▶▶][▲/▼/◀/▶]/ENTER**

In playback mode perform [fast reverse/fast forward][previous track/next track][upwards/downwards/leftwards/rightwards]; press ENTER to validate.

**10. RPT**

In playback mode, press to select a repeat mode.

**11、II▶ /PTY**

In radio mode, press this button to switch to RDS program type.  
In DVD/VCD mode, press to play slowly

**12、ZOOM/AF**

In radio mode, press this button to function AF on/off.  
In DVD/VCD mode, press to increase or decrease the picture in size.

**13、SRC/IR-SW**

Press the button repeatedly to switch sources. Press and hold this button to change the IR to control front or rear source. (\*It is disable when rear source shut off.)

**14、VOL-/SEL/VOL+**

Press VOL-/VOL+ to adjust volume.  
Press SEL to select one of the control item:L-front/R-front/L-rear/R-rear/Subwoof/Bass/Middle/Treble/Angle/Volume. Then press VOL+/- to adjust each item.

**15、▲**

Press to eject a disc

**16、LOUD/♪**

Press this button to activate LOUD function.  
In bluetooth mode, press this button to hand down your calling.

**17、(0-9)NUMBER BUTTON**

In radio(TV) mode, press the number button to select a corresponding preset station (channel)  
In DVD/VCD/CD mode, press to select any chapter or track directly.  
In bluetooth mode, press to input the telephone number.

**18、CLEAR**

Press the button to clear the erroneous number what you import.

**19、▶||**

Press to pause playing and press again to resume playing.

**20、TITLE**

In DVD mode, press the button to return the title menu.  
In VCD mode, press this button to turn on/off PBC function.

**21、■**

Press to stop playback.

**22、BAND/P/N**

In radio mode, press to select bands.  
In DVD/VCD mode, press P/N button to select PAL, AUTO or NTSC.

**23、SETUP**

In playback mode, short press to display DVD setting, long press in DVD mode and press in other modes will display system settings.

**24、AUDIO/ST**

In DVD mode, press to change the audio language.  
In VCD mode, press to change the channel mode.  
In radio mode, press to select stereo or mono reception.

**25、RDM/TA**

In radio mode, press this button to function TA on/off.  
In playback mode, press to play tracks in a random order.

## BASIC OPERATION

### 1. Reset the Unit

Operating the unit for the first time or after replacing the car battery, you must reset the unit. Press RESET button on the head unit with a pointed object, (such as a ballpoint pen) to set the unit to initial status.

\*This function can only be operated by the head unit.

### 2. Turning the Unit On/Off

Press PWR/  button on the remote control to turn on the unit. N unit ON, when insert a disc, the unit will automatically start playing. Long press it to turn off the unit completely. *Pressing POWER/MUTE button on the front panel also performs the same operation.*

#### Note:

After the unit is off, the volume level is memorized during the area between 0 and 30. If it is set less than 6, it will resume to 6; if the set volume level is higher than 30, it will resume to 30; if it is between 6 and 30, it still stores in the status which you set.

### 3. Volume Control

Press VOL+ button on the remote control to increase the sound level and press VOL- button on the remote control to decrease the sound level.

*Press (VOL+ or VOL-) on the front panel also performs the same operation.*

### 4. Setting the Sound Characteristics

Repeatedly press SEL button or press SEL button on the remote control to select the desired mode in the following order:



#### Note:

\* After selecting the desired mode, you can adjust the current level by press the-/+ button or pressing VOL-/VOL+ buttons on the remote control.

\* after adjusting the Angle item, the unit will memorize the angle of the panel.

\* If you don't adjust VOL button in 3 seconds after selecting the desired mode, the function will be cancel.

 
### 5. Mute Function

Press PWR/  button to shut off the sound output. "MUTE" will be displayed on the screen. Press it again to resume to previous volume level.

*Press PWR/MUTE button on the panel also performs the same operation.*

### 6. EQ Setting

While listening to the popular music, classic music or rock music, you can select the corresponding preset modes to adjust the sound quality perfectly by using EQ button on the remote control. Repeatedly pressing EQ button to choose the following modes in turn:

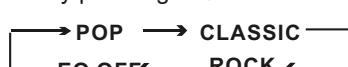

## RADIO OPERATION

Selecting the radio mode, the TFT display as the follow:



### 1. Band Selector

In radio mode, repeatedly press BAND button on the remote control to select a band in the following order:



*\*Pressing BAND on the touchable screen or on the panel also performs the same operation.*

### 2. Manual/Automatic Tuning

- (1). Automatic Tuning: Press **◀▶** button on the remote control to search for a station in the direction of lower frequency or higher frequency.
  - (2). Manual Tuning: Press and hold **◀** or **▶** button repeatedly to move downward or upward one step respectively until the desired station frequency is displayed.
- \*Press (press and hold) **◀▶** button on panel also performs the operation*

### 3. Recalling a preset station

A total of 30 preset stations (18-FM, 12-MW) are available in memory.

Press **◀▶** button on the remote control to recall a preset station.

The display shows the preset number and frequency of the stored station, touch one of these to select a corresponding station to listening

*\*Press any one of the station preset button on the remote control also selects preset station.*

### 4. Automatic/Manual Store

Auto store is a function for storing up to 6 stations.

- (1) select the desired band
- (2) hold down AMS button, the stations with good reception are stored automatically.

Manual store: turn in a station you wish to store in the preset memory, press and hold any one the preset buttons (1-6) that you want to store on.

*\*If you store a station in a preset memory which already has a station the current station will be cleared and replaced with the new station.*

### 5. DX/LOC Selector

In radio mode, press LOC button on the remote control to select strong or weak station reception.

- (1). It is set to LOC mode when LOC button is first pressed. "Loc:ON" appears on the screen and only strong signal station will be tuned.

(2).It is switched to DX mode when Loc: OFF is pressed again. Both strong and weak stations can be received.

**Note:**

\* The initial mode is DX mode.

#### **6.MO/ST Selector**

In FM of radio mode, you can press ST button on the remote control to select **Mono** mode or **Stereo** mode.

#### **RDS (RADIO DATA SYSTEM) OPERATION**

The RDS allows you to receive a variety of information such as traffic information, station names, and to automatically retune to a stronger transmitter that is broadcasting the same programme.

##### **Tips**

The RDS digital data includes the followings:

PI Programme Identification  
PS Programme Service Name  
AF List of Alternative Frequencies  
TP Traffic Programme  
TA Traffic Announcement  
PTY Programme Type  
EON Enhanced Other Networks

##### **Turn on/off the AF function**

\* Press AF button to switch on/off AF function  
\*the tuner will search for a station with RDS information  
\* The tuner will retune frequencies whenever the reception signals getting worse.

##### **Receiving Traffic information**


1.Press the TA button to switch on TA mode.  
2.The unit search for traffic information station automatically.when a traffic information station is tuned in,the TP mark display on touchable screen.If you do not want to listen to the traffic information being received,press TA button to skip that traffic information message.the TA function will remain in the ON position.and the unit will be back to previous mode.  
3.Press it again to switch off TA mode.

\* Traffic information is heard only when it is being broadcast.

*In other mode,Traffic announcement can interrupt the source sound output when broadcast.  
After broadcasted ,the unit will automatically return to the original source play before the traffic information broadcast began.*

### **PTY(Programme Type) Tuning**

The PTY function allows you to search for stations with a particular Program Type. Touching Page1 button on the radio display screen to switch to the RDS screen

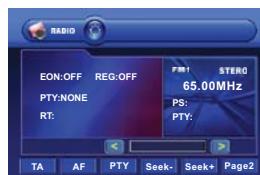

1. Press PTY button on touchable screen or on the remote control to select a programme type. After selecting the programme type for 3 seconds, the unit will search for a station in the selected programme type.

\*If the PTY station is found, the tuner will be stop searching.

\*If the PTY station is not found, "No Pty" will be display on the screen.

All types for your selection are listed in table as below::

NEWS	ROCK MUSIC	PHONE IN
CURRENT AFFAIR	M.O.R. MUSIC	TRAVEL
INFORMATION	LIGHT CLASSIC	LEISURE
SPORTS	SERIOUS CLASSIC	JAZZ MUSIC
EDUCATION	OTHER MUSIC	COUNTRY
DRAMA	WEATHER	NATIONAL
CULTURE	FINANCE	OLDIES
SCIENCE	CHILDREN	FOLK
VARIED	SOCIAL AFFAIR	DOCUMENTARY
POP MUSIC	RELIGION	TEST → ALARM

***An emergency broadcasting(ALARM) will broadcast automatically and produce the beep sound when it is received. The sound output through other source will be muted.***

## BLUETOOTH OPERATION

### HANDS-FREE PHONE

The unit is compatible with Bluetooth international standard wireless communication technology. You can place a hands-free call by using a Bluetooth compatible with the mobile phone.

\*When you place a call, speak loudly and clearly.

\*Shut the windows before calling.

\*It is normal that some unnatural voice may be heard during your calling which may be caused by the conditions of the signals or the one who use the mobile phone.

\*Due to some special mobile phone, you may not be able to use a hands-free phone.

### CONNECTING

selecting BTmode



Press PAIR button on touchable screen  
to turn on the par function  
Searching for device(EONON) by using  
mobile phone



Selectting bluetooth device  
(EONON) by using mobile phone  
Input a pass code:1234



The connection is made  
The screen display "CONNECTED"

\*The Bluetooth setting is required for a mobile phone. Read the Owner's Manual of the mobile phone.

\*After paired, the unit can connect with the mobile phone automatically. (in valid range)

\* If the mobile phone and the device are disconnected accidentally, the screen will display Disconnect, just press LINK button on the screen to reconnect (refer to Bluetooth setup).

### Dialling a call

1. Input the number required by pressing number button on the remote control or on the screen then press  button on the screen to dial up.

The telephone number you dialed is appeared on the screen



2. Placing a call by history:

Press  button to switch to PHONE BOOK screen. You can place a call by selecting a person from a list of received calls, dialed calls or missed calls.

*A maximum of 16 numbers can be stored in each call history. a maximum of 4 numbers be display in each page, and touch  button to turn to next page.*



### Receiving a Call

When a call is received, a received call sound rings, and the coming call is announced in the display. Press  button on the screen to starts the call.

### Hanging up a Call

Press  button on the screen to finishes the call.

\*Press  /  button on the remote control also perform dial(receiving) a call or hang up a call function

\*The incoming call will interrupt the sound output through other source, and switch to the hands-free phone screen automatically when it is received.

After the call is over, the unit will be back to previous mode.

\* The hands-free phone sounds output through the built-in speakers. When calling, press Audio Transfer button on the screen to switch the mode to receive a call by using mobile phone, and press it again to return to hands-free mode.

**BLUETOOTH AUDIO FUNCTION**

Audio information of a bluetooth compatible mobile phone, portable player, etc., is by wireless controllable/playable from the unit.



Refer to "CONNECT" to connect bluetooth audio devices.

Refer to bluetooth setup(PAGE6) for operation

\*video playback is not supported.

\*using remote control also perform same operation


The key of the remote control assigned in Bluetooth audio function:

- |       |                     |
|-------|---------------------|
| ▶     | Play/pause          |
| ◀◀ ▶▶ | Previous/next track |
| □     | Stop playback       |

## TV OPERATIONS

### Selecting mode

Press SRC button on the remote control, on the panel or source selection touchable screen to select TV mode.

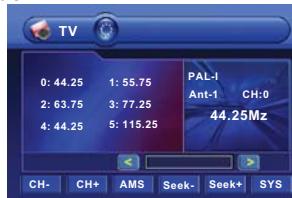

### Searching a channel

Automatic tuning:

Press **◀▶** buttons on the panel, or **◀▶** buttons on the remote control or SEEK-/SEEK+ buttons on the touchable screen to start auto searching the channel downward or upward.

Manual tuning:

Press and hold repeatedly **◀▶** buttons on the panel, **◀▶** buttons on the remote control or SEEK+/SEEK- buttons on the touchable screen to start manual searching the channel downward or upward.

### To Store a station automatically

Press and hold AMS button on the remote control or press AMS on the touchable screen. The unit will search for channels and store them under preset numbers in order of signal strength.

### Selecting channel

1. Press **◀▶** on the remote control to select previous or next stored channel.
2. You can Press(1-9) number button directly on the remote control to select preset channel. To select more than 10 channel number, firstly press GOTO button, then press the corresponding number buttons.
3. Press the needed channel number on the touchable screen. To select a page containing the needed channel number, press CH-/CH+ buttons on the screen.

### Selecting TV system

Press repeatedly PAL-I button on the touchable screen to change the TV system for different country.

### Note:

**When the TV channel picture is being broadcasted, touch the screen to return to the TV mode menu. The TV mode menu will be concealed when any operation is not performed within 5seconds.**

## DVD/VCD/CD OPERATIONS

 
### Loading a disc

1. Press **▲** button to open the front panel
  2. Insert a disc into the Disc slot, the unit switch to the DVD mode automatically
- \* You can eject a disc by pressing **▲** button on the unit

### **Quick track selection fast forward/fast reward playback**

During playback mode, press **◀◀/▶▶** button to select next/previous chapter or track.  
\*Press **◀◀/▶▶** button on the unit also perform the same operation.

Press the **◀◀ / ▶▶** button on the remote control to perform fast reward or fast forward.  
Repeatedly press the button, the options switch as follows order:

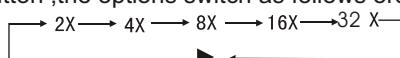

\*Press the **◀◀/▶▶** button on the unit for long time will perform the same function.

### **Stop the playback**

Press **■** button to stop playing, then press **ENTER** button to play the current chapter or track, press **■** button twice to stop playing completely, then press **ENTER** button to play the beginning of disc.

### **Pause the Playback**

Press **▶▶** button to pause the playback, press it again to return to normal playback.  
\*Pressing **▶▶** button on the front panel also perform the same operation.

 
### **Playing Tracks in Random Order**

During DVD/VCD/CD playback, press **RDM** button, “RANDOM” will appear on the display, the unit plays any track at random and the number selection is de-available.  
Press it again to return to normal playing.

### **Repeat Playing**

In playback mode, press **RPT** on the remote control to perform replaying function when you need to repeat the chapter you like.

During DVD playback, the replay option change in following order:

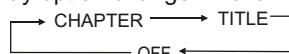


During VCD /CD playback, the replay option change in following order  
**TRACK** ————— **OFF**


\*The default setting is disc repeat

### **Slow motion playback**

 In DVD mode, press **■■** repeatedly to slow forward or slow reward, as follows:

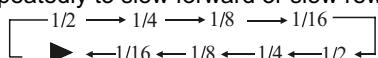

 
In VCD mode, press repeatedly to slow forward in following order.

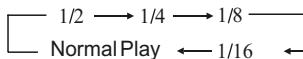

*This function is operated by using the remote control.*

#### **Increase or decrease the size of the picture**

 
During DVD/VCD playback, press ZOOM button to increase or decrease the picture size. There are 6 sizes, and press the button repeatedly to change the size in following order

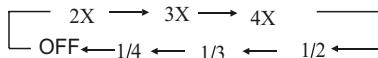

*\*This function is operated by using the remote control.*

#### **Selecting the channel mode(VCD mode)**

 In VCD mode, press the AUDIO button on the remote control repeatedly to select the channel mode in the following order:

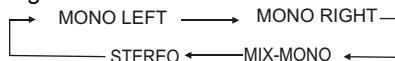

#### **Programmed playback**

In DVD/VCD/CD mode, press the PROG button and the program menu will be displayed. Press the number buttons to select the track number. Use the direction buttons to move the cursor to START and press ENTER to start programmed playback. Move the cursor to EXIT and press ENTER to exit the programmed playback. Move the cursor to PREV and press ENTER to go to the last page; move the cursor to NEXT and press ENTER to go to the next page. During this process, press PROG to cancel the programmed playback.

*\* This function can only be operated by using the remote control.*

#### **Changing the subtitle language(Multi-subtitle)**

With DVDs featuring multi-subtitle recordings. You can press SUB-T to switch between subtitle languages during playback.

Selection options switch as follows:

Subtitle 01 — Subtitles 2 — Subtitles OFF

#### **Notes:**

- \* This function only operates with DVDs featuring multi-subtitle recordings.
- \* This function is operated by using the remote control.

#### **Changing the audio language**

DVDs can provide audio playback with different language. With DVDs featuring multi-audio recordings, you can press AUDIO button to switch between language and audio systems during playback. Selection options switch as follows:

Audio 01 — Audio 02

- \* This function only operates with DVDs featuring multi-audio recordings.
- \* This function is operated by using the remote control.

### **Selecting different title (DVD mode)**

For DVD disc, you can press TITLE on the remote control to return the top menu of the disc, and you can select different chapter or title upward or downward by using **▼** or **▲**.

*\*Touching the screen also perform the same function(refer to page 7 “Multi-player operation” for detail).*

### **Selecting root menu(DVD mode)**

For DVD disc, you can press MENU to select different root menus, and then press **[▲][▼][◀][▶][ENTER]** buttons to enter the sub-menus. With pressing **[▲][▼][◀][▶]** buttons, and the number buttons, and then ENTER button to select and enter what you desired.

### **Setup menu**

In DVD/VCD/CDmode, press SETUP, the screen will display system setting picture, the user can select some relative constant parameters. The user also can set it as needed by moving the cursor and using **[▲][▼][◀][▶]** buttons, and then press ENTER to execute the selecting or entering item.

*\*This function is operated by using the remote control.*

Notes:

- \* The selections are the preferred options that will be chosen if they are available on a disc. If the disc that is inserted does not have the preferred option then the discs own preference will be used.
- \* Regarding SETUP MENU, please refer to the following pages for more details.
- \* Some functions varies depending on the types of models or formats of the disc.

### **Auto switch to video**

When playing DVD in driving car, there is “Attention: Can't use function When driving” display on screen. Just braking car, the screen can switch to video automatically.

### **Auto switch when revering the car**

The unit can switch to the radar of revering the car automatically, when revering the car.

## SYSTEM SETUP


When you press **SETUP** button on the remote control, or press **SETUP** button on the screen, the setup menu will be displayed. It include General Setting, Audio Setup, Preference, Password Setup and Exit Setup menu.

1. Within the setup menu, you can use **[▲][▼][◀][▶]** buttons on the remote control to move the cursor, and then press the **ENTER** button to make your selection. Press **[◀]** can return to the previous menu.
2. To exit setup menu, you can select the **EXIT** item in sub-menu or press **SETUP** button.

*Note: touching the item on the screen also performs same operation.*

### 1. GENERAL SETUP PAGE

#### 1.1 TV DISPLAY

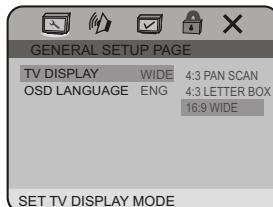


The TV Display which select the different ratio of display format and the screen of TV, There are various types of display on screen for different matches between Disc and TV

**Note:**

- No matter which display format is selected, a picture recorded in standard 4:3 format always displays in the 4:3 aspect ratio.
- The display format of DVD titles may vary; please refer to the information that accompanies your specific DVD title.
- If the DVD title is recorded in 16:9 wide display format while the TV is a standard 4:3 screen, horizontal compression of the image will result.
- Some DVD titles may be recorded in special formats. In such cases, the DVD titles will always appear on the screen in their original format, regardless of which TV display format you select.

#### 1.2 OSD LANGUAGE


**On Screen Display(OSD)Language:** Users can select the on-screen display language.

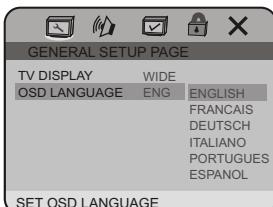


**eonon**

## 2. AUDIO SETUP PAGE

User can select digital audio setup or dolby digital setup.

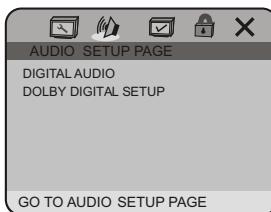

### 2.1 DIGITAL OUTPUT SETUP

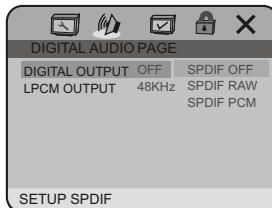


- **SPDIF OFF**: An analog surround sound format is output through the back-panel connections for L,R,LS,RS and centre speakers, and the subwoofer simulation

- **SPDIF RAW**: outputs the analog surround sound format and digital audio signal

- **SPDIF PCM** :outputs the digital audio signal only.

### 2.1 DOLBY DIGITAL SETUP

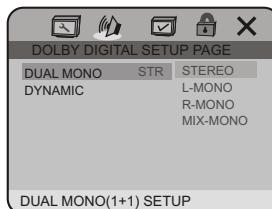

**DUAL MONO**: User can switch the binaural mode


**DYNAMIC**: Select the provided option to change the Dynamic range setting.

## 3. PREFERENCE SETUP PAGE

The preference setting is active only when disc has been stopped completely, and the setting is effective on next time power on till exchanging the saved setting.


### 3.1 AUDIO

**AUDIO**: Sets the preferred audio language as the default when playing DVD. (If DVD support these languages)

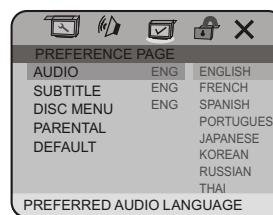


### 3.2 SUBTITLE

**SUBTITLE:** Sets the preferred subtitle language as the default when playing DVD.(if DVD support these languages)

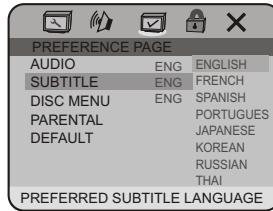

### 3.3 DISC MENU

**DISC MENU:** Sets the preferred menu language as the default when playing DVD.(if DVD support these languages)

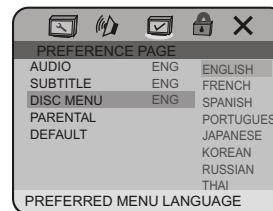


### 3.4 PARENTAL

**PARENTAL:** The parental control function works in conjunction with the different censorship classes assigned to DVDs. These classes help to control the types of DVDs that the family watches, There are up to 8 censorship classes for DVDs.

**Note:**

- The PARENTAL is changeable when 4.1 PASSWORD MODE set to **OFF**.
- After setting the level of parental control, please set the password as **ON** to perform the lock of changing.

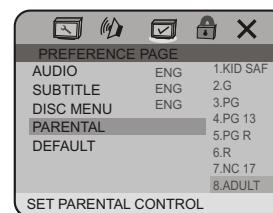

### 3.5 DEFAULT

**DEFAULT:** Resets to the initial factory setups.Press ENTER button to confirm

eonon



#### 4. PASSWORD SETUP PAGE


##### 4.1 PASSWORD MODE

**PASSWORD MODE:** Sets the function operation to locking the parental function

ON:Using the parental control must input the password


OFF:You can not input the password to change the parental control.

\* The initial password is 136900

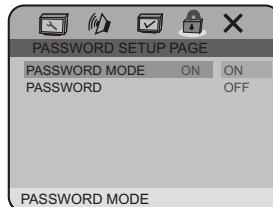


##### 4.2 PASSWORD CHANGE

**PASSWORD CHANGE:** You can change the password, please type 6 numerals as new password.

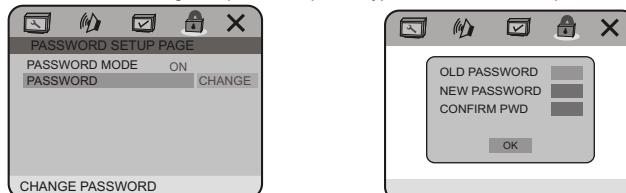

*Note: Touching the position where inputting password, the screen will display the number button, and user can input the password by touching number button*

#### 5. EXIT SETUP MENU

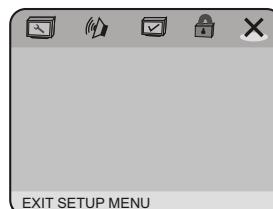

Moving the cursor to **×** by using direction key on the remote control, then press ENTER button to exit the setup. Touching the **×** to exit directly

### SETTING THE TV SCREEN SIZE

Multi-aspect ratio suit to different TV screen size.

Picture format on Disc	TV Screen Size		
	4:3		16:9
	Pan Scan	Letter-box	Wide Screen
4:3			
16:9			

### Function supported by DVD discs

There are many functions available on DVD discs and the functions vary per player and per manufacturer.

 2	Regional code and signal system	 16:9 LB	Picture proportion modes
 DOLBY DIGITAL	Dolby digital surround sound	 R RESTRICTED	Parent lock
 DTS SURROUND	DTS surround	 4	Angles for viewing
 8	Number of languages	 CC	Closed Caption
 32	Subtitle languages		

## MP3 OPERATION

### Playing a disc, an SD/MMC card or a USB device containing MP3 files

Connect a USB device or insert a disc into the disc slot or SD/MMC card into the card slot. The unit will automatically switch on when a disc, card or USB device is inserted. The screen will display as follow:



Touch the / button on the screen to turn pages.

\*Press / button on the remote control when stop playback also perform the same function

\*You can eject a disc by pressing button on the unit.

### Repeat playing

When playing MP3 files, press the RPT button repeatedly on the remote control to select repeat mode: REPEAT ONE, OFF. While in REPEAT ONE mode, it will play one track repeatedly. The defaulted mode is REPEAT ALL mode, the unit will play all tracks repeatedly.

### Track selection

#### - Skip track backward/forward

When playing MP3 files, press / button on the remote control or press NEXT/PREV button on the touchable screen to go to the previous or next track.

#### - Selecting track by using number button

Selecting any track directly by using Number button(0-9).

To select more than 9 track number, press the corresponding number buttons continuously.

For example, if you want to play the 23th track, just press button 2 and then press button 3 and the corresponding track will be played.

#### Note:

\* This function can be operated using the remote control or touch top right corner of screen to be functioned.

\* If you make a mistake, press CLEAR button to clear.

### **Stop playing**

When playing MP3 files, press ■ button on the remote control to stop playback.

### **Pause playback**

Press the ▶|| button on the remote control or press PAUSE button on the touchable screen while playing, press it again or press PLAY button on the touchable screen to return to normal playback.

### **Fast-forward/fast-backward playing**

Press ▲◀/▶▼ button on the remote control to select the speed of fast playing in backward or forward direction:

► 2× -- 4× -- 8× -- 16× -- 32× -- ► —

*\*Long press ▲◀/▶▼ button continuously on the front panel also perform the same function*

### **ISO FILE OPERATION**

When playing the media with folders, press the ▲◀/▶▼ button on the remote control or PREV/NEXT buttons on the screen to move the cursor to current folder then press ENTER button on the remote control to confirm, and the first track of the current folder will be played.

## IPOD OPERATION

### 1. Playing an IPOD device containing audio and video files

Connect an IPOD device to the USB slot and the unit will automatically switch on to the USB interface. The screen will display as follow:



During MP3 playback, press the **◀◀** or **▶▶** button on the RC or touch on NEXT/PREV button on the screen to select the next/previous track. Touch on the cursors on the screen to turn pages in the folder with more than 6 tracks.

#### Quick track selection

When playing MP3 files, touch on the track directly to go to the playing.

#### Repeat playing

When playing MP3 files, press the RPT button repeatedly on the remote control to select repeat mode: REPEAT ONE, ALL. While in REPEAT ONE mode, it will play one track repeatedly. The defaulted mode is REPEAT ALL mode, the unit will play all tracks repeatedly.

#### The number buttons

Selecting any track 10- directly by using Number button(0-9). For 10+ track, just press on GOTO button on the remote control then enter the relative digits. For example, if you want to play the 23th track, after pressing on GOTO button on the remote control and then press button 2 and then press button 3 and the corresponding track will be played.

Note: This function can be operated using the remote control.

#### PAUSE PLAYBACK

When playing MP3 files, press the **▶▶** button on the remote control or PAUSE button on the screen to pause playing then touch on the PLAY button to resume playing.

#### ISO FILE OPERATION

When playing the IPOD with folders, the unit will play the first track in the first folder automatically. Touch on the STOP button on the touch screen TWICE or the SETUP button on the remote control to enter folders interface.

## INSTALLATION

### Notes

Before finally installing the unit, connect the wiring temporarily, making sure it is all connected up properly, and the unit and the system work properly.


Use only the parts included with unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.

Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.


Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop.

The semiconductor laser will be damaged if it overheats, so don't install the unit anywhere hot--for instance, near a heater outlet.

If installation angle exceeds 30° from horizontal, the unit might not give its optimum performance.

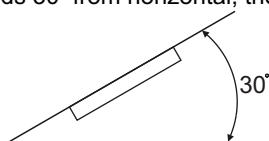


The cords must not cover up the area shown in the figure below. This is necessary to allow the enginery to radiate freely.

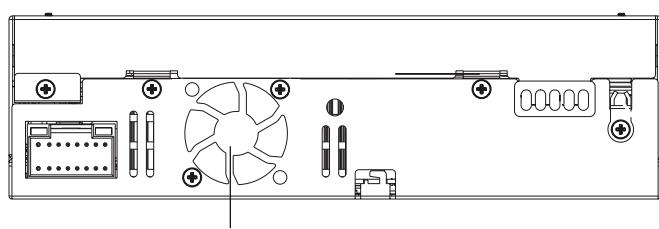


**INSTALLATION**


## Installation Method: DIN Front-Mount

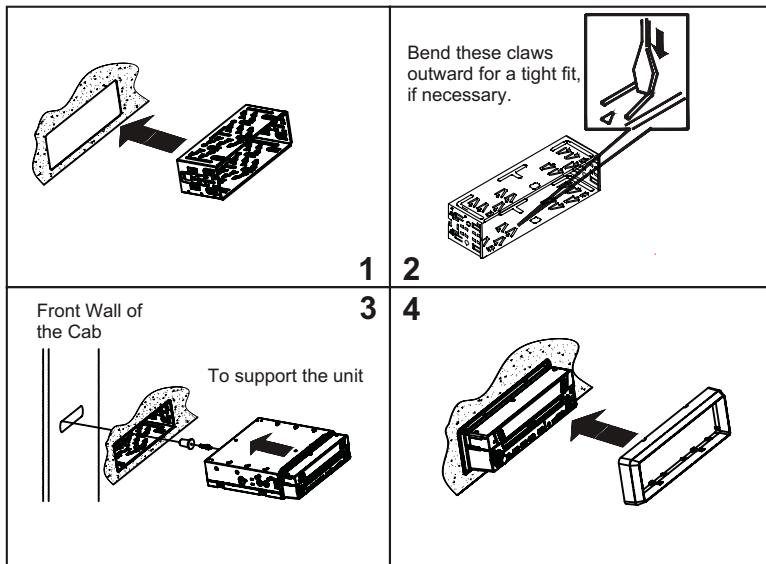**Detach the Unit**

1. Take out the Outer Trim Frame.

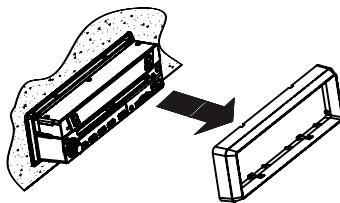

2. Insert the keys supplied to the unit at both sides of the unit (shown as illustrated) until they click. Pulling the keys makes it possible to remove the unit from the dashboard.

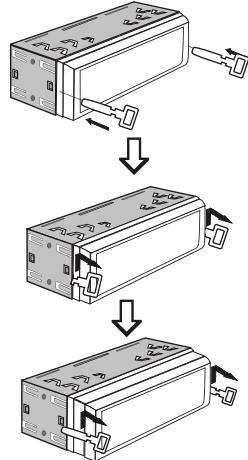

## TROUBLE SHOOTING

## Common problems


Symptom	Cause	Remedy
Power doesn't switch ON . The unit doesn't operate.	Leads and connectors are incorrectly connected	Confirm once more that all connections are correct
	A fuse has blown	Fix the problem causing the blown fuse and replace the old fuse with a new one of the same capacity
	Noise and other factors are causing the built-in microprocessor to operate incorrectly	Reset the unit
Operation with the remote control isn't possible	The remote control operation mode is incorrect	Switch to the correct remote control mode
	Battery power is low	Load new batteries
	Some operations are prohibited with certain discs	Check using another disc
Playback is not possible.	The disc is dirty	Clean the disc
	The loaded disc is a type this unit cannot play	Check what type the disc is
	Non compatible video system disc is loaded	Change to a disc compatible to your video system
There's no sound	Connections are incorrect.	Check connections
	With some discs,96kHz output is prohibited.	Switch the output setting to 48 KHz
	The unit is performing still F.FWD or F.REV playback	There is no sound during still F.FWD , F.REV playback
The prohibited mark $\ominus$ is displayed and operation is not possible	The operation is prohibited for the disc	This operation is not possible
	The operation is not compatible with the disc's organization	This operation is not possible
The picture stops (pauses) and the unit cannot be operated	Reading of data has become impossible during playback	After pressing ■ once start playback once more
There's no sound Volume level is low	The volume level is low	Raise the volume level
There's audio and video skipping	This unit is not firmly secured	Secure this unit firmly
The picture is stretched the aspect is incorrect	The aspect setting is incorrect for the display	Select the appropriate setting for your display
When the ignition switch is turned ON (or turned to ACC), the motor sounds	This unit confirms whether a disc is loaded or not	This is a normal operation

**Problem during DVD playback**

Symptom	Cause	Remedy
Playback is not possible	The loaded disc has a different region number from this unit	Replace the disc with one featuring the same region number as this unit
Dialog language (and subtitle language) can not be switched.	The DVD playing does not feature multiple language recordings.	You cannot switch among multiple languages if they aren't recorded on the disc
	You can only switch between options indicated in the disc menu	Switch using the disc menu
No subtitles are displayed	The DVD playing does not feature subtitles	Subtitles are not displayed if they are not recorded on the disc
	You can only switch between options indicated in the disc menu	Switch using the disc menu
Playback is not with the audio language and subtitle language settings selected in SET UP MENU	The DVD playing does not feature dialog or subtitles in the language selected in the SET UP MENU	Switching to a selected language is not possible if the language selected in the SET UP MENU is not recorded on the disc
The picture is extremely unclear/distorted and dark during playback	The disc features a signal to prohibit copying (some discs may have this)	Since this unit is compatible with the copy guard analog copy protect system. when playing a disc that has a signal prohibiting copying the picture may suffer from horizontal stripes or other imperfections when viewed on some displays. This does not mean this unit is malfunctioning.

**Problem during Video CD playback**

Symptom	Cause	Remedy
The PBC(playback control) menu display cannot be called up.	The video CD playing does not feature PBC	This operation is not possible with video Cds not featuring PBC
	PBC is switched OFF	Switch PBC ON
Repeat play and track/time search are not possible	PBC is switched ON	Switch PBC OFF.

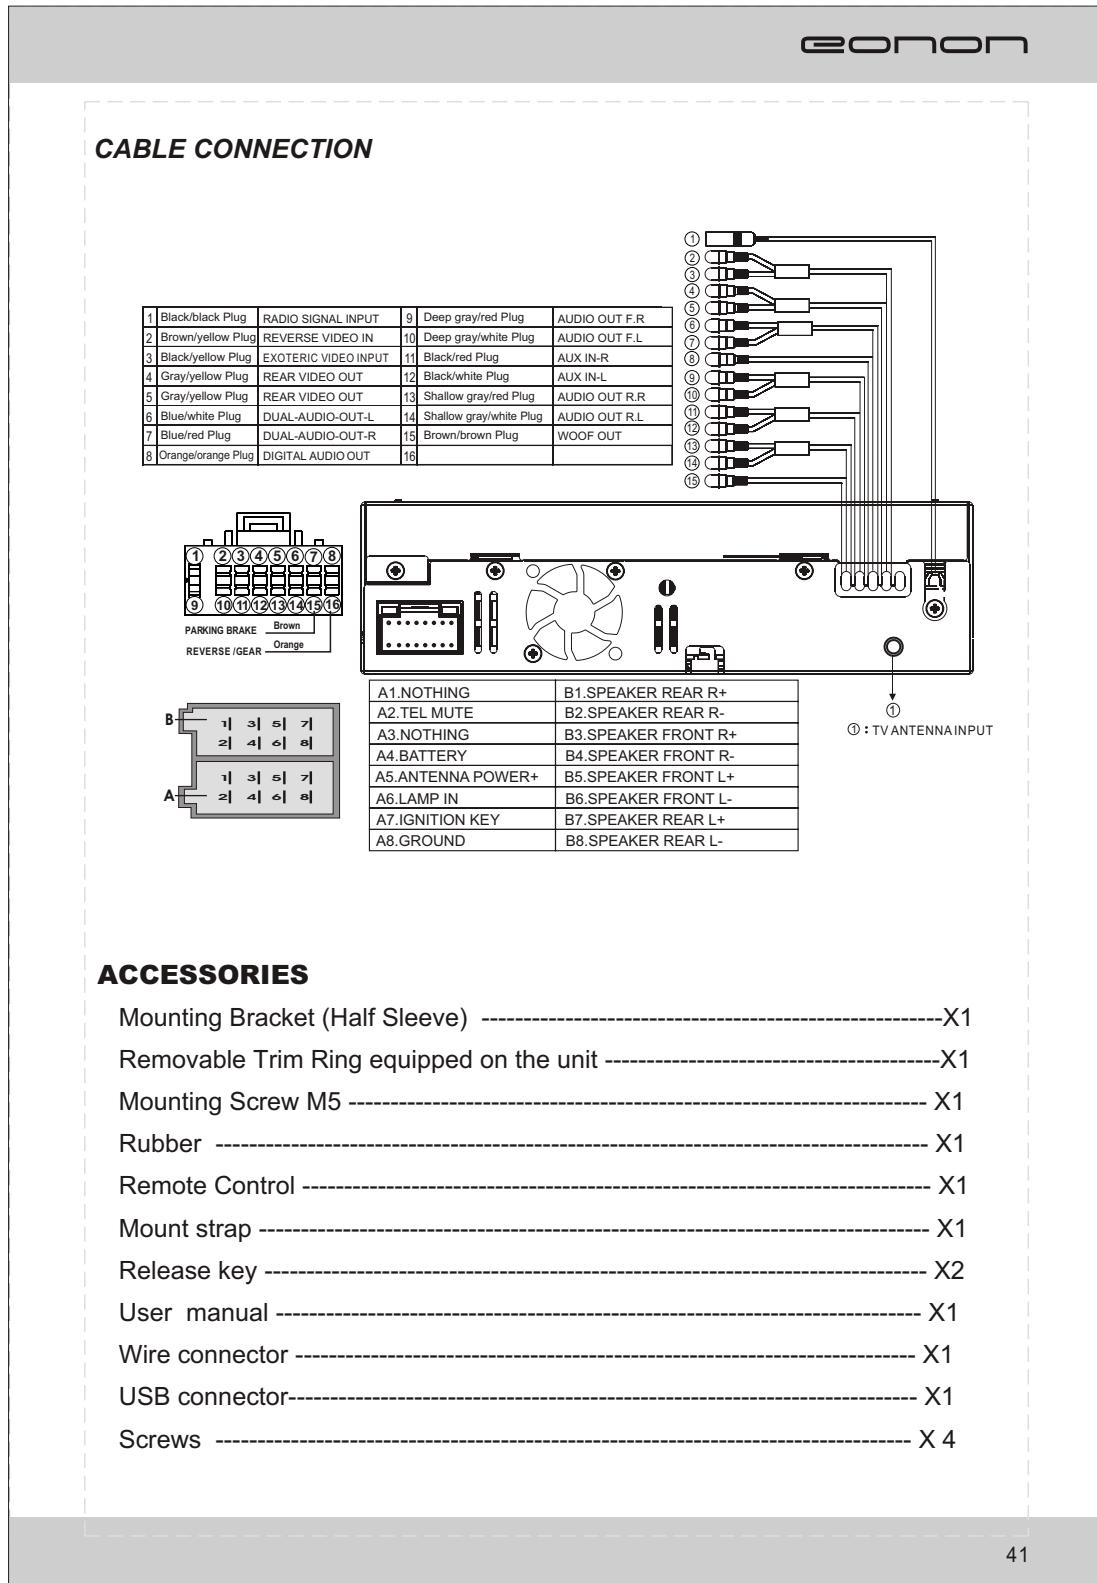



## SPECIFICATION

### GENERAL

power requirement -----	12VDC(10.8~16V)
grounding system -----	negative type
max: current consumption -----	15 A
max: power output -----	65Wx4
load impedance -----	4 Ω (4-8 Ω )
dimensions-----	180(L)×160(W)×100(H)MM
weight-----	3.3KG

### DVD PLAYER

S/N ratio -----	more than 62dB(1kHz)
dynamic range -----	more than 80dB(1kHz)
distortion -----	less than 0.2%
video output -----	1.0Vp-p+0.2V/75 Ω
audio output (RCA) -----	2.0Vrms+0.3V 10K Ω

### FM TUNER

frequency range -----	65.0~74.0/87.5~108.0MHz
usable sensitivity -----	10dB
S/N ratio -----	50dB(mono)
distortion -----	0.5%(mono)
stereo separation -----	30dB(65dBu,1kHz)

### MW TUNER

frequency range -----	522~1620 kHz
usable sensitivity -----	30dB
signal-to-noise ratio -----	40dB

**eonon**  
[www.eonon.com](http://www.eonon.com)