

## ***ThermaCELL FootWarmers***

### Operating Instructions

1. To charge both soles (both soles must be charged at the same time):
  - a. Plug the charger into a wall outlet. The Green light on the charger will turn on.
  - b. Connect both charging plugs on the charger to the charging sockets at the back of the soles. Make sure that the On/Off switch at the back of both soles is in the "Off" position (move switch position to the left).
  - c. The light on the charger will turn red.
  - d. Charging is complete when the light on the charger turns green.
2. To activate the soles:
  - a. Turn the On/Off switch on the soles to the On position (move to the right).
  - b. Press the button and release. The left most light (red) on the remote will turn on to indicate the remote is on the Standby setting.
  - c. Press and release the button on the remote to move through the temperature settings (Standby, Medium, High).
  - d. In Parallel, the LED light on the soles (to the left of the switch) will blink.
    - i. One blink indicates Standby
    - ii. Two blinks indicate Medium
    - iii. Three blinks indicate High
  - e. The lights on the sole should blink continuously when in use.
3. To turn off the soles:

a. Turn the switch on the soles to the Off position.