

User Manual

一、 Connecting to the power:


The voltages for this tubular motor is 3V。The black wire should connect to the positive and the black and white wire should connect to the negative.

二、 Emitter

There are five kinds of emitters: following are the relevant pictures of button instruction:



CHT-1

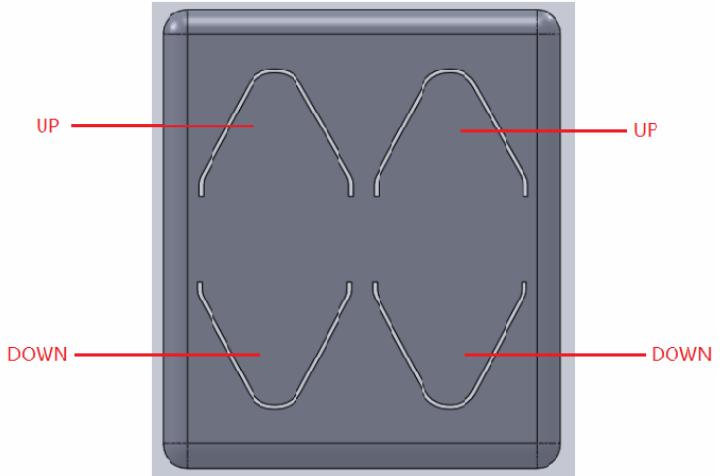

CHT-5

三、 Programming:

1、 Program channel on single and double remote control : (CHT-1,CHT-5)

- 1、 Push programming button until motor jerks back and forth.
- 2、 Push up and down button on the remote at the same time..... Motor confirms by jerking back and forth twice.
- 3、 Done
- 4、 Go on and add more channels in the same way.
5. The key is a switch and used to control the motor.

Note Each motor can listen to up to six different channels or remotes.

2. Remove all programming:

- 1、 Push and hold programming button.
- 2、 Motor jerks back and forth..... keep holding the programming button.
- 3、 Motor jerks again back and forth twice.
- 4、 Now all the channels are lost.

3、 Change direction of motor:

- 1、 Press up or down on your remote. Motor starts running.
- 2、 Now press the programming button on the motor while the motor is running. The motor stops and jerks back and forth twice to confirm the signal. Done
- 3、 Next time the motor moves the direction will be inversed.
4. The product is a vehicular device , it also can be used on the family purdah and the other different using for the user.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.