

BURG 6 Manual

Content

1 Safety and Maintenance	4
1.1 Introduction	4
1.2 Safety	4
1.3 Safety Warnings and Precautions.....	4
1.3.1 Notes on using the mobile phones	4
1.3.2 Notes on using the battery.....	5
1.3.3 Notes on using the charger.....	6
1.3.4 Cleaning and maintenance	6
2 Instructions before use	7
2.1 Specification.....	7
2.2 Mobile Appearance.....	7
2.3 Key Description.....	7
2.4 Status Icon.....	8
2.5 LCD backlight.....	8
2.6 Battery.....	8
2.6.1 Charge the battery	9
2.7 SIM Card	9
2.7.1 SIM Card Usage	9
2.7.2 SIM card insertion and removal	9
2.8 Switch on / off & Password Security.....	10
2.8.1 Switch on/off	10
2.8.2 Unlock SIM Card and Watch Phone	10
2.8.3 Connect to the network.....	10
3 Basic Operation	11
3.1 Calls	11
3.1.1 Domestic calling.....	11
3.1.2 Call fixed-line telephone extension	11
3.1.3 International calls	11

3.1.4 Speed dial from contact book	11
3.1.5 Speed dial from call history list	11
3.1.6 Speed dial	12
3.1.7 Emergency call	12
3.2 Answer calls	12
3.3 Options during calling	12
3.3.1 Call Waiting	12
3.3.2 Call Hold	12
3.3.3 Answer Second Call:.....	12
3.3.4 Hold/Switch	12
3.3.5 Mute / Restore	12
3.3.6 Multi-party call.....	12
4 Menu Function	14
4.1 Phonebook	14
4.1.1 Browse	14
4.1.2 Create	14
4.1.3 Delete all entries	14
4.1.4 Copy.....	14
4.1.5 Storage status	14
4.1.6 Speed dial	15
4.2 SMS	15
4.2.1 Write message	15
4.2.2 Inbox	15
4.2.3 Sent.....	15
4.2.4 Draftbox.....	16
4.2.5 Voice Mail.....	16
4.2.6 Info service.....	16
4.2.7 Delete all	16
4.2.8 Message setup.....	16
4.2.9 Storage status	16

4.3 Recents	16
4.3.1 Incoming Call	17
4.3.2 Outgoing Call	17
4.3.3 Missed Call	17
4.3.4 Delete.....	17
4.3.5 Call time	17
4.4 Setting.....	17
4.4.1 Ring Settings.....	17
4.4.2 Time Settings	17
4.4.3 Phone Settings.....	17
2)Display Setting:.....	17
4.4.4 Call Settings.....	17
4.4.5 Voice setting.....	18
4.4.6 Security Settings	18
4.4.7 Network Settings.....	18
4.4.8 Factory default	19
4.5 Extra's	19
4.5.1 Calendar	19
4.5.2 Alarm.....	19
4.5.3 Stopwatch	19
4.6 Bluetooth	19
5 Input Method	20
6 FAQ	21

1 Safety and Maintenance

1.1 Introduction

Thank you for choosing this watch-type mobile phone. You can read the manual to get a comprehensive understanding of the use of mobile phones and enjoy its perfect functionality and simple method of operation. The phone is designed for a GSM network environment. In addition to basic call functions, it also provides you with other useful features including Chinese and English input, contact book, clock / alarm clock, calculator to facilitate your work and leisure activities.

The Company reserves the right to upgrade technology and products without prior notice. The Company reserves the right to change the contents of this manual without making any prior notice. The Company has the right of final interpretation of this manual.

1.2 Safety

- If your phone is lost or stolen, please immediately notify the telecommunications sector, or sales points to disable mobile phones and SIM cards. This will allow you to avoid the economic losses out of calls made by others.
- When you contact the telecommunications department or sales points, they need to know your phone's IMEI number (printed on the label on the back of the phone, can be seen after removing the battery). Please copy the numbers to stay and keep for future needs.
- To protect your phone from being misused, please take precautionary measures, such as:
 - Set up mobile phone SIM card PIN numbers, and change before others come to know them.
 - Please do not put the mobile phone in a place where others can see easily before leaving your car. It is more advised to carry it or lock in the trunk.
 - Setting call restriction.

1.3 Safety Warnings and Precautions

Please read these notes carefully before using the mobile phone to ensure the safe and correct use.

1.3.1 Notes on using the mobile phones

- Your mobile phone can only use the battery and charger specified by the company. The use of other products may cause battery leakage, overheating, bursting and fire.
- Please switch off the cell phone in the places where cell phone is prohibited such as in the airplane and hospitals because phone may affect electronic equipment and medical devices. Please follow the relevant provisions while using mobile phones in these areas. If the phone has auto-start feature, please check your alarm clock setting to make sure your mobile phone will not reboot automatically during the flight.
- Do not use mobile phones while driving. Please stop the car before making or answering phone calls.
- Do not use mobile phone at gas stations (repair station) or near flammable substances, or chemical agents; It might cause a fire.
- Do not use mobile phone near weak signal or high-precision electronic devices. Radio wave interference may cause mis-operation of electronic equipment and other issues. Especially in the vicinity of the following equipment: hearing aids, pacemakers and other medical electronic equipment, fire detectors, automatic doors, and other automation devices. Consult the device manufacturer or a local vendor for the affect that mobile phones can cause on pacemakers and other medical electronic equipment.

- Do not press hard on the liquid crystal display or use it to hit other things, otherwise it will result in broken LCD panels and liquid crystal fluid leakage. If the liquid crystal fluid goes into the eye it can cause blindness. In this case, please immediately flush eyes with water (do not rub the eye) and seek medical treatment immediately.
- Do not demolish or modify the mobile phone, otherwise it will cause damage to cell phones, electricity leakage and electrical fault.
- In rare cases, the mobile phone may have an adverse effect on electronic devices in some car models. In this case, please do not use mobile phones to avoid loss of security guarantees.
- Do not use needles or other sharp items to press the keys, otherwise it will damage the device or cause mis-operation.
- Please do not use mobile phone if the antenna is damaged because it may cause physical harm.
- Keep the phone away from magnetic card and other magnetic objects, mobile phone radiation wave may remove information stored in floppy disk, savings cards or credit card.
- Keep metal thumbtacks and other small objects away from the phone handset. When the speaker works, it has magnetic effect and will attract small metal objects, which may cause injury or damage to mobile phones.
- Contact with water or other liquids may cause overheating, leakage and failure of the phone.
- Do not hit, shake or throw mobile violently to avoid failure and fire.
- Do not put batteries, cell phone, charger in the microwave oven or high pressure equipment. It may cause circuit damage, fire or other accidents.
- Do not use mobile near flammable and explosive gases. The use of mobile phones in this situation may lead to failure and cause a fire.
- Do not put mobile phones in a place with high temperature, high humidity or a large number of dusts. It may cause malfunction.
- place the phone in a place where the children cannot access easily to prevent them from injury.
- Do not place the phone on uneven or unstable table to prevent failure or damage of the phone.
- Working condition: temperature -5°C～40°C ; humidity: 35%～85%.
- If possible, do not use the mobile near ordinary telephone, television, radio and office automation equipment so that it will not affect the function of these devices or the mobile itself.

1.3.2 Notes on using the battery

- Do not throw the battery into fire, otherwise it will cause the battery to catch fire or burst.
- Do not use wires, needles and other metal objects to short-circuit the battery, or put the battery with the necklaces and other metal objects, otherwise it will lead to battery leakage, overheating, bursting or fire.
- Do not weld the battery terminals; otherwise it will lead to leakage, overheating, bursting or fire.
- If the battery fluid may cause blindness if it goes into the eye. In case this accident happens, please do not rub the eyes, use clean water rinse, and seek medical treatment immediately.
- Do not disassemble or modify the battery, it may lead to battery leakage, overheating, bursting and fire.
- Do not use or place battery near to fire or a high temperature device such as heater, it may lead to battery leakage, overheating, bursting and fire.
- If the battery warms up, the color or shape of the battery changes or other anomalies happen during usage, please stop use and replace it with a new battery.
- If the battery liquid ran into the skin, clothing, which may cause skin burns, immediately rinse with

water, if necessary, please seek medical treatment immediately.

- If the battery fluid leaks or battery gives out strange odor, immediately remove the battery from the visible fire, to avoid fire and burst.
- Do not damp the battery; it may lead to battery overheating, smoke and corrosion.
- Do not place the battery direct under the sunlight or near the hot areas in a car, it may lead to fluid leakage and overheating, and may reduce performance and shorten service life.
- Battery has limited service life. Battery charging gradually shortens the usage time of a battery. If the battery fails working after repeatedly charging, it indicates that the battery life is over. Replace the old battery with a new battery of specific model in this case.
- Do not throw old batteries in the general garbage. Follow the instructions of a battery disposal place.
- Do not charge more than 24 hours at one time.

1.3.3 Notes on using the charger

- Using other voltages will cause leakage, fire and damage to the cell phone and mini USB charger
- Short-circuit of battery charger will cause electric shock, smoke and damage to the mini USB charger.
- Please do not use the charger when it's cable is damaged, otherwise it will lead to fire and electric shock.
- please clean accumulated dust on a power outlet.
- Please do not place any water container etc. next to the charger to prevent overheating, leakage and failure caused by water spills,
- If the Chargers come into contact with water or other liquids, immediately pull off the charger from the power outlet to prevent overheating, fire, electric shock and charger failure.
- Please do not demolish or convert charger, otherwise it will lead to personal injury, electric shock, fire and charger damage.
- Please do not use charger in a place with high humidity such as the bathroom, otherwise it will lead to electric shock, fire and charger damage.
- Please do not touch the charger, cables or power outlet when hands are wet, otherwise it will cause an electric shock.
- Do not place heavy objects on the charger cable or modify it, otherwise it will create electric shock and fire.
- Please pull out the power plug when cleaning or maintaining the power plug.
- Do not pull the cable of the wire, it may cause a electric shock or fire.
- Do not charge the mobile in the following circumstance: under direct sunlight; temperature below 5 °C or above 40 °C; humid, dusty or with too much vibration (will cause failure); vicinity of TV sets, radios and other electrical appliances (will affect the image, sound effects).

1.3.4 Cleaning and maintenance

- Mobile phones, batteries and charger is not waterproof, do not use in the bathroom or places with high humidity, avoid damp by rain for the same reason.
- Clean the watch phone, battery and charger with soft dry cloth.
- Do not wipe the watch phone with alcohol, thinner or benzene solution.
- Plug with dirt will cause mal-contact and loose plug which affect the charging effect. Clean regularly.

2 Instructions before use

1.4 Specification

Network: GSM850MHz/PCS1900MHz

Screen: LCD

Size:

Operating voltage: 3.7V-4.2V

Battery Capacity: 420mAh (Prevail in-kind)

Standby time (*): 80hours-120hours(depends on network)

Talk time (*): 1 hour -2 hours (depending on network)

* Standby time and talk time can vary due to SIM card / network settings and usage

1.5 Mobile Appearance



1.6 Key Description


Key	Description
Dial Key	<ul style="list-style-type: none">• Make / receive calls• In standby mode, press this key to enter the main menu, press and hold to enter the phone history.• In the menu interface, this key performs as "select" to confirm the operation.
Hang off Key	<ul style="list-style-type: none">• End a call or reject calls.• Press and hold to switch on/off. In standby mode press to access additional menu keys.• In menu mode, press to access a top menu.• In the Edit mode, press and hold to delete.• In standby mode, press this key to enter the following menu: Power Off, Watch mode, Time settings, Calendar and Alarm. When no SIM card in you have only Power Off, Time settings and Calendar.

Number key &*、# key	Number key (1~9、0)	<ul style="list-style-type: none"> Enter numbers and characters. Number key 2-9 can be set as speed dial and shortcut keys. In standby mode, press and hold to perform as speed dial. In standby mode, press and hold number key1 to access voice mail. When not used for input, number key 0,6,9,3 perform as "up" "down" "left" "right" direction; number key 7 perform as "OK"; number key 5 performs as "Cancel" When used for input, dial key performs as "OK"; Hang off key performs as "Cancel" When used for Intelligent Input (Intelligent English and Pinyin), Number key 0 and 1 perform as left and right for selection. When in contact>browse 0 and 1 are the scroll keys
	* key	<ul style="list-style-type: none"> When keypad lock is on , hold * key to unlock In editing mode, press to access common symbol. In standby mode, continuous press to input *, + or P
	# key	<ul style="list-style-type: none"> In editing mode, press to switch input method

Note: In this manual, press means press and release; press and hold means press for more than 2 seconds and release.

If not specified, the up /down/left/right keys indicate number keys 0/6/9/3. When not used as input, left/right indicate number key 7/5. In editing mode, dial key performs as "OK"; Hang off key performs as "Cancel".

1.7 Status Icon

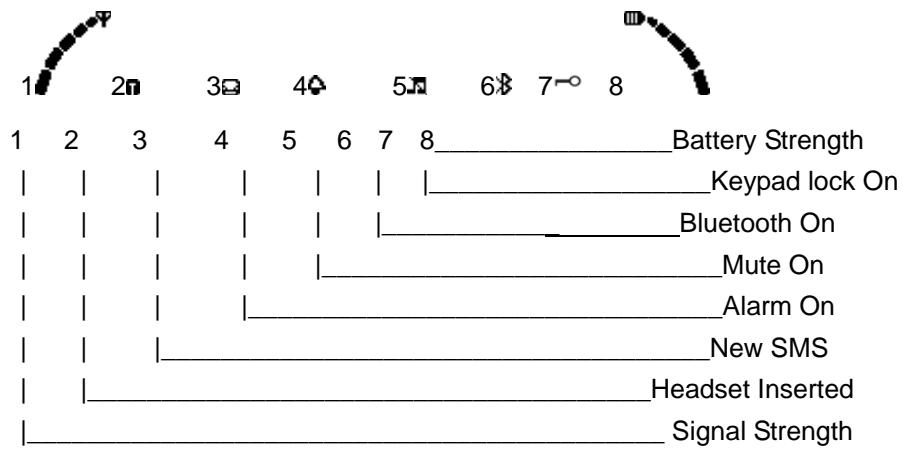

Note: Images used in this manual is only functional diagram, may be different on your phone display, actual phone display shall prevail.

1.8 LCD backlight

Display and keypad backlight time can be set up via cell phone display settings. If not press a key within a certain period of time, the background light will automatically shut down in accordance with set time.

1.9 Battery

The initial state of the battery is charged about 50%.Please empty the battery and charge to full battery for the first 3 times to achieve the best use of the battery.

1.9.1 Charge the battery

- Do not attempt to remove the battery.
- Connect the mini USB to the power supply.
- Insert mini USB connector into phone's charger jack.
- At this time, battery indicator on the right-top of the screen will be flashing as circulation; If the mobile is turned off when charging, the charging indicator will appear on the screen to indicate the charging process. If the phone keeps working when battery is insufficient, charge indicator may take some time to appear on the screen.
- Charge has been completed when the battery indicator on the top right corner shows full battery and stop flashing. The screen also shows image of "Charge Completed". This process usually takes 2 ~ 3 hours. During charging batteries, it is normal that cell phone and charger become hot.

◇Note:

- Battery should be immediately put to charge when the phone automatically shuts down or shows "battery low" warning. The charge time is reduced when battery is charged before depletion.
- The standby and talk time is base on an ideal environment. In practical situations, the standby and talk time can vary due to the network, work environment and usage.
- Disconnect the charger after battery is fully charged.
- If the charger is not disconnected after charging, after some time the battery will lose the electricity and start getting charged again. This process will reduce the life of battery.

1.10 SIM Card

Before making or receiving a phone call, the watch phone must register at a valid cell phone network service provider. Your phone can use GSM network.

1.10.1 SIM Card Usage

A valid sim card must be inserted in the phone before using. SIM card is a key to enter digital GSM network.

All relevant information regarding network connection establishment and call record are recorded in the SIM card metal flat area along with your SIM card contact book and SMS detail. SIM cards can be taken out from your phone and put into any of a GSM mobile phone (phone can automatically read the new SIM card).

In order to prevent loss and damage of card information, you should avoid touching the metal plane area, and keep the sim card away from electric and magnetic area. Once the SIM card is damaged, you will not have access to GSM network.

1.10.2 SIM card insertion and removal

- SIM card is usually placed in a card. Take it off carefully before assembly.
- Switch off the watch phone, pull out card holder and insert the SIM card according to the indicated direction. Then push the card holder back into the watch phone.
- When you want to remove the SIM card, please switch off the watch phone first. And then pull out the card holder and take out the SIM card.

Warning: Switch off the phone before taking out the SIM card. Insert or take out the SIM card while phone is working may damage the phone.

1.11 Switch on / off & Password Security

1.11.1 Switch on/off

Press and hold hang-off key to switch on the watch phone; press and hold the hang-off key again to switch off. Or press the hang-off key, and select switch-off option.

In case of abnormal switch on/off, please reset the phone by pressing the reset at back of the watch phone.

1.11.2 Unlock SIM Card and Watch Phone

- To prevent illegal use of the watch phone, you can set password protection and SIM card PIN; If you have set the password, the right password must be put to unlock the watch phone after everything being switched on. User can clear the password.
- Input watch phone password: if the watch phone password is set as 0000, then please input 0000; If you forget your watch phone password, you must contact the local retailer or authorized service center to unlock your watch phone.
- Input PIN, If the PIN code is set as1234, then please input 1 2 3 4; After 3 times continuous wrong input, your SIM card will be locked. The watch phone will request the PUK code, if you do not know the PUK code, please do not input but send to network service provider to handle.

1.11.3 Connect to the network

After the SIM card is successfully decrypted, the watch phone will search the available network automatically.

3 Basic Operation

1.12 Calls

Once the valid network is available, you can call or receive calls. Information on the upper left corner of screen display shows network signal strength (signal is the strongest when 5 bars appear). Relatively large obstacle has big impact on the voice quality, so move within a small area can effectively improve the mobile call quality.

1.12.1 Domestic calling

Use the numeric keys enter a phone number, then press the dial key, you get tree options now: Call, Send message to and Save. Select the right option with the 0 or 6 key and press again on the dial key. To make a call you select call and pres dial key to make a call. If you need to change the number, press the End Key to return to delete characters. When you dial, the screen will appear corresponding animation. Once the other side picks up the call, the screen will show call status information. Press the End Key to end a phone call.

1.12.2 Call fixed-line telephone extension

Some fixed-line telephone extension cannot be accessed directly, you need to dial the switchboard first then dial ext. But if you insert pause symbol "P" between the switchboard number and extension number, the watch phone can complete the whole dial process at once. Enter "P" by pressing press the * key continuously (At this point the screen will display symbol "P")

Area Code Switchboard Number P extension Number dial key

How to use the pause symbol:

For example, if you need to access the voice mail system through this number 8880000, and the extension for the voice mail is 6666, password is 8888, you can dial the number as follow:

8880000 P 6666 P 8888

The first part of this number is to access the voice mail system, once the phone is answered, the phone will dial 6666 to appoint the mail box, the second "P" will delay the call by 5 seconds before dialing the password 8888(the first P means wait till the call is connected, second P and hereafter means delay for 5 seconds).

1.12.3 International calls

When you want to make an international call, you can press the * key until prefix "+"symbol appears on the screen, this will enable you to dial any oversea number without knowing the code of the country you dial out from.

After prefix, you can input country code and complete telephone number. Country code is according to usual practice, such as Germany 49, Britain 44, Sweden 46 and so on.

Omit the "0" before city code as usual while dialing international number.

For example, if you want to dial hotline service from another country, you should dial the number as follow: +86 21 114

+ Country code complete telephone number dial key

1.12.4 Speed dial from contact book

Enter contact book in standby mode, select the phone number or name then dial.

1.12.5 Speed dial from call history list

Find the number or name in recent call record, select and dial.

1.12.6 Speed dial

In standby mode, long press number key 2 to 9 to dial the preset corresponding numbers. This function allows you to dial a number without going through the contact book.

1.12.7 Emergency call

When your watch phone is covered by the network (refer to the signal indication on the screen), you can make an emergency call. The emergency call can be made even without a SIM card in the watch phone.

1.13 Answer calls

If you set answer with any key, then you can press any key to answer, otherwise press dial key to answer.

1.14 Options during calling

Multi-control functions can apply during call process.

1.14.1 Call Waiting

If the network supports call-waiting feature and you have activated the call waiting feature on the phone when an incoming call voice prompts, you will see calls for your convenience of answering calls.

1.14.2 Call Hold

This feature requires network support.

- 1) During a phone conversation, dial the second number directly or return to the main menu to call from the address book.
- 2) Once the second call is connected, the first call is automatically on hold. At this time you can hold or switch the phone calls.

1.14.3 Answer Second Call:

During a phone conversation, you can answer a second call by pressing the dial key, and the first call is on hold automatically. Refer to "Hold/Switch" for more details. **This feature must be activated.**

1) Press End Key to reject the second call and continue with the present call

1.14.4 Hold/Switch

When one call is on hold and another call is in process:

Press Dial Key to enter switch option, the present call will be on hold, and the hold call to be in process, so you can talk with the other side.

Press dial key to enter the option list, you can choose mute, establish multi-party calls, release all calls, access contact book or other operations

1.14.5 Mute / Restore

This feature can activate or deactivate microphone in the phone or connected to the phone, "Mute" function can prevent the other party to hear your voice.

In the call, press Dial Key to enter "option -> mute / un-mute "option turned on or off mute function.

1.14.6 Multi-party call

When there is a call on hold and another phone call is on process, a multi-party call or conference call can be established:

Press Dial Key to enter the option list, select the "establish multi-party call" to enable this feature.

1) In Multi-party call, press Dial key to enter option list, select "Browse Call" to view the calling members. In the browse call interface, press Dial key to enter the option list, you can choose "Split-call" or "terminate call" operation.

2) In multi-party call, if there is an incoming call, you still can answer the phone, and the multi-party call will automatically be held. Multi-party call and this call can be hold or switch.

Note: Multi-party call needs network support.

4 Menu Function

1.15 Phonebook

1.15.1 Browse

This feature allows you to sort by alphabetical order and by first letter of the name Pinyin to browse the phone contact record. With this feature, you can find the number of the contact you need.

For example, you want to search for telephone number of someone with surname "Fang":

The first letter of Fang is "F", the corresponding key on keyboard is 3; press three times "3" key to enter "F", if there is relevant records, then contact with surname "Fang" will be displayed. He shows always the first contact with the letter "F". You can scroll with the keys 0 and 1 up and down in the phone list!

Press Dial key to access call history, and then you can choose the following operations:

·Call: Choose a number and choose call to dial this number.

·Send message to: Select option "send a SMS" to enter the SMS edit interface, at the same time, the recorded number will be set automatically as the receiver.

·Edit: Edit the selected call detail.

·Delete: Delete the selected call detail from the contact book.

·Create: Add new call record.

·Copy: If you choose the record in the watch phone, when you select "copy", the record will be copied to the SIM card; if you choose the record in the SIM card, when you select "copy", the record will be copied to watch phone memory.

·Move: If the record is stored in the SIM card, when you select "move", the record will be moved to watch phone memory; If the record is stored in the watch phone memory, when you select "move", the record will be moved to SIM card.

Storage status: Indicate the used and remaining storage of the contact book in watch phone and SIM card.

1.15.2 Create

This feature allows you to add new phone record to the contact book. You can add to SIM card or to the watch phone memory, specific operations are as follows:

- 1> Select "Create" in contact book;
- 2> Select "to SIM card" or "to watch phone" by pressing up and down keys, press dial to confirm selection;
- 3> Input the name first, press dial key to enter the number input interface, and put the number;
- 4> Press dial key again to finish the process.

1.15.3 Delete all entries

This feature allows you to delete the content in watch phone contact book or SIM card contact all in once.

1.15.4 Copy

This feature allows you to copy and paste the content in the contact book from and between SIM card contact book and watch phone contact book.

Note: When memory capacity differs between watch phone and SIM card, the smaller capacity prevails for replication.

1.15.5 Storage status

Indicate the used and remaining storage of the contact book in watch phone and SIM card.

1.15.6 Speed dial

Set the speed dial numbers correspond with number key 2 to 9. Long press the number key to access the preset number and dial. Select a free number and press dial key. You can set/change the speed dial key.

1.16 SMS

SMS is a network service, some of the networks may not support this service. A service center number is required for sending and receiving SMS. Contact your service provider for this number.

- 1> In standby mode, press dial key to enter main menu.
- 2> Press up or down to find "SMS" feature, press dial to open.
- 3> In the SMS menu, press up or down to select inbox, write message, outbox, draftbox, voice mail, info service, delete all, storage status, message setup. Press dial key to confirm the selection.

1.16.1 Write message

Press # to switch the input method; press * to insert symbols.

If the content of SMS exceeds the standard number of letters, the system will automatically divide it into several messages and send.

Input the content of the message, then press dial to access the following options:

- Send only:** send message without saving it.
- Save only:** save the message as a draft without sending it.
- Send and Save:** Send the message and save it in Sent Box
- Insert Contact Book:** Insert the number from the contact book to the SMS or press dial key to search in phonebook

1.16.2 Inbox

If the inbox is full, an icon will appear on the screen. In this case, please delete some messages so that new messages can be received.

- 1> Select Inbox, the screen will display the messages in the inbox.  means unread message.
- 2> Press Dial or 7 to read the message.
- 3> The following options are available for messages in the Inbox:

- Delete:** deleted the selected message
- Text reply:** Edit a new message as reply
- Forward:** forward the original message to an appointed receiver
- Edit:** Edit the original message
- Dial back:** Call to this number
- Extract number:** save phone number

1.16.3 Sent

- 1> Select "Sent" to display the sent messages.
- 2> Press "select" to read the selected message.
- 3> The following options are available for messages in the sent box:
 - Delete:** deleted the selected message
 - Reply:** Edit a new message as reply
 - Edit:** Edit the original message
 - Extract number:** save phone number
 - Forward:** forward the original message to an appointed receiver

- Voice call:** call to this number

1.16.4 Draftbox

Select Draft to display the messages in the draft box. Press “select” to read the selected message. The following options are available for messages in the draft box

- Delete:** deleted the selected message
- Forward:** forward the original message to an appointed receiver
- Edit:** Edit the original message

1.16.5 Voice Mail

In SMS menu, select “voice message” to access this feature.

- Listen to voice messages:** Using this feature, you can listen to voicemail messages.
- Voice Mail number:** Enter or modify the voice mailbox number.

Note: This is a service like answering machine provided by the network provider. This feature allows callers to leave messages when you are unable or unwilling to take calls. Your voice mailbox phone number stored in the watch phone. For more information, please contact your network operator.

1.16.6 Info service

This service allows you to receive all kind of information messages such as weather report or traffic situation. For more information, please contact your network operator.

- 1) Topic: Topics are the broadcast channels. Available options: select topic, add topic, edit topic and delete topic. Select topic (broadcast channel) and permit the broadcast messages to be sent to your watch phone.
- 2) Language: you can set your preferred language for the broadcast messages.
- 3) Service Status: turn on or off broadcast settings.

1.16.7 Delete all

Delete all messages, or message in the inbox, outbox and draft box.

1.16.8 Message setup

You can set storage location, message type, valid period and status report.

- Storage media:** set default storage location as SIM card or watch phone.
- Message Center:** Save or modify the necessary service center number. (Ask from the network provider.)
- Protocol type:** text, fax or mail
- Validity period:** Valid period can be set as 1 hour, 12 hours, 24 hours, 1 month, 3 months or maximum.
- Status Report:** Set on/off of status report. The SMS service center will deliver the status of the message whether it is sent or failed to send. Availability depends on the service of local network provider.
- Reply path:** ...

1.16.9 Storage status

Indicate the used and remaining storage of the Phone and SIM card.

1.17 Recents

In standby mode, press Dial key to enter the main menu, press up or down to select “Call History”.

1.17.1 Incoming Call

Options for Incoming calls: Call, send SMS, save number, delete, delete all or check details.

4.3.2 Outgoing Call

Options for Outgoing calls: Call, send SMS, save number, delete, delete all or check details.

4.3.3 Missed Call

Options for Missed Calls: Call, send SMS, save number, delete, delete all or check details.

4.3.4 Delete

Options: Delete all incoming calls, delete all outgoing calls, delete all missed calls and delete all.

4.3.5 Call time

Options for call time: check the outgoing call duration, incoming call duration, duration of last call; clear the record with key 5.

1.18 Setting

In standby mode, press Dial key to enter the main menu, press up or down to select “Setting”

1.18.1Ring Settings

You can choose to turn on or off the mute mode, set ringtone for incoming call, SMS, alarm, set volume for ringtone, voice tune volume, key and switch on/ off music. Once the watch phone is on a mute mode, the volume of ringtone, key beep, SMS sound or number reading will be set as 0.

1.18.2 Time Settings

- 1) Date and time: set date and time
- 2) Format of date: Y-M-D, M-D-Y, D-M-Y

1.18.3Phone Settings

- 1) Language: Automatic, English, simplified Chinese
- 2) Display Setting:
 - Power saver clock(the clock you see at the watch): Digital clock, Classic clock, Disable
 - LCD contrast: press left or right to adjust the contrast.
 - Backlight: press up or down to select, press left key to confirm. Duration: 10 seconds, 15 seconds, 20 seconds, 30 seconds.
 - Greeting note: Set as “Enable”, the greeting words can be modified. When it is enabled, the greeting words will be displayed when the watch phone is switched on.
 - Date Time display: when set as “Enable”, the date and time will be displayed on the screen.
- 3) Own number: You can save your own number
- 4) Keypad lock: disable, 10 seconds, 20 seconds, 30 seconds

1.18.4 Call Settings

- 1) Show my Caller ID: can be set as default, on or off. Press up and down to select, press left key or dial key to confirm.
- 2) Automatic re-dial: on/off
- 3) Any key answer: on/off

1.18.5 Voice setting

- 1) Voice Time: You can turn it on or off. When it is on every our the voice says the time.
- 2) Voice Count: You can turn it on or off. When it is on the voice says the lettr you dialing and says the incoming phone number.

1.18.6 Security Settings

- 1) Power on PIN1: this feature can be turned on or off. The PIN cold can be changed. When this feature is on, you need to input the PIN code when switching on the watch phone.
- 2) Change PIN2: PIN2 can be changed.
- 3) Phone code: This feature can be turned on or off; the watch phone password can be changed. When this feature is on, you need to input the PIN code when switching on the watch phone.

1.18.7 Network Settings

1) Call waiting

- a) Interrogate: this feature allows you to check the present status of the network.
- b) Activate: once the call wait is activated, the watch phone will be connected to the network. If this feature is on, the network will give off alarm when another party is calling you during your phone conversation, number of the caller also will be displayed.
- c) Deactivate: if this feature is canceled, there will be on alarm from the network.

2) Call forwarding

This feature allows you to transfer the incoming call to another telephone device.

- a) Unconditional divert: when it is on, all incoming calls will be transferred.
- b) Busy divert: when it is on, the calls will be transferred when this watch phone is busy.
- c) No answer divert: when it is on, the incoming call will be transferred when the call is not answered in defined time.
- d) No service divert: when it is on, the incoming calls will be transferred when the phone cannot be connected.

Interrogate: This feature allows you to check the present status of the network.

Activate: Set the number that you want to transfer to.

Deactivate: Cancel call transfer

3) Call Restriction

This feature allows you to restrict calls. A restriction password from the local service provider is needed for this setting. An error message will appear if the password is not correct.

- a) Restrict outgoing call: when this feature is on, the outgoing call cannot be made.
- b) Restrict international call: when this feature is on, the international call cannot be made.
- c) Restrict long-distance call to abroad: when this feature is on, when you are in a foreign country, you can only make calls to this foreign country.
- d) Restrict incoming call: when this feature is on, the watch phone cannot receive calls.
- e) Restrict international roaming incoming call: when this feature is on, once you roam to a place where your service provider is not available, you will not receive incoming calls.

All the above features can be checked, activated or canceled.

Interrogate: This feature allows you to check the present status of this feature.

Activate: Activate the feature.

Deactivate: Cancel this feature.

4) Call barring

- a) All outgoing calls: Interrogate, Activate, Deactivate

- b) All int'l call: Interrogate, Activate, Deactivate
- c) Int'l except to home: Interrogate, Activate, Deactivate
- d) All incoming call: Interrogate, Activate, Deactivate
- e) Incoming while roam: Interrogate, Activate, Deactivate

5) Network selection mode

Select the network manually or automatically (suggested). When the watch phone is set to select network automatically, the watch phone will select the preferred network automatically. When it is set to select manually, you need to select the same network provided by the service provider to enable the watch phone.

1.18.8 Factory default

Restore to factory setting. You need to put the watch phone password to execute this feature (password preset as 0000)

1.19 Extra's

In standby mode, press dial key to enter the main menu. Press up or down to select "Extra's"

1.19.1 Calendar

The calendar is available for this watch phone. Press up or down to select date for more details such as lunar calendar date. Press dial key for viewing the calendar in day, month or year.

1.19.2 Alarm

The alarm works when the watch phone is off.

- 1> Select Alarm to set the alarm.
- 2> Press up or down to turn on/off.
- 3> When the alarm is on, press dial key to set the alarm time.
- 4> After setting the alarm time, press dial again to select the sound of alarm. One time alarm or weekly alarm can be set.
- 5> Save the setting.

1.19.3 Stopwatch

Select "Stop Watch" in Extra's.

Left key- start, stop or continue; Right key - record time; Maximum 20 records.

1.20 Bluetooth

The phone supports Bluetooth wireless connection. You can talk hands free by creating a wireless connection between watch phone and Bluetooth headsets or hands-free car phone device. Functions as follows:

- 1) Start: Select "on" to turn on Bluetooth, select "off" to turn off Bluetooth. (main menu>Bluetooth>Bluetooth trigger)
- 2) Local BT Property: can be set as visible or invisible.
- 3) Device list: displays the current list of paired Bluetooth devices. The following options are available: search for new equipment, re-naming, set as authorized, the connection device, remove the device, remove all equipment, return and other operations.
- 4) Local BT Name: name of your Bluetooth device can be changed by pressing left key. After editing, press dial key to confirm.

5 Input Method

This product has built-in smart text input system. It is simple, practical and efficient and supports input of English, Chinese, numbers and symbols.

You can type Chinese characters, English letters, number and symbols such as punctuation.

The smart input method (intelligent English and Pinyin), the 0 and 1 represent the left and right keys to select the contents of the candidate area.

Change the input method

In the Edit mode, press the # key to switch input method, press the * key to switch to select symbol layout.

English Input

abc When using this input method, press the key marked with the wanted letter:

Press once for the first letter

Press twice for the second letter.

Same applies for the rest.

ABC For capital letters

Abc First letter is capital and lower case after.

Smart English:

When you enter a word, you only need to enter the corresponding letter key once, and the system will associate a few words, press left arrow keys to select the desired word, press dial key to input.

For example: when you need to type “welcome”, you just press the corresponding key to enter these letters.

Number input

123 You input numbers with this input method.

Chinese Input

Intelligent Pinyin

This input method has a associate feature and is very easy to use.

For example: when you want to input “你”:

Press number key 6 and 4 to enter pinyin “ni”, ni\mìng will display on the screen, press left or right key to select next pinyin, the corresponding character will be displayed. Press dial to input. If you cannot find the desired character on this page, press up or down key to turn to next page. Press dial key to select the character. Use end key to delete if a wrong input happens.

Symbol input

Press * key in edit mode to display punctuation and some special symbols

Press direction key to select the desired symbol, press dial key to enter.

Space

Press 0 in English input method to add a space. Space is automatically added after a word in Smart English input.

6 FAQ

Please refer to the following solutions if any problem occurs in the course of using the watch phone. If the problem persists, please immediately contact the designated dealer or repairer.

1. If the screen displays "enter the PIN": Enter PIN of the SIM card. If you do not know the PIN number, please immediately contact the network service provider.
2. If the screen displays "enter the PUK": this is because three times wrong input of PIN, and your SIM card is locked. To unlock you must enter the PUK code, please do not hesitate to contact the network service provider.
3. If the screen displays: "insert the SIM card information": please confirm SIM card is installed correctly. Check whether SIM card is working properly. In case of defective or malfunction please contact the network service providers.
4. Out of service, network failures: Check the signal strength icon. If there is no network signal, you may be in a basement or network blind spot of a building. Move to another area to receive signal. There is another kind of situation that you may be in areas that are not covered by the network, you can ask your network service provider for the coverage map.
5. If the sound quality is poor or echo and noise happen during a conversation. Please end the phone call and dial again, the network service provider may relay a better quality line for your call.
6. No sound for incoming call or for keys: please check whether you turned the phone to mute. If not, please check the ringing mode and volume settings.
7. Standby time shortened: If you stay in an area with low strength of signal, the watch phone needs to take longer time to find signal. If you do not need to use the watch phone, please switch it off in this case. Another case can be that the battery is used for too long and need to be replaced.
8. Watch phone cannot be switched on: please check the battery volume or charge the battery. Try to switch on the phone once it's put to charge. The phone can be switch on only when the phone battery is restored as the battery can be over discharged while left unused for a long period.
9. Fail to send SMS: Check the number of the service center or possibility you do not have SMS service from your provider. Another situation is the receiver you entered is not valid.
10. Fail to charge: there are three possibilities: the charger is not performing well, please contact your dealer in this case; environment temperature is not proper. Change a charge environment; Loose connection of the plug.
11. Fail to add more data to the contact book; the memory is full. Please delete some useless information.
12. Certain features do not work: the service may not be activated or not provided be the local service provider. please contact the designated dealer, repairer or the service provider.

7 Warning

When you start to use this phone, please pay attention to the following information: for safety concerns, you should only wear the wrist watch on your wrist and the device should Not be worn on the inside of the wrist(Such as palm side) or in any other configurations during transmission.

If damaged, please do not attempt repair for yourself.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

To ensure compliance with FCC RF exposure requirements, a separation of 1.0 cm or more should be kept between the front of the watch and the rest of the user's body while it is transmitting

Specific Absorption Rate (SAR)

This Watch Phone meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

The exposure standard for Watch Phone employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.