



 
WARNING

To prevent possible **SERIOUS INJURY** or **DEATH**:

- Keep remote control and battery out of reach of children.
- NEVER permit children to access the Universal Remote Control.
- Operate the door **ONLY** when it is properly adjusted, and there are no obstructions present.
- ALWAYS keep a moving door in sight until completely closed. NEVER cross the path of a moving door.

To reduce risk of **fire, explosion or electric shock**:

- DO NOT short circuit, recharge, disassemble or heat the battery.
- Dispose of batteries properly.

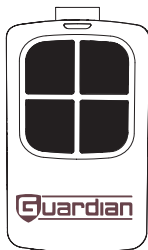

Model UTX

Universal
4-Button Remote Control



adhguardianusa.com



 
1-424-272-6998

NOTE:

The garage door opener will operate during programming. Ensure that safety photo-eyes have been installed and working properly, and people and obstructions are clear of the garage door opening.

Programming step-by-step

1. Identify brand of your opener and variant. Find corresponding code in the compatibility table.
2. Press and hold buttons 1 and 4 simultaneously until the LED begins flashing.
3. Enter the four digit code corresponding to your garage door opener. When finished, the LED will flash rapidly.



4. Press the button you wish to use for this opener. The LED will briefly turn solid.

5. Your remote is now programmed. Follow your garage door opener's or receiver's instructions for learning a new remote control.



 
Erase a programmed button step-by-step

1. Press and hold buttons 1 and 4 simultaneously until the LED begins flashing.

2. Enter 3-3-3-3. When finished, the LED will flash rapidly.

3. Press the button you wish to erase. The LED will briefly turn solid.

4. The code stored on this button is now erased and should no longer control the device when pressed.




Brand	Variant	Frequency	Code
Access Master®	Red/Orange	390	1-2-4-4
	Yellow	315	1-3-1-2
	Green	390	1-4-1-4
	Purple	315	1-2-4-3
	Other 1	433.92	1-3-1-1
Other 2	433.92	1-4-3-4	
ACM®		433.92	1-1-1-3
beamUP™		315/390	2-1-1-4
BFT®		433.92	1-4-1-2
Build Mark®	Red/Orange	390	1-2-4-4
	Yellow	315	1-3-1-2
	Green	390	1-4-1-4
	Purple	315	1-2-4-3
	Other 1	433.92	1-3-1-1
Other 2	433.92	1-4-3-4	
Chamberlain®	Red/Orange	390	1-2-4-4
	Yellow	315	1-3-1-2
	Green	390	1-4-1-4
	Purple	315	1-2-4-3
	Other 1	433.92	1-3-1-1
Other 2	433.92	1-4-3-4	
Craftsman®	Red/Orange	390	1-2-4-4
	Yellow	315	1-3-1-2
	Green	390	1-4-1-4
	Purple	315	1-2-4-3
	Other 1	433.92	1-3-1-1
Other 2	433.92	1-4-3-4	
Other 3	303	2-1-2-1	
Doorhan®		433.92	1-1-3-2
Garage Access®	Red/Orange	390	1-2-4-4
	Yellow	315	1-3-1-2
	Green	390	1-4-1-4
	Purple	315	1-2-4-3
	Other 1	433.92	1-3-1-1
Other 2	433.92	1-4-3-4	
Genie®	Variant 1	315	1-2-1-1
	Variant 2	390	1-1-4-4
Guardian®		303/390	2-1-2-1
		433.92	1-4-4-3
LiftMaster®	Red/Orange	390	1-2-4-4
	Yellow	315	1-3-1-2
	Green	390	1-4-1-4
	Purple	315	1-2-4-3
	Other 1	433.92	1-3-1-1
Other 2	433.92	1-4-3-4	
Linear®	Megacode 1	310	1-3-1-1
	Megacode 2	318	1-3-3-2
	HCS	433.92	1-4-2-3
Master Mechanic®	Red/Orange	390	1-2-4-4
	Yellow	315	1-3-1-2
	Green	390	1-4-1-4
	Purple	315	1-2-4-3
	Other 1	433.92	1-3-1-1
Other 2	433.92	1-4-3-4	
Nice®	Similo	433.92	1-2-2-2
	Flors	433.92	1-3-4-3
Overhead Door Corporation®	Variant 1	315	1-2-1-1
	Variant 2	390	1-1-4-4
Performax®		303	2-1-2-1
Somfy®	Curtains	433.42	1-3-3-4
Sommer®	Variant 1	434.4	1-1-1-4
	Variant 1	303	2-1-1-1
Wayne Dalton®	Variant 1	303	2-1-1-1
	Variant 2	433.92	2-1-1-3
Xtreme Garage®		303	2-1-2-1

Other Brands	Variant	Frequency	Code
Allmatic		433.92	1-1-1-2
Aprimatic		433.92	1-1-2-3
ATA		433.92	1-1-2-2
Avidsen		433.92	1-2-4-1
Beninca	Rolling	433.92	1-2-4-2
	ARC	433.92	1-4-1-3
Came		433.92	1-4-2-1
Cardin		433.92	1-1-2-4
Centurion		433.92	1-4-2-4
Clema		433.92	1-4-1-1
DEA		433.92	1-1-3-1
Ditec		433.92	1-3-3-3
Ecostar		433.92	1-1-3-3
Erreka	433	433.92	1-1-3-4
FACC	Variant 1	433.92	1-1-4-2
	Variant 2	433.92	1-3-1-3
	Variant 3	433.92	1-3-1-4
Genius	Variant 1	433.92	1-1-4-3
	Variant 2	433.92	1-3-2-1
	Variant 3	433.92	1-3-2-2
Gibidi Hormann		433.92	1-2-1-2
Key		433.92	1-2-1-3
King Gates		433.92	1-3-2-4
Merlin	M832	433.92	1-2-1-4
	Plus	433.92	1-3-1-1
	2.0 Plus	433.92	1-3-4-2
Mhouse		433.92	1-2-2-1
Mutanocode		433.92	1-1-1-1
Novoferm		433.92	1-2-2-3
O&O		433.92	1-3-4-4
Peccinin		433.92	1-2-2-4
Prastel		433.92	1-4-3-3
		433.92	1-2-3-2
Pujol	Yellow	433.92	1-2-3-1
	Vario	433.92	1-2-3-1
Rossi		433.92	1-4-3-1
Sea		433.92	1-2-3-3
Seav		433.92	1-2-3-4

Replacing remote control battery

 When the battery of the Remote Control is low, indicator light will become dim and/or the range of the Remote Control will decrease. To replace the battery, pry open the Remote Control using a small screwdriver. Replace with a CR2032 battery. Snap the housing back together.

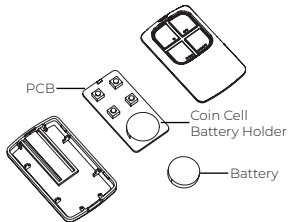

For information and help call
1-424-272-6998
Guardian Access & Door Hardware
1761 International Pkwy, Ste 113
Richardson, TX 75081
www.adhguardianusa.com

WARNING This product can expose you to chemicals that are known to the State of California to cause cancer, birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

Guardian is a registered trademark of ADH Guardian USA LLC.
All other trademark and brands listed are the property of their respective owners.

For additional information, including warranty, visit: www.adhguardian.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. FCC Part 15.21 Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Important Note:

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated without restriction.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.