## User Manual:

Thank you for purchasing Power Bank. For optimum performance and safety of using this product, please read these instructions carefully before operating the product. Please keep this manual for future reference reference.

# Product specifications:

Battery Capacity: 10000mAh
Battery Type: Lithium Battery
Type-C Input: 5V/3A, 9V/2A

Type-C Output: 5V/3A.9V/2.22A.12V/1.67A
Wireless Output: 5W/7.5W/10W/15W
Size: 64.5\*99\*16.9mm

## Product Structure Drawing:

 


Power On/Off: Press the power on/off button, then the LED indictor on.

LED Display: The LED indicator will keep flashing when charging, LED indicators will keep on when discharging. This device will automatically powered off if no-load.

Tip: Please charge the device when the charge is less than 20%. This device has safety protection that prevent the battery from damages when overcharging.

### Charging Instruction:



Caution: If there is no response when touching the power on/off button, please charge the device immediately.

Important: Please turn on the power before charging other devices. Please charge the device at least once every 3 months to avoid the potential damage of battery cells in the power bank. Please contact your local recycling center for proper way to discard your used device in accordance with local regulations.

### Product Specifications:

DO NOT throw the power bank into the fire.
DO NOT disassemble, open, crush, bend, deform, puncture, shred or submerge the power bank.

DO NOT attempt to dry up this device with any appliance or heat sources, such as hair dryer or microwave oven. Children should be supervised when using this device. Avoid dropping this portable power, especially on hard surfaces.

Model Number: 00013

User Manual