

Wireless Speaker -S3900 Wireless Speaker	Wireless Speaker -S3900 Wireless Speaker	Wireless Speaker -S3900 Wireless Speaker	Wireless Speaker -S3900 Wireless Speaker	Wireless Speaker -S3900 Wireless Speaker	Wireless Speaker -S3900 Wireless Speaker
<p>SOONBOX S3900 Wireless Speaker/ Portable Wireless Speaker</p>  <p>Technical specifications:</p> <p>Wireless standard: 5.3 Transmission distance: 10 meters Output power: 10W*1 Playing time: 4-6hours Speaker size: 57mm 4Ω 10W*1 Input power: 5-1A Maximum current consumption: 2A Battery type: 2000mAh Charging port: Type-c charging cable</p> <p>Features:</p> <ol style="list-style-type: none"> 1.Wireless connection 2.Memory function,breakpoint resuming. 3.Support U disk/TF card/FM/TWS playback mode. 4.Built-in lithiumion battery. 5.Support MP3 music format decoding. 6.Using high-fidelity speakers,the sound is more natural and delicate. 7.1+device serial connection function. 	<p>Wireless Speaker -S3900 Wireless Speaker</p> <p>① ⚡ Multifunction button</p> <p>② ⚡ Lightshow turn On / Off</p> <p>③ ⚡ Function mode switch</p> <p>④ Upper ⚡ Next Song / Volume +</p> <p>⑤ Lower ⚡ Previous Song / Volume -</p> <p>⑥ ⚡ TF Jack</p> <p>⑦ ⚡ Type-C Jack</p> <p>⑧ ⚡ USB Jack</p>	<p>Wireless Speaker -S3900 Wireless Speaker</p> <p>Button instruction:</p> <p>1.Long press " ⚡ " for Turn On and Off. Short press " ⚡ " Play and Pause; When there is an incoming call, short press to answer the call, press again to end the call, long press to reject the call, press twice to redial.</p> <p>2.Short press " ⚡ " switch the light mode. Long press " ⚡ " for turn on and off the light;</p> <p>3.Short press " ⚡ " to switch function mode,long press to enter TWS pairing mode;</p> <p>4.Short press Upper Button " " :increase volume; Long press " " :Next song;</p> <p>5.Short press Lower Button " " :decrease volume; Long press " " :Previous song;</p> <p>6.TF jack: When inserting a TF card, the default is TF card playing mode;</p> <p>7.Type-C Jack:</p> <ol style="list-style-type: none"> 1. Charging cable port, when inserting the Type-c charging cable, the device is charged by default; 2. When using the radio function, you need to insert the charging cable as a radio antenna and the radio function can be used normally; 3. When low power of 3.4V is detected, it prompts to shut down three times. <p>5. Mode switching:</p> <p>1. When turned on, it defaults to Bluetooth mode;</p>	<p>Wireless Speaker -S3900 Wireless Speaker</p> <p>Directions for use:</p> <ol style="list-style-type: none"> 1. Wireless pairing: Open the wireless device and search for Bluetooth pairing name SOONBOX-S3900MINI connection pairing. 2. Play instructions: Bluetooth search status: the on/off light flashes quickly, approximately 0.5 seconds per time; 3. Bluetooth pairing status: The on/off light is constantly on, while the playback status: The on/off light flashes slowly for about 1 second per time. 4. Charging indicator light: When charging, the red light is on, and when fully charged, the red light is off; 5. Prompt tone: 1. There is a prompt tone when turning on/off; 2. There is a prompt tone when the maximum volume is reached, and there is no tone at the minimum volume; 6. Reset: When the machine can not shut down due to abnormal conditions, long press the 10-second switch button Reboot. 	<p>Wireless Speaker -S3900 Wireless Speaker</p> <p>2. Mode switching sequence: Bluetooth mode - FM mode - TF mode - USB mode - AUX mode, with priority given to rear insertion.</p> <p>6. Volume requirements: The default volume for startup is 70%;</p> <p>7. Power saving function: Automatically shut down after 10 minutes of inactivity.</p> <p>FCC Statement[for Remote control]</p> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> — Reorient or relocate the receiving antenna. — Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help. <p>This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.</p> <p>Radiation Exposure Statement</p> <p>The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.</p>	<p>Wireless Speaker -S3900 Wireless Speaker</p> <p>Troubleshooting :</p> <ol style="list-style-type: none"> 1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically,Please charge for 4 hours after use; 2. Cannot play music: The storage path of the music file cannot be recognized by the player,please store it in the root directory of the removable device; 3. There is no sound when connecting to the computer:the computer interface is connected incorrectly,please select the correct audio output port. 4. There is no response to the keys or the function is in disorder, try again after shutting down. 5. Reset: When the machine can not shut down due to abnormal conditions, long press the 10-second switch button Reboot.