

# Internet TV/ Radio User Manual



- >support WIFI IEEE802.11b/g
- >with 12,000 Internet Radio and 1500 Internet TV
- >support SDHC card up to 32G
- >support calendar & alarm clock& FM Radio

# **Contents**

## **1. Introduction**

### **1.1 Preface**

### **1.2 Package Contents**

### **1.3 About the Player**

### **1.4 Cautions**

## **2. Remote Control**

## **3. Wireless Network Connection**

## **4. Main Menu**

### **4.1 Network**

#### **4.1.1 Internet TV**

#### **4.1.2 Internet Radio**

#### **4.1.3 Podcast**

#### **4.1.4 UPnP**

#### **4.1.5 Shout cast**

### **4.2 Play stored media**

### **4.3 Settings**

### **4.4 My Favorite**

### **4.5 FM Radio(Optional)**

### **4.6 Line-in**

**5. Special Features**

**6. Specifications**

**7. Troubleshooting**

# 1. Introduction

## 1.1 Preface

Thank you for purchasing our Internet TV/Radio Wi-Fi Portable Media Player.

We hope you will enjoy using this as a great multifunctional device. This player has the following features:

- 3.5 inch LCD screen Internet TV/ Radio Player
- WLAN with IEEE 802.11b/g
- Clock with Alarm Function
- Calendar Function
- Supports WEP; WPA and WPA2 encryption
- UPnP
- FM Radio(optional)
- Card Reader for SD or SDHC cards
- Stereo audio input (LINE IN)
- Stereo Speakers with 2x 2 Watts power
- Integrated Multimedia-Player


## 1.2 Package Contents

Unit	Quantity
Player	1pcs
Power Adapter(5V/1A)	1pcs
User Manual	1pcs
Remote Control	1pcs
FM antenna	1pcs(Optional)

**Note:** The actual contents in the package might be different from the package contents in this manual.


## 1.3 About the Player

### 1.3.1 Top Side

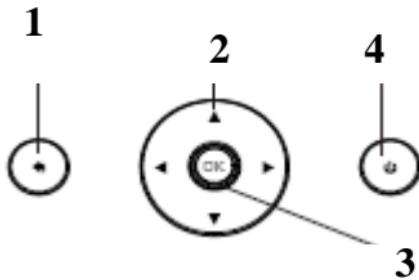

No.	Function
1	Menu/ Return button
2	Navigational Buttons
3	Enter/Play button
4	Power On/Off button


### 1.3.2 Rear Side

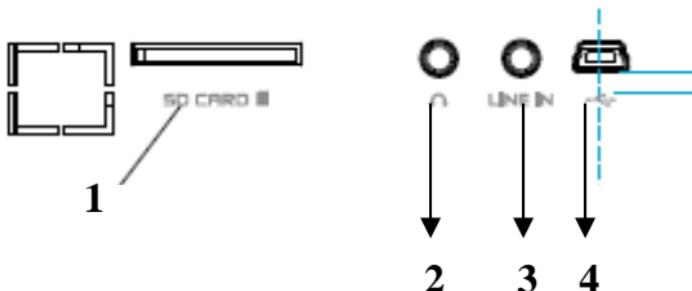

No	Name	Function
1	SD Card	For SD/ SDHC Card connection
2	Era phone	-ear phone connector
3	LINE-IN	Stereo Audio Input
4	USB	USB port for power connection/for connect PC

### 1.3.4 Bottom Side

On the bottom is the battery compartment. You can use four AA batteries (make sure the correct orientation of polarity).

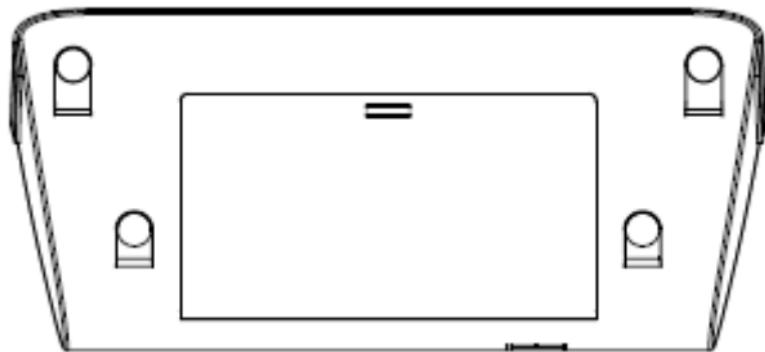

## 1.4 Cautions

Failure to properly set up, use, and care for the Internet TV/Radio Player can increase the risk of serious injury or death from electric shock or fire, or damage to the player. Read this manual for important safety and health information.

- Select an appropriate power source for your Player
- Avoid damaging the power cords and power supply.
- Do not hit the player with hard object, avoid shaking the player.
- Do not expose the player to sources water or other liquid.
- Do not press the buttons of the player too hard
- Protect the player from being walked on.
- Protect the player from overheating.
- This device unsupported charging battery

## 2. Remote control

In the following description, most operations can be carried out using the remote control buttons.



<b>KMP510</b>	<b>Button</b>	<b>Definition</b>
1	Power	Power on/off
2	SUB-MENU	Delete favorite file& return to current playing interface
3	Calendar	Enter calendar interface
4	Clock	Enter clock interface
5	MUTE	Press to mute audio output
6	PG.UP	Press to view previous page/file/FM frequency modify
7	PG.DN	Press to view next page/file/FM frequency modify
8	Fav	Press to access to My Favorite list
9	REPEAT	Press to repeat file
10	INT.TV	Press to enter Internet TV menu
11	INT. RADIO	Press to enter Internet Radio menu
12	Navigational Buttons	Press to select menu/file options
13	OK	Press to confirm the selected file
14	EXIT	Press to return to the previous screen
15	HOME	Press to enter main menu
16	FF	Press to fast forward the current playback
17	FR	Press to fast reverse the current playback

18	PLAY/PAUSE	Press to play/ pause the current playback
19	STOP	Press to stop playback
20	VOL +	Press to increase the volume
21	VOL-	Press to decrease the volume
22	Color buttons	(red/blue/yellow/green)buttons, no function

#### Notice:

- Remote control operation range: Within 4m from front panel, angel<30
- When using the remote control, please point the remote control towards the remote receiver.
- Make sure the signal from the remote control to the receiver on the player is not blocked by solid objects.
- Remote control definition will be changed along with FW upgrade.
- After update FW, please notice the extra explain list.

### 3. Wireless Network Connection

The WiFi- equipped device offers a variety of functions, such as Internet TV, Internet Radio, Shoutcast,

Podcast etc. You need to set up and establish a wireless Internet connection.

You need a wireless router with valid and active account to access the Internet.



- Start the unit with the POWER button.
- Go to the Main Menu, follow Setting->Network setup->WIFI Setup  
(Select the connection type and check the option DHCP settings)
- Select the option AUTO SCAN and confirm to search for available wireless networks.
- Secured networks are shown with a lock icon. Then enter the password on the OSD keypad. Use the Navigational Buttons to control the individual letters and confirm each selection with the **OK** button.
- The player will be connected then. The Wi-Fi icon will display the signal status of Wi-Fi.(Press **Home** button go directly to main menu)

## 4. Main Menu

After connecting the USB jack and press the power button on the top of the player, it will enter the home screen. Follow the on-screen instructions to access your desired sub-menus. Under main menu, you should see sub-menus: Network, Play stored media, Setting, My Favorite, FM, and Line-in.

Note: To turn on your player, you can also press the Power button on the remote control.

### 4.1 Network

This menu include five functions: Internet TV, Internet Radio, UPNP, shout cast, Podcast



#### 4.1.1 Internet TV

Enter this menu, you will have access to more than 600 TV programs, use the navigational buttons to choose by region and genres as you wish. (You can press **PG.UP** and **PG.DN** buttons to quickly navigate through long lists.)

#### 4.1.2 Internet Radio

Enter this menu, you will have access to more than 2000 TV programs, use navigational buttons to choose by region and genres as you wish. (You can press **PG.UP** and **PG.DN** buttons to quickly navigate through long

#### 4.1.3 Podcast

Podcasting refers to the production and provision of subscription-media files (audio or video) over the Internet. Under this menu, select the options and confirm the selection by navigational buttons. (You can press **PG.UP** and **PG.DN** buttons to quickly navigate through long lists.)

Stop the Podcast with the **RETURN** or **STOP** button and you get back to the list.

Stop the podcast with the **HOME** button, then directly get back to the main menu.

#### **4.1.4 UPnP**

This feature allows you to share your favorite list with your friends. Install to the UPnP function on all computers which are involved.

#### **4.1.5 Shoutcast**


This can supply another radio list.

### **4.2 Play stored media**

Under this menu, you should see two sub-menus: Local Disk and SD Card. The menu allows you to access to media files stored on Local Disk and SD/SDHC card (after connected). After confirmed, all folders and supported contents (music, photos, and movies) will be displayed.

Note: Local Disk only available if the player comes with build-in memory (optional)

### **4.3 Settings**

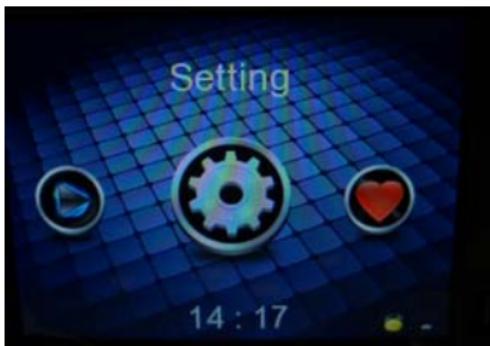

Enter this menu to configure system settings, including **language**; **Network**; **Alarm**; **Slide show setting**; **Screensaver Time**; **Time Zone**; **Firmware Update**; **Auto Off**; **Calendar**; and **Restore Factory Setting and About**. Please follow the on-screen instructions to set your preference to suit your needs.

#### **4.4 My Favorite**

You can define Favorites of Internet TV and Internet Radio as you wish.

*Note:* If the broadcaster still playback, then you can not define as a favorite.

#### **4.5 FM (optional)**

To use the FM radio you must connect the supplied antenna first. Connect the 3.5 mm connector to the earphone jack

Under **setting** menu, select **FM search** in the list, the available frequencies will be displayed after scanned, enjoy the radio as you wish.

**Note:** you can follow below tips to remote control the playback:

- Press "Left/Right" buttons to enjoy previous/next radio station
- Press "PG.UP" to increase frequency 0.05M
- Press "PG.DN" to decrease frequency 0.05M
- Press "HOME" button to go back to the main menu


#### **4.6 Line-in**

To use the stereo input, connect a 3.5 mm to 3.5 mm adapter cable to the LINE IN port

## 5. Special features

### 5.1 Main menu

- Press “calendar” button to display calendar
- Press “clock” button to display clock.

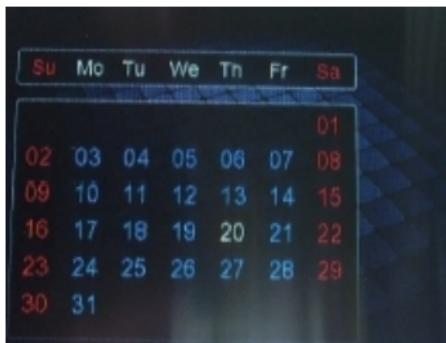

## 5.2 My Favorite menu

Under this menu, press “SUB-MENU” button to delete the files as you wish.

## 5.3 Music Playing Interface

You can press “SUB-MENU” button to go back to music playing interface, if you are under another interface with the music playing (except favorite menu)

# 6. Specification

<b>Model No.</b>	<b>VWMP-1</b>	
Display Size	3.5" LCD	
Resolution	320*240 Pixel	
earphone	Earphone jack	
Connective	Speaker	Build-in 2x2Watts speaker
	USB	1*USB Slave(for power connection)
	SD Card	1* SD card slot for SD and SDHC card(1 bit)
	Line-in port	For 3.5mm audio cord connection
WLAN	WLAN security	WPA,WPA2 and WEP
	Wi-Fi Search	Auto Search; Manual Search
	Wi-Fi Standard	IEEE 802.11 b/g
Power	AC/DC Adapter	5V (USB Port)
	Battery	4xAA
Physical	204mm(L)X89.mm(W)X92mm(H)	

Dimension	
-----------	--



Specifications are subject to change without notice.

## 7. Trouble shooting

If you encounter problems when using this unit, check the following points before requesting service.

Problem	Solution
No Power	<ul style="list-style-type: none"> <li>- Confirm that you have an appropriate power source</li> <li>- Check the cable from the mains adapter is connected properly to USB port</li> <li>- Switch power button on top of the player to turn on the power</li> </ul>
The Player does not respond to the remote control	<ul style="list-style-type: none"> <li>- Point the remote control towards the remote receiver.</li> <li>- Make sure the signal from the remote control to the receiver on the player is not blocked by solid objects.</li> <li>- Re-insert the batteries with their polarities (+/- signs) as indicated.</li> </ul>
Date and Time are wrong	<ul style="list-style-type: none"> <li>- Control the settings Time Zone and choose your region.</li> <li>- Set Date and Time again</li> </ul>

No sound	<ul style="list-style-type: none"><li>- Check that the VOLUME isn't turned down, or the MUTE button pressed, and adjust the volume</li></ul>
Hard hung	<ul style="list-style-type: none"><li>- please press "power" key of the panel last 10s to reset the system or pull out adapter</li></ul>

All the information contained in this manual was correct at the time of publication. However, as our engineers are always updating and improving the product, your device's software may have a slightly different appearance or modified functionality than presented in this manual.

## **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

**NOTE 1:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.