

# User Manual

## The Action Back™ Remote

CGW-002



Xiamen Pinrui Trade Co.,LTD.

Baitou Hill, Ying Village, Houxi Town, Jimei Area, Xiamen City, Fujian Province, China

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

## How To Connect The Remote To "The Action Back"

Remove the motor box door by unscrewing the wing nut on the front of the motor box. Unplug the pushbutton switch by pushing down on the lever on the connector and gently pulling it apart. Disconnect the battery terminal from the battery. You can remove the pushbutton switch from the motor box if desired and plug the hole with the rubber plug. Plug the receiver into the motor connector you removed the pushbutton switch from. Connect the battery terminal to a 9-volt battery and place the battery in the battery holder. Remove the piece of Velcro from the back of the receiver and remove the white piece of paper to reveal the adhesive. Place the Velcro inside the motor box on the left side of the box. This will give a mounting surface for the receiver to adhere to. Start to run the black wire of the antennae through the small hole in the side of motor box. Place the remote receiver inside the motor box with the wiring pointing forward and secure the unit by sticking the Velcro pieces together. Pull the antennae wire through the hole and bend it around the plate under the motor box to secure the wire. Replace the door and secure the wingnut. The remote unit is now ready for use. To use the remote, push the button on the "keychain" remote to activate the motor and push once more to stop.

**!! Disconnect battery between uses !! The receiver will drain the battery when not in use.**

This remote transmitter and receiver are designed to be used with "The Action Back" Pack Feeder/Seeder. The connections are not compatible with any other device. Alteration of any part of the transmitter, receiver, or wiring will void the warranty. Limited one year warranty from the date of purchase.

We have tried to make this and all products from Compass Game Works simple and easy to use. If you do have questions, feel free to call toll free: 866-656-7277 Monday-Friday 8:00am to 5:00pm CST. You can also visit [compassgameworks.com](http://compassgameworks.com) for product instruction manuals.



Compass Game Works  
P O Box 8771  
Corpus Christi TX 78468  
866-656-7277  
[www.theactionback.com](http://www.theactionback.com)

Remote CGW-002



8 94416 00207 5

Made in China