

INSERTING SIM CARD

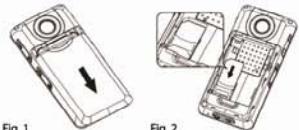


Fig. 1: To remove battery cover, push down and slide.
Fig. 2: Slide SIM card in with gold contact facing down.

Dear Customer,
Thank you for the purchase of your Snapfon.
Included in the box: Mobile Telephone, Charger, Battery, Soft Case, Lanyard, User Guide.

KEY FUNCTIONS

End Call/Backspace/Delete/Power On & Off

- End a call
- In menu: one step back
- Backspace
- On/Off: press for 2 seconds

Receiver

Display

Arrow Keys

- Main Screen: → Enter the menu
- Main Screen: ← Enter the Phone Book
- Use to scroll within the menu and Phone Book

Answer/OK-Key

- Make call or answer call
- Within menu: Confirm selection
- Main Screen: View dialed numbers

1 - Key (Voice Mail)

Press and hold to dial voice mail

2 - Key (Speed Dial, Text Characters, Radio Scan)

- Main Screen:
- Press and hold for Speed dial key (see section on Speed Dial keys for more information.)

- For SMS: Special characters

(.,?;:;@ - & + - () <> { } % = / \ # * \$ & ...)

- For Radio: Press and hold for Radio Scan, OK to scan

LOADING AND CHARGING BATTERY

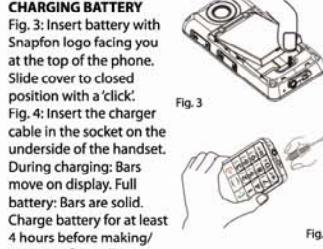


Fig. 3
Fig. 4

DISPOSAL

Disposal of packaging: Packaging and packaging aids are recyclable and should be entered into the recycling process.
Battery disposal: Batteries do not belong in the household trash! As a consumer, you are obligated to return used batteries. These can be handed into local collection areas or to specialty shops.



Device Disposal: When this product is eventually taken out of service, please do not throw it into the household trash. Take care of the environment by bringing it to a collection area where old devices are accepted and brought into an environmentally friendly disposal/recycling procedure.

FREQUENTLY ASKED QUESTIONS

- **Screen shows "No SIM card!":** Check the direction of the SIM card (Gold contact facing downwards)
- **A call failed:** Check the selected telephone number and area code again for accuracy (area code entered?)

• **The mobile telephone display is blank/black:** Telephone is in energy saving mode: press any key. Or it is switched off - Hold ☎ (end key) for 2 seconds long to switch on.

• **The mobile phone does not react:** Remove battery, Re-insert and switch device on. If there is still no reaction, refer to the service center.

• **The charging procedure does not begin:** This can take several minutes. If there is no reaction after 10 minutes, contact manufacturer or sales agent.



SAFETY INSTRUCTIONS

Switch off mobile telephone in hospitals or near medical devices. There should be a minimal distance between pacemakers and switched-on telephones. Do not operate a vehicle while holding a mobile phone in your hand. Follow the laws and traffic rules of the country you are in.

The mobile phone is to be switched off while you are in an airplane.

The telephone is to be switched off near gas stations or other areas with explosive materials.

Never shine the LED- flashlight into the eyes of humans or animals!
(Protection class 3)

TECHNICAL DATA

Dual band GSM 850/1900MHz Battery: Li-Ion 3.7V / 1000mAh Dimensions: 103x49x15mm Standby-Time: 120h Weight: 79.6g (With Battery) Talk time: 120min

INTENDED USE

This mobile telephone is durable and intended for mobile use. It is to be protected from moisture and impacts. Do not expose to prolonged direct sunlight.



Improper use may lead to damage of product and could be associated with hazards such as electrical shock or fire. The entire product may not be altered or rebuilt nor may the housing be opened.

The power adapter is designed for use in household wall outlets with public electricity grids of 100-240 volts AC / 50/60 Hz.

REPLACEMENT PARTS

www.snapfon.com OR
www.snapfon.com/accessories.php

Flashlight

- Switch up: Flashlight on
- Switch down: Flashlight off

Keypad Lock

- Switch up: Lock off
- Switch down: Lock on

WARRANTY & RETURNS

The Snapfon ez ONE, is warranted against defect, malfunction, and product failure for one year from the date of purchase. The warranty covers problems or defects that are a result of normal usage. The accessories are warranted to be free from malfunction or defects for 90 days.

This warranty does not apply to damage done to the phone by shipping, misuse, abuse, neglect, accident, or exposure to any type of moisture. The phone should be disconnected from its charger during thunderstorms, or events that can cause power surges. It is not warranted against damage from voltage fluctuations. The battery is not covered under this warranty, due to its expendable nature. The battery is guaranteed to be functioning at time of purchase only. The phone warranty is void if batteries other than Snapfon authorized or recommended batteries have been used. If a problem develops due to a third party battery, or charging adapter please contact the manufacturer of that accessory for redress or compensation. If a problem develops during the warranty period, please return your phone to us and we will either repair it, replace it with a

new/refurbished unit, or issue a refund. If we choose to refund your purchase it may be prorated based on use and condition of the returned merchandise.

The shipping charges for returning a working phone to you are covered by the warranty. The product should be returned with all the accessories, with clear return shipping instructions that include your address, phone number, and a detailed description of the reason for the return.

All returns must be approved prior to shipment, and an RMA (Returned Merchandise Authorization) number should be present on the package or the shipment may be refused. Warranty approval and RMA's can be requested via email, or telephone.

Snapfon
1222 Tremont Street, Suite 100
Chattanooga, TN 37405
423-535-9968
www.snapfon.com
support@snapfon.com

DISPLAY SYMBOLS

	Battery status
	Signal status
	Alarm
	Unread SMS
	SMS inbox full
	Voicemail on the network
	Call transfer
	Missed call
	Silent Mode ON
	Silent with VIBE mode ON
	Roaming
	Headset plugged in
	Locked keypad
	New SMS when keypad is locked.
	Missed Call when keypad is locked.
	New Voicemail when keypad is locked.



97.5

RADIO: Change volume with and

①

THE FIRST STEPS

To switch on, press the (end key) for at least 2 seconds. To switch off, also press for 2 seconds.

Entering Menu: Press

- Scroll through menu points: with and
- Confirm: with
- (end key), when held for 2 seconds, takes you back to the main screen.

Incoming Call:

- Answer: Press - Reject: Press
- To end call: Press

To Dial: Enter the telephone number and press the
Repeat Dial: By pressing the , you reach the dialed numbers. Select a number with and and begin the call with pressing the twice.

②

④

⑥

⑩

⑫

Storing phone book entries (Name & Number):

- Enter Phone book menu by pressing then press the (down arrow key) one more time to enter the Phone book from the home screen. Then press
- Press the , then press to select Add Contact.
- Use the to select Save to Phone, or Save to SIM card, and press .
- Enter name (See section on SMS for text entry), press , enter number, press .

Searching phone book entries:

- Open the Phone book with:
- Scroll through the entries with and OR
- Use "search name" by entering the first letter of the contact's name on the keypad - if necessary scroll through with .

Note: This telephone does not recognize whether a person or machine has picked up the call and assumes that the call has been successfully connected!

If no emergency number is saved or if your SIM card has expired or you have no access to a network, 112 can be dialed. (112 is the same as dialing 911) ⑤

Hands free Speaking:

The Hands free option can be switched on or off by pressing KEY 0 during an active call.

SPEED DIAL KEYS

Dial a saved number with one press of a key. Press and hold the * or # key or any key 2 to 9.

- To set, enter the Phone book by pressing the (up arrow key) 6 times, then .
- Press the to scroll to Speed Dials. Press .
- Press the to select the key to assign to your contact. Press .
- Press to select change.

Press the arrow keys to search for name in the Phone Book or use the name search by entering the first letter of the contact's name on the keypad - if necessary scroll through with . When contact is displayed, press the .

NOTE: The name must already be saved in the phone book. Saving a new entry directly to a speed dial key is not possible.
Key 1 is reserved for the voicemail number. You can change this in the menu:

EMERGENCY FUNCTION

You can save a total of 5 emergency numbers (family, neighbors, friends, emergency services). These preselected numbers will be dialed automatically in a stored sequence in an emergency, if the emergency button on the back of the phone is pressed and held. A warning signal sounds during the emergency so that you and the people around you will know that it is an emergency! If the first number is not reached, the second number will be called automatically. If the second number is not reached, the next number will be called and so on (max. 3 rotations of the numbers.)

Note: This telephone does not recognize whether a person or machine has picked up the call and assumes that the call has been successfully connected!

If no emergency number is saved or if your SIM card has expired or you have no access to a network, 112 can be dialed. (112 is the same as dialing 911) ⑤

Saving emergency numbers:

a. To set local emergency number, or add SOS contacts in menu go to "Phonebook", press , then go to SOS contacts. Press , the screen will say "No Record!" press and press on Add Contact, input the number, or press to "search name" in contacts. Press the to save.

b. In the menu, scroll to the Phone Book and press . Scroll to SOS contacts and then press twice. To Add, Edit, or Delete contact, you must highlight a contact and press the .

For additional contacts, select Add contact and press , insert number and press to save.

OR Select Edit to change the number if you have existing contacts. Remember to use the as a backspace key while editing the number.

OR scroll down to select delete and press to delete one of your emergency contacts.

With you can read the message immediately or see a list of messages which have already been received in the menu by going to the Messages menu, press , press the and then press the to select Inbox use the arrow keys to scroll messages and the to select and view.

Switching Emergency Function On/Off

In the menu select Settings. Press the , scroll to SOS Options and press the . On SOS Button press the . Select "on" to activate SOS button. Press Select "off" to deactivate SOS button. Press

SMS MESSAGES

SMS (Short Message Service) are written messages with a maximum of 160 characters.

• Write new SMS: Press the to Messages and then press . Press again to select Create Message. The text entry takes place over the keypad as each key is supplied with several characters which appear upon multiple presses. (for example: press the # two times = h, press # three times = E, press # five three times = l, press # one time = p, this spells "Help") ⑦

(e.g. 2x [4], 2x [3], 3x [5], 3x [6] for Hello).

By pressing you switch between entry methods:

ABC - all capitals, 123 - enter numbers, abc - all lowercase. These are displayed in the upper left corner of the screen.

• After composing a text message, send the message by pressing the twice, enter the number or dial from the Phone Book by pressing the , scroll through names to select, press , view number, press to send.

• Receive SMS: A short signal and a registration on the display inform you about an incoming SMS message.

With you can read the message immediately or see a list of messages which have already been received in the menu by going to the Messages menu, press , press the and then press the to select Inbox use the arrow keys to scroll messages and the to select and view.

RADIO

- On: Switch on the left side upwards.
- Off: Switch on the left side downwards.

Station enter/search:

- If the desired station is known, enter frequency over the numeric keypad or scroll through the frequency values with and then confirm with , same for decimal place.

- Open automatic station search with *, use to continue to next station and confirm station with .

• When you switch your radio off and on again, you are on the last heard station again.

• To mute radio: Press - to activate again press again.

• Change volume: (does not function in automatic search) with + & - on the left side of the telephone.

• Headphones: You can use the radio with and without headphones.

When the alarm clock goes off, turn off with (end key) or activate snooze function with and the clock will sound again after 5 minutes. (Note: If the alarm clock is switched on in the menu, it will ring again the next day)

SETTINGS MENUS

Silent Mode/Vibrating Alert / Tones / Time & Date

Press the 2 times to reach the settings menu. Press the

- Silent Mode: Press Use the arrow keys to highlight on or off and press the .

- Vibrating Alert: Press the to Vibrating Alert and then press . Use the arrow keys to highlight "Enable" or "Disable".

- Ringtone: Press twice then press , on Settings menu, press the twice to Personalize and press .

- To mute radio: Press - to activate again press again.

- Change volume: (does not function in automatic search) with + & - on the left side of the telephone.

- Headphones: You can use the radio with and without headphones.

⑨

ALARM CLOCK

- From the main screen press 4 times. Press to select Alarms menu. Press the again to select Alarm Clock.

- Press to select Set Alarm. You can set 3 separate alarms. Use the arrow keys to select an alarm and press

- Press to Set Alarm. Use the arrow keys to highlight One Time Alarm or Choose day. If you choose One Time Alarm then enter the time and press OK. If you choose Choose day a list of the days of the week will appear. Use the to select or deselect the day you want the alarm to sound. Press the to move to the next day of the week. When you have finished selecting the days of the week for the alarm to sound, highlight Confirm Selection and press .

- Press or to select the time and press the . Then AM or PM. Press to select the alarm tone and press the . The alarm is set.

⑩

- Speaking Keypad: From the Settings menu, press the 4 times to highlight Speaking Keypad and press . Use the to select On or Off. Press to set.

⑫