

naki Bolt

Kosher Audio Player

🎵 MUSIC

📖 STORIES

💬 SHIURIM

📺 STATIONS

🎙️ LIVE SHOWS

User Manual



Pure Energy

Table of Contents

1	Introduction	
1.1	Safety	
1.2	Features	
1.3	Carton contents	
2	Controls	
2.1	Switching On and Off	
2.2	Connectors	
2.4	Power and Battery	
3	Getting Started	
3.1	Setup	
3.2	Naki Home	
4	Settings	
5	Device Settings	
5.1	Wifi	
5.2	Bluetooth	
5.3	Font Size	
5.4	Brightness	
5.5	Use Device as a Speaker	
5.6	System App Updates	
5.7	Time Zone	
5.8	Screen Apps	
5.9	Factory Reset	
5.10	About	
6	Programmable Buttons	
7	Now Playing Screen	
8	Playlists	
9	Troubleshooting	
10	Warranty	
11	Technical Specifications	

 
1.0 Introduction

Thank you for purchasing a Naki BOLT. The BOLT will provide you and your family with hours of education and entertainment from approved music, stories, stations and shows.

We understand that in today's media driven environment, families need to filter and choose the proper media they wish to be exposed to.


Naki hopes that with Siyata D'Shmaya we can help you and your family limit your exposure to inappropriate media and enjoy the rich world that kosher broadcasts and podcasts have to offer to the discerning listener.

For more options and choices of content available to hear on your BOLT, be sure to visit the Portal at portal.naki.audio or use the QR code below.

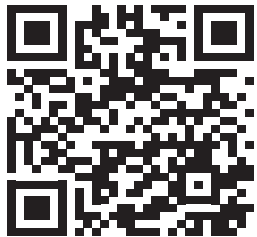

Once you create a free account and link your BOLT, you can add/remove content, use parental controls to limit usage, and more.

For more information, and for technical support, please email support.naki.audio

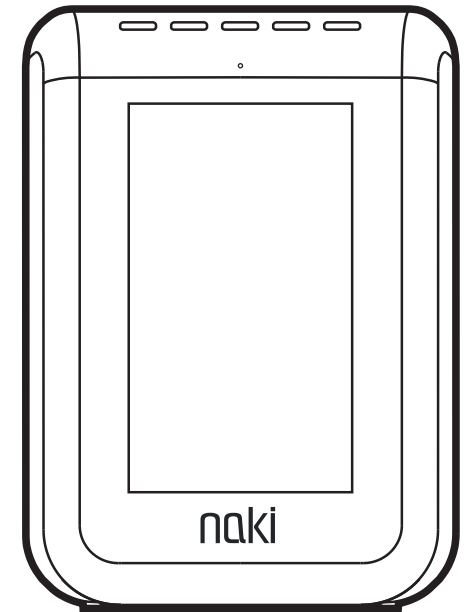

1.1 Safety

Safety Instructions

Please store this instruction manual for future reference.



- **WARNING:** To reduce the risk of fire or electric shock, do not expose this device to rain or moisture. The apparatus should not be exposed to dripping or splashing. Objects filled with liquids, such as vases, should not be placed on device.
- **WARNING:** The direct plug-in adapter is used to disconnect device from power source, please assure the wall adapter remains accessible at all times.
- **WARNING:** To reduce the risk of electric shock, do not disassemble this product as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- **Correct disposal of this product:** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
- No open flames, such as lighted candles, should be placed on the apparatus.
- **WARNING:** The device should not be exposed to excessive heat such as sunshine, fire or the like.

- Do not use this product near water or moisture.
- Clean only with a dry cloth.
- Unplug this product from the wall outlet before cleaning.
- Place the unit on a solid surface.
- Do not install near any heat sources, such as radiators, heat registers, stoves or other appliances that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs and at the point where it exits from the product.
- Servicing is required when the product has been damaged. Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards.
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords.
- Do not let objects or liquids enter the product.
- Use proper power sources. Plug the product into a proper power source as described in the operating instructions or as marked on the product.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

1.2 Features

This manual describes how to use the BOLT, an advanced but easy-to-use Wi-Fi connected audio system with the following modes:

- BOLT plays the very best music, stories, shiurim, and podcasts available in the kosher audio world.
- Bluetooth®-In for external music sources, such as from a smartphone, tablet or other media players.

The BOLT also provides the following features:

- Touchscreen for easy control and clear information display.
- Multiple network profiles for easy setup.
- Rechargeable battery.
- Hand recess to enable easy carrying.
- Non slip rubber pad.

1.3 Carton contents

After you unpack the box, you will find the following items:

- 1 BOLT speaker
- 2 Power adaptor and plugs
- 3 Quick Start Guide

2. Controls

2.1 Switching On and Off



Press and hold the ON/OFF button to power on the device. To switch off BOLT, press the On/Off button for two seconds, then press the POWER OFF option on screen.

When being used, the screen will automatically switch off after a certain amount of time but BOLT will continue to play. You can configure the SCREEN OFF time in SETTINGS. To wake up BOLT simply double tap the screen.

2.2 Controls

Press the ON/OFF button to power on the device. Press the - and + buttons to adjust the volume. There are two programmable buttons that can be configured in SETTINGS to perform certain functions.

- 1 ON/OFF button
- 2 VOLUME buttons
- 3 Programmable buttons (see page X)

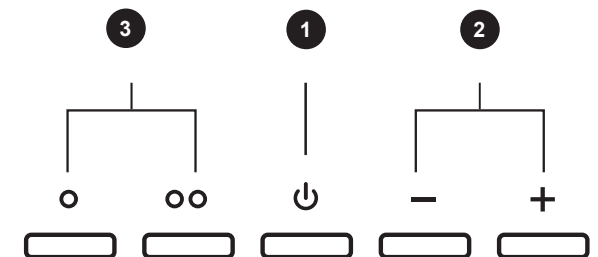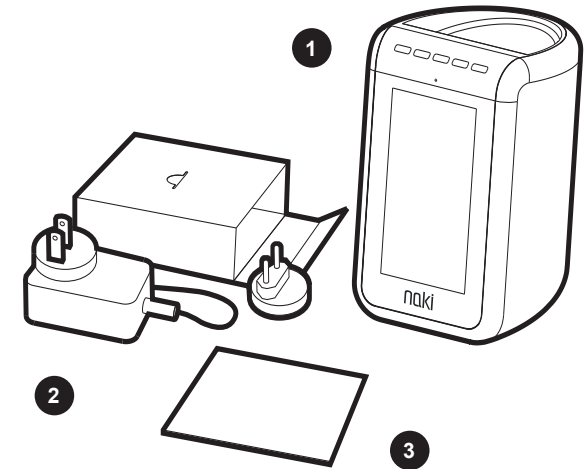


2.3 Connectors

The Bolt has two connectors in the rear. The DC power connector will power the unit and also charge the battery. There is also a connector to plug in wired headphones.

1 DC

2 Headphone jack

(please note, 4-pole headphones are not supported)

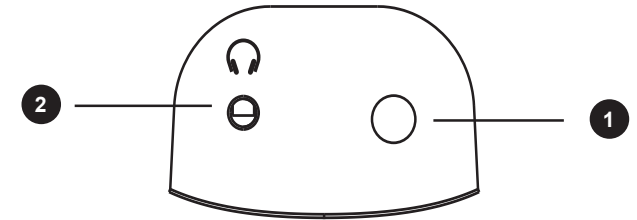

2.4 Power and Battery


Charging

Your BOLT contains a lithium ion battery and depending on the volume, is capable of providing 5 hours of playback time.

The battery icon on the screen tells you how much the battery is charged and if it's charging.

To charge your battery, simply plug in the power jack at the end of your plug-in adapter and switch on the mains electricity. The battery icon will change to show that the Pulse is charging.

CAUTION: To ensure your battery is kept healthy, only use the mains charger provided with the unit at the time of purchase.

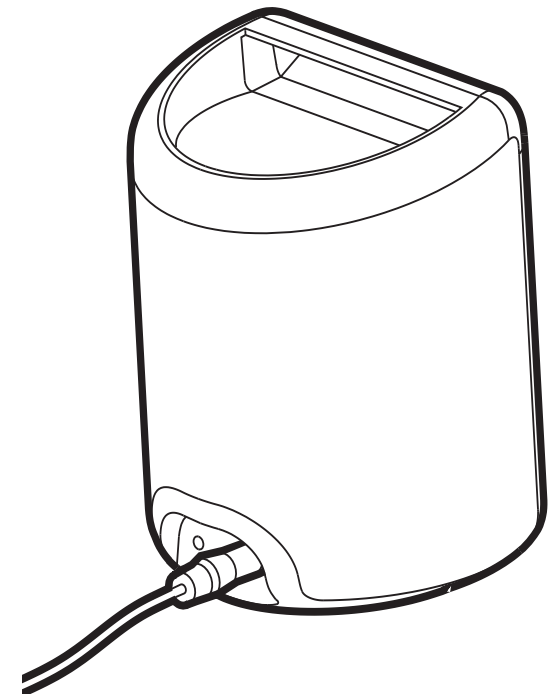

3. Getting Started


Your BOLT is easy to use. The following steps will help you set up your device so you can start to listen to all the Naki content.

3.1 Setup


YOU MUST HAVE A WIFI NETWORK WITH INTERNET ACCESS FOR THE BOLT TO ACCESS CONTENT.

YOU WILL ALSO NEED A NAKI ACCOUNT.

- Plug included power adapter into a 110/220v power source.
- Press the ON/OFF button to power on BOLT. The Welcome screen will invite you to connect your device to get started. Press START.
- Locate and select your WiFi network.
- Enter your WiFi password using the on screen keyboard and press CONNECT.
- You will be asked to enter your account details, email address and password.
- You will then be asked to name your device then press CONNECT DEVICE.

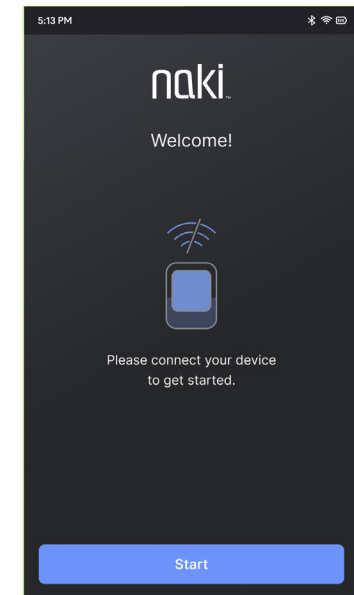

Welcome

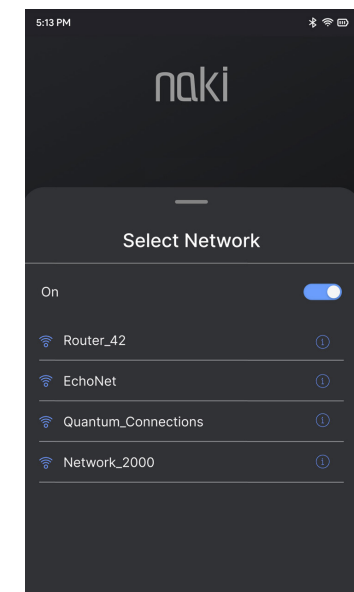

Select Network

3.2 Naki Home

You are now ready to listen to all the Naki content on your BOLT.

Using the touchscreen, navigate and select the content you require.

1 Featured content

2 Currently playing track

3 HOME icon

4 Browse / search for content


5 Stories

6 Music

7 Settings

8 Play / pause or cancel track playback


9 Notifications

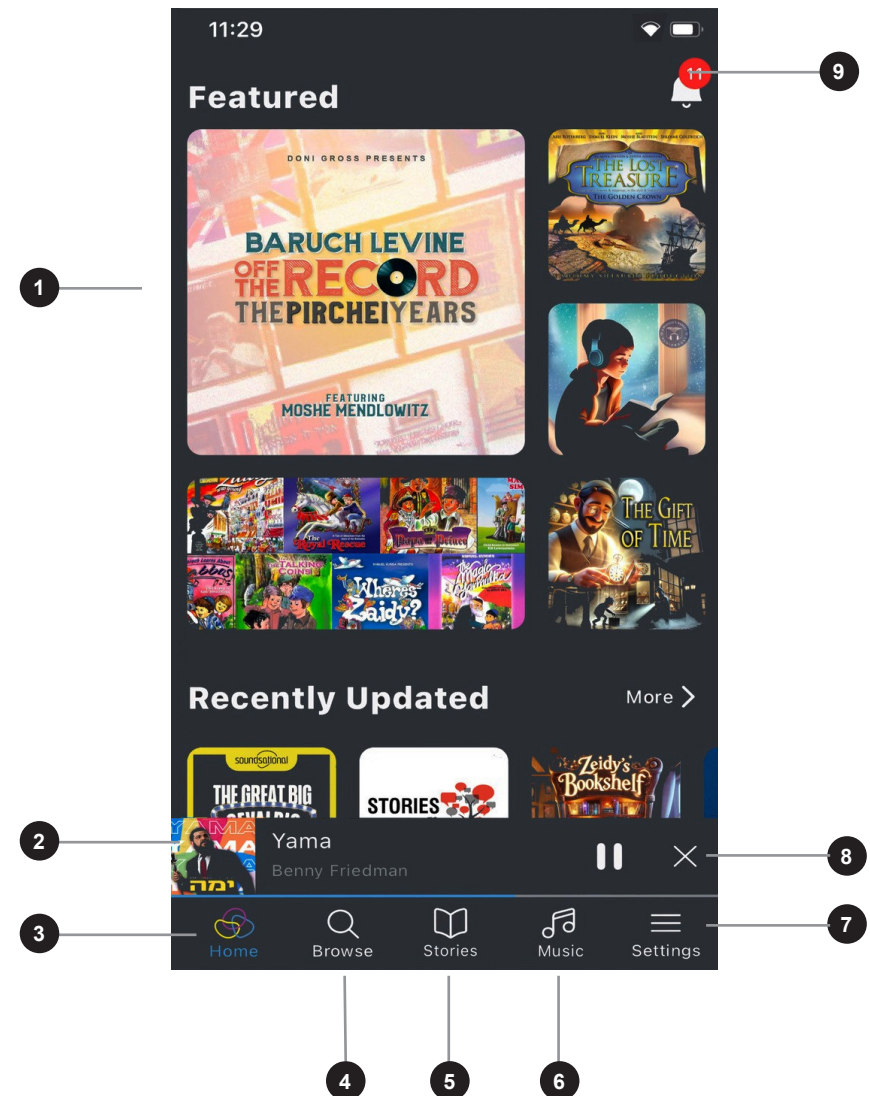


4.0 Settings

Press SETTINGS at the bottom of the screen to access the following.

- **Device Settings** - customise your settings (see page 13)
- **Programmable Buttons** - customise the short cut buttons (see page 18)
- **Account** - view your account details and change your password.
- **Naki Premium** - view your Naki Premium Subscription details.
- **My Playlists** - Manage your custom playlists and create new ones (see page 20)
- **Refresh Account** - update account details.
- **Device name**
- **Software version**

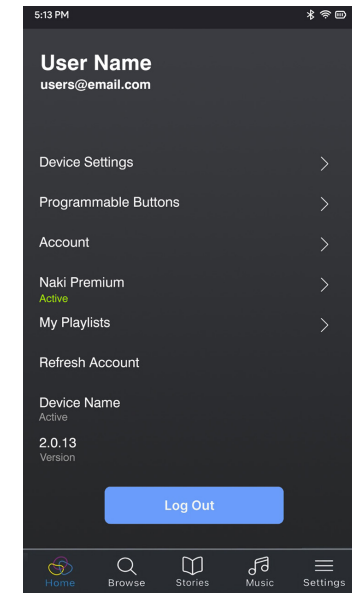

Settings

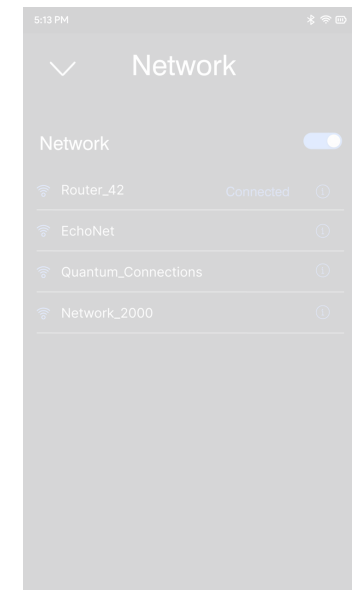

My Playlists


5.0 Device Settings

You can customize your BOLT in the following settings.


- **Network** - view and change networks.
- **Bluetooth** - pair to a device.
- **Font Size** - adjust the font size.
- **Brightness** - change the screen brightness level.
- **Bluetooth Receive** - use Bolt as a speaker (see page 11).
- **System Info and Updates** - software version an updates.
- **Time Zone** - view Time Zone info.
- **Screen Off** - adjust screen sleep.

5.1 Network

Check which network you are connected to and other available networks.

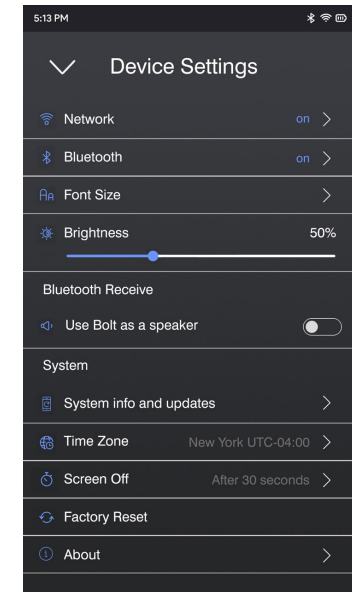

Device Settings

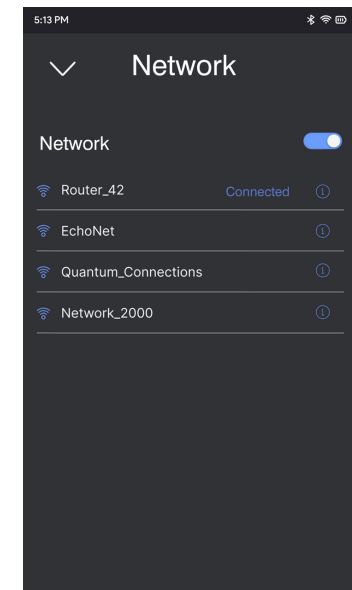

Bluetooth

5.2 Bluetooth


You can connect external Bluetooth devices to BOLT, for example Bluetooth headphones.

In Device Settings, select BLUETOOTH and slide the toggle switch to the right.

Available devices will be listed so ensure the device you wish to pair is in pairing mode.

Select the required device and BOLT will pair with it.

Once a device has been successfully paired, it will appear in a **Saved Devices** list.

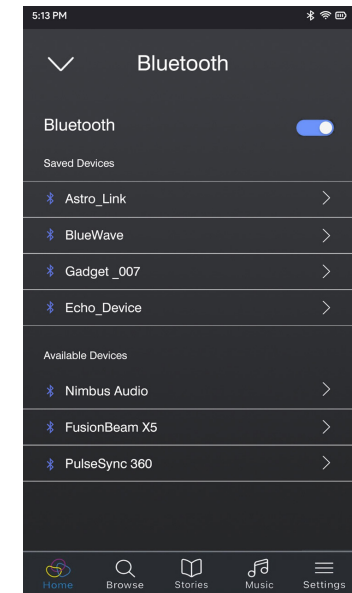


Bluetooth

5.3 Font Size

You can adjust the font size from Tiny to Large.

The default font size is Normal

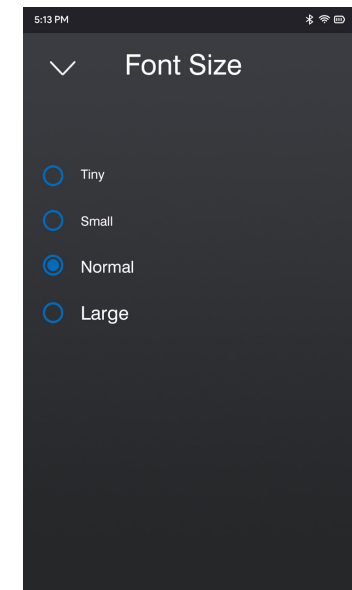

Font Size

5.4 Brightness

To adjust the brightness of the screen simply adjust the slider to your preferred level.

The default brightness level is 50%.

5.5 Bluetooth Receive

You can use BOLT as a bluetooth speaker.

To enable this feature, in Device Settings, slide the toggle switch to the right.

'Bluetooth Starting' will be displayed.

Wait until Look for 'Naki Bolt.'

In Bluetooth settings on the device you wish to connect to BOLT, 'Naki Bolt' is displayed.


Select this and you will be asked on your device to pair.

Select PAIR and your device will connect to BOLT.


A Bluetooth screen will appear on your BOLT.

There is no album art feature.

To stop playing to your speaker, simply press EXIT SPEAKER MODE and you will return to the Device Settings screen.

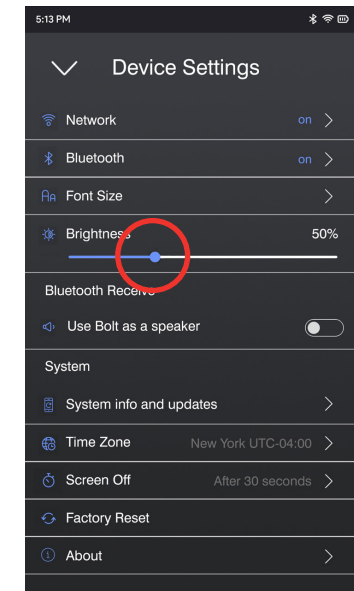


Adjust the brightness

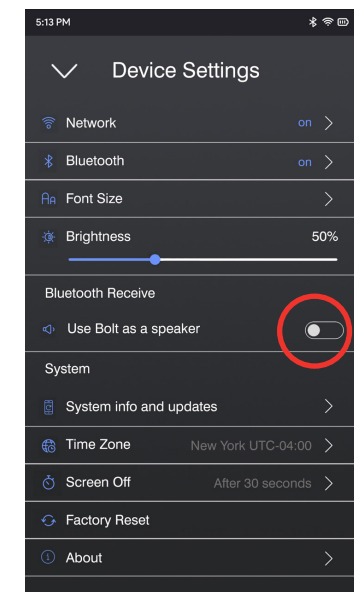

Slide to enter Bluetooth receive mode

5.6 System App Updates

Check here for updates and install the latest version of the Naki software.

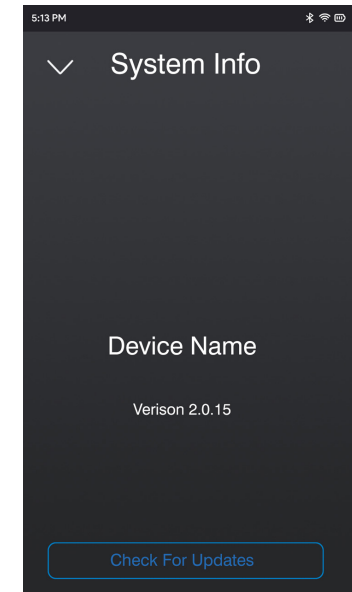


System Info

5.7 Time Zone

You can change the time zone. Simply use the search tool and select the zone you would like.

The default time zone is New York

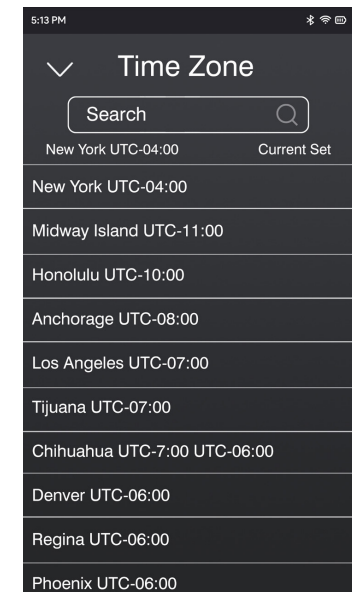

Time Zone


5.8 Screen Off

You can change the amount of time the screen stays on. The longer it stays on the quicker the battery will get used.

You can set the screen off time from 30 seconds to Never.

The default is 30 seconds.

Remember simply double tap the screen for the screen to come back on.

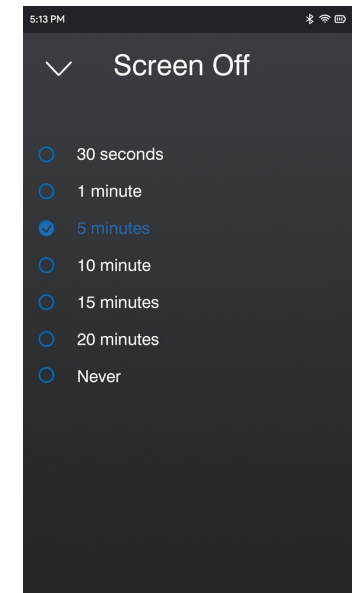


Screen Off

5.9 Factory Reset

You can reset your device to Factory Settings. You will lose all your data and settings if you choose to do this.

5.10 About

You can find out here about your Bolt including the serial number

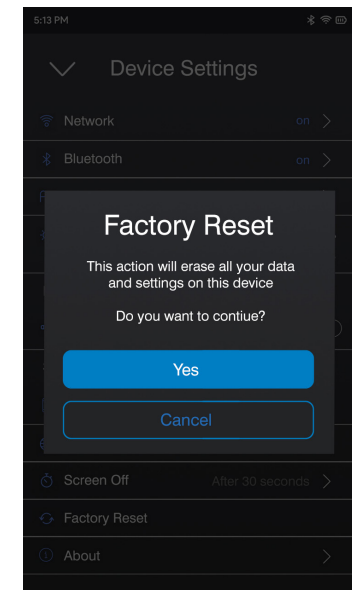


Factory Reset

6.0 Programmable Buttons


You can assign actions for the two programmable buttons on the device.

Functions can be assigned either as a Press or a Hold.

- Open the home screen
- Lock Device
- Open my playlists
- Open device settings
- Play/Pause audio
- Fast forward and rewind audio
- None - no function has been assigned.

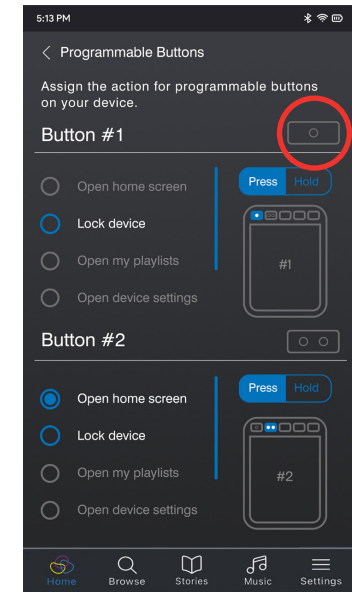

Button 1

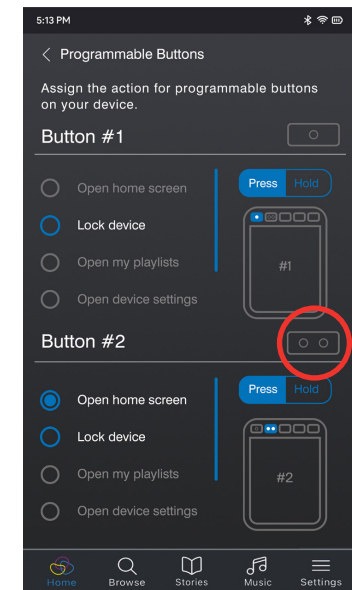

Button 2

7.0 Now Playing Screen

When playing content, the screen has the following functionality.

1 Hide Playing Screen

2 Track length info including slider to move forward / back through the track

3 Skip back 15 seconds

4 Track listing

5 Previous track


6 Play / Pause track

7 Next track

8 Shuffle

9 Fast forward 15 seconds

10 Add to playlist, View story, View selection.

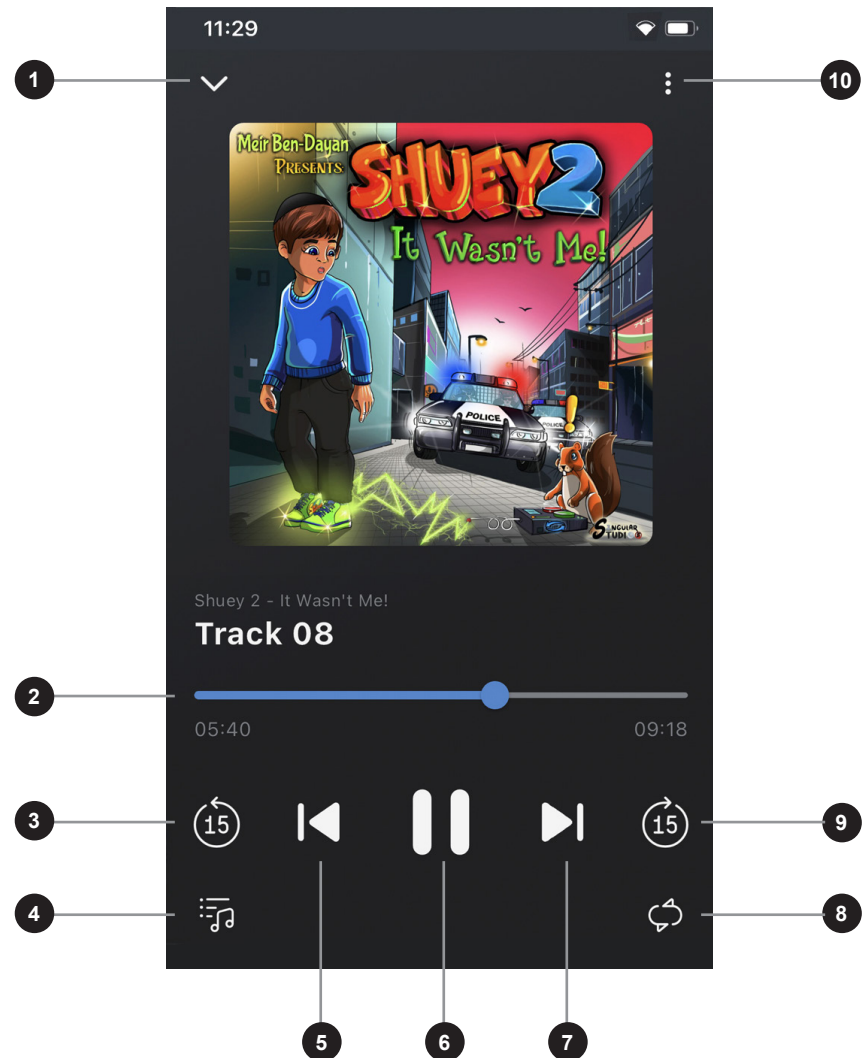


8. Playlists


You can create your own playlists and add tracks using your Bolt.

Create and name your playlist.

Your new playlist will appear on the HOME page.

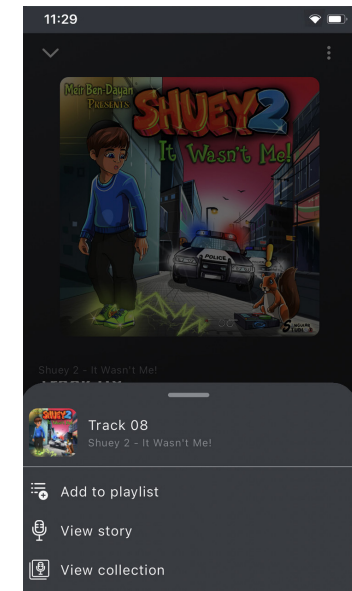

Create a playlist

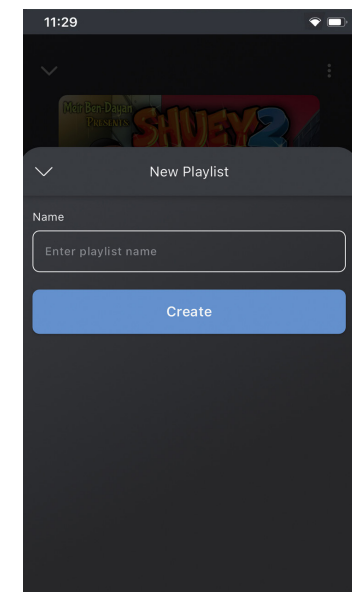

Factory Reset

9. Troubleshooting

10. Warranty

11. Technical Specifications

Model

Naki BOLT

FCC ID: YMT-NB600

Connectivity

Measurements

Physical Connectivity

DC

3.5mm Headphone Jack

Specifications are subject to change without notice.

Physical Interface

Speakers

Power Supply

Battery

